



Stonex Cube-a
Field Software
User Manual



cube-a
4.2

Contents

Contents	1
1 Software introduction	4
2 Cube-a installation and uninstallation	5
2.1 Cube-a Installation.....	5
2.2 Cube-a First Run	6
2.3 Cube-a Uninstallation	8
3 Software Introduction - Project	10
3.1 Project Manager	11
3.2 View Data	13
3.3 File Manager	16
3.4 Backup File Import	17
3.5 Export Data	18
3.6 Import of Data	23
3.7 Import of Raster Images	25
3.8 Project Details.....	27
3.9 Feature Codes.....	28
3.10 Share by WiFi	29
4 Software introduction - Device.....	30
4.1 GPS Status.....	31
4.2 Data Link Status	37
4.3 Communication Settings	39
4.4 Working mode	43
4.4.1 Communication	44
4.4.2 Static Mode	45
4.4.3 Base Mode.....	49
4.4.4 Rover mode.....	52
4.4.5 Preset Configurations	55
4.5 Data Link Settings	56
4.5.1 Internal Network	58
4.5.2 Internal Radio	61
4.5.3 External Radio	62
4.5.4 Phone Network.....	62
4.6 Information.....	63
4.7 RTK Reset	64
4.8 Register	64

4.9	Distance meter	65
5	Software introduction – Survey	67
5.1	Point Survey	68
5.2	Point Stakeout.....	105
5.2.1	Photo and Sketch.....	113
5.3	Line Stakeout	115
5.4	Elevation Control	121
5.5	Geophysical Stakeout	122
5.6	View in Google Earth	122
6	Software introduction – Configure.....	123
6.1	Coordinate System	123
6.2	Record Settings.....	128
6.3	Display Settings	128
6.4	System Settings.....	129
6.5	Survey Settings.....	130
6.6	Layers Settings	131
6.7	Administration.....	132
7	Software introduction - Calibrate.....	133
7.1	Site Calibration.....	133
7.2	Calibrate Point.....	139
7.3	Calibrate Sensor.....	144
8	Software introduction – Tools.....	155
8.1	Points Library	156
8.2	Entities list.....	159
8.3	Coordinates Converter	160
8.4	Angles Converter.....	162
8.5	Perimeter and area	163
8.6	COGO Calculations	164
8.6.1	Azimuth and Range.....	165
8.6.2	Angle offset.....	166
8.6.3	Distance	167
8.6.4	Two Lines Angle	168
8.6.5	2 Alignments Intersection.....	169
8.6.6	2 Points 2 Distances.....	170
8.6.7	2 Points 2 Angles	171
8.6.8	2 points Distance and Angle.....	172
8.6.9	Polar from North.....	173

8.7	Calculator	173
8.8	Version and Update.....	174

1 Software introduction

Cube-a is GNSS surveying and mapping software developed by Stonex Srl, designed and implemented for the Android platform.

Thanks to the flexibility of the Android environment, it has been possible to create a simple and intuitive user interface, which makes users ready to face any job, saving time and increasing productivity.

The main interface window is divided into the main menu bar and the submenu bar. The main menu bar contains all the menu commands, those are: Project, Tools, Survey, Configure, Calibrate and Device. In this manual we will introduce in detail the functions present in the menu (Figure 1.1).

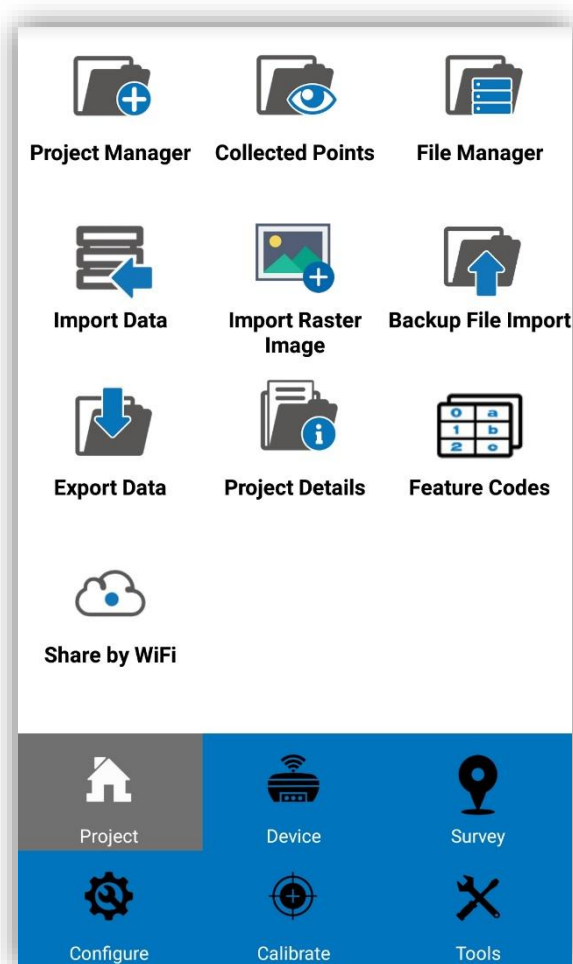


Figure 1.1

2 Cube-a installation and uninstallation

This chapter describes the installation and uninstallation instructions for **Cube-a** Software.

2.1 Cube-a Installation

1. Please download the Android **Cube-a** installation package (*.apk) and copy the installation package to your Android device.
2. Please find the **Cube-a** installation package (*.apk) in the "Files" of the Android device. Click the **Cube-a** installation package, there will pop-up the installation page. Then click "Install" to install the **Cube-a** software, if the installation is successful, there will be the prompt page as shown in Figure 2.1.

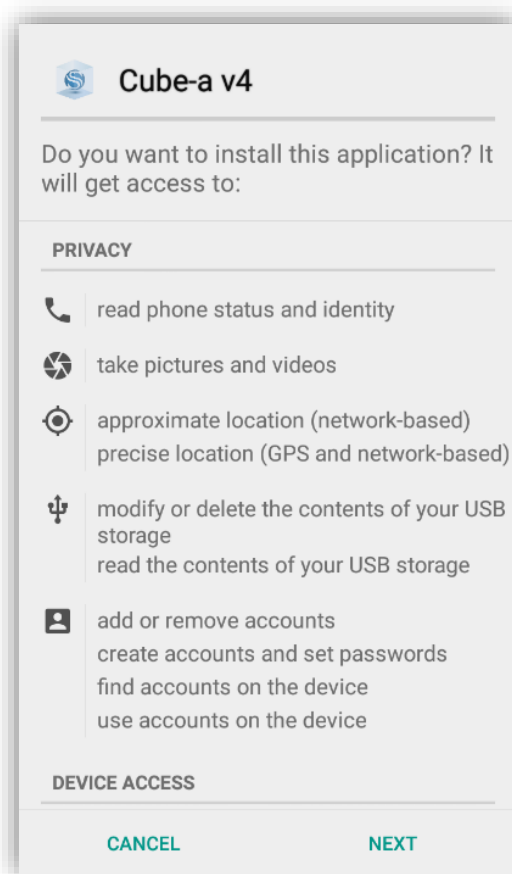


Figure 2.1

2.2 Cube-a First Run

The software must be registered and unlocked at its first run. To unlock it, you need to know which is your personal and unique *Purchase Code ID*.

The Purchase Code ID is in a form like STX000000000ABC and you should have got it by e-mail or printed. The software cannot be unlocked without entering the correct Purchase Code.

This operation must be done while your device (tablet or phone) has an active Internet connection.

To register the software (Figure 2.2):

1. Launch the application as usual.
2. Read carefully the shown End User License Agreement (EULA).
3. Press the *Accept* button if you agree to be bound by the license agreement. Otherwise press the *Decline* button to terminate the application.
4. Fill out the Software Activation form.
5. Press *OK* to activate the software.

The above steps must be followed at each time the application is started and until the software has been successfully activated.


The Purchase Code, that must be entered in the first field of the form, is the proof of purchase required to identify and validate your software license.

To validate your software license and the authenticity of the Purchase Code itself the program will connect to our servers: at that time the Purchase Code is verified and, if all goes well, the program will get back the authorization to activate the software.

Notice that you cannot reuse the Purchase Code to unlock a copy of the program that has been installed onto another device. For that you will need to buy an additional license (thus, you will get another different Purchase Code).

In case of any problems during the activation of the program please contact us at cubesuite@stonex.it.

EULA



Stonex Cube-a
Copyright (c) 2014-2017 Stonex Srl

END USER LICENSE AGREEMENT

IMPORTANT: PLEASE READ THIS LICENSE CAREFULLY BEFORE USING THIS SOFTWARE.

1. LICENSE

By receiving, opening the file package containing Stonex Cube-a ("Software"), and/or using this Software, you agree that this End User License Agreement (EULA) is a legally binding and valid contract and agree to be bound by it. You agree to abide by the intellectual property laws and all of the terms and conditions of this Agreement.
Stonex Srl reserves the right to amend this

Decline
Accept

🔒 Software Activation 👤

Please fill out the data form then push the OK button to register and activate the application.

All fields marked with an asterisk (*) are mandatory.
An active Internet connection is required.

Purchase code (*)

STX000000000000ABC

Name and surname (*)

name surname

Company (*)

company

Address

address (street, house number)

address (street code city province)

Country (*)

United States

e-Mail (*)

e-Mail

Cancel
OK

Figure 2.2

2.3 Cube-a Uninstallation

There are many ways to uninstall the software on the Android device. Here we mainly introduce two methods: press the Cube-a icon on the desktop and drag it to the “uninstall” option box, there will pop-up a dialog box “Uninstall Cube-a?” shown as the Figure 2.3. Then click “uninstall” to uninstall the Cube-a software.

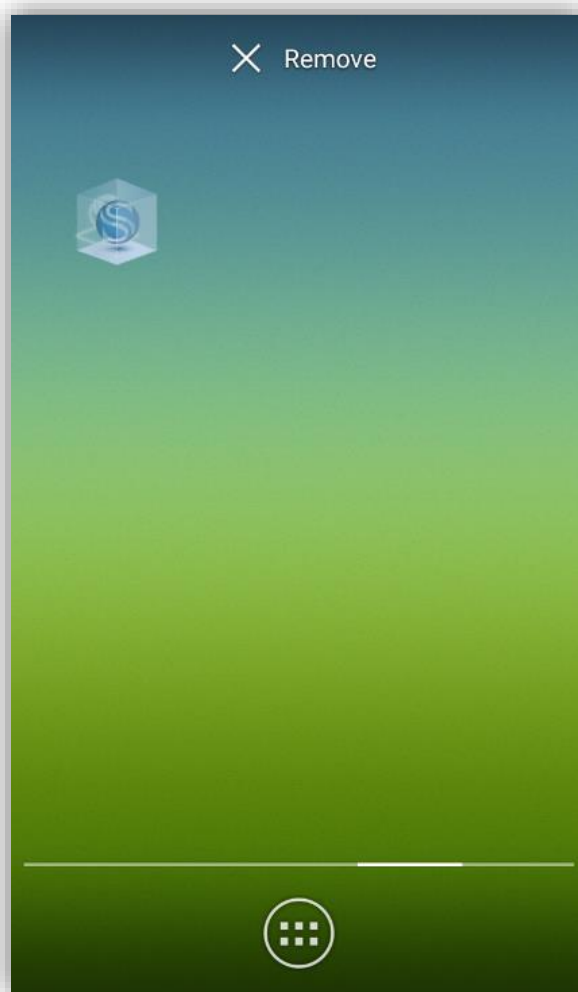


Figure 2.3

Click the “Settings” and then “Apps” to find the “**Cube-a**” in the submenu. Click the “**Cube-a**”, the system will show the **Cube-a** information page. Then click the “uninstall” to enter the

Cube-a uninstallation page. Click the “uninstall” to uninstall the **Cube-a** software (Figure 2.4).

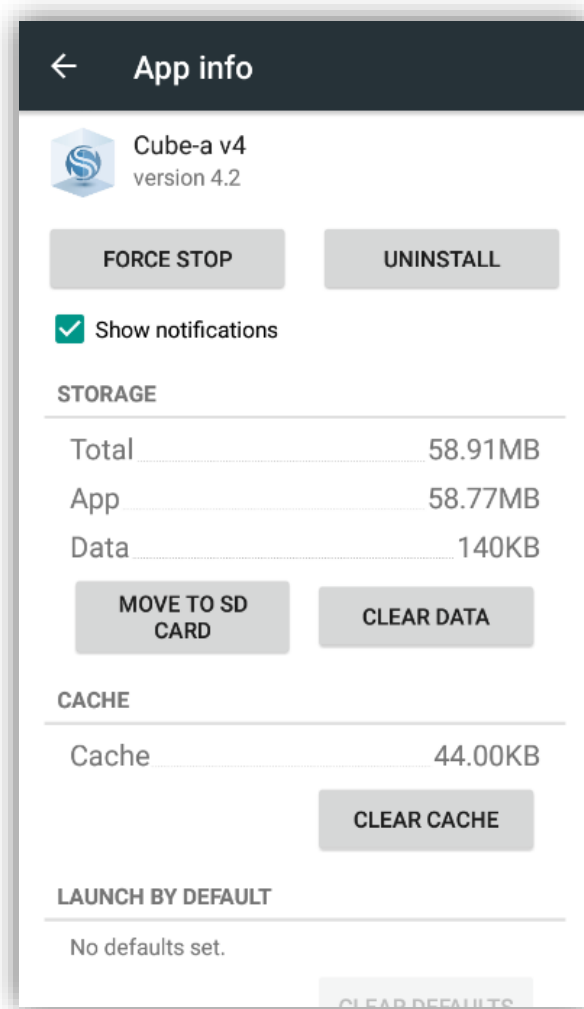


Figure 2.4

3 Software Introduction - Project

In the main interface of the software, click “Project” and the submenu shown in Figure 3.1 will appear. The project submenu contains nine items, which are *Project Manager*, *View Data*, *File manager*, *Import Data*, *Import Raster Image*, *Backup File Import*, *Export Data*, *Project Details* and *Feature Codes*.

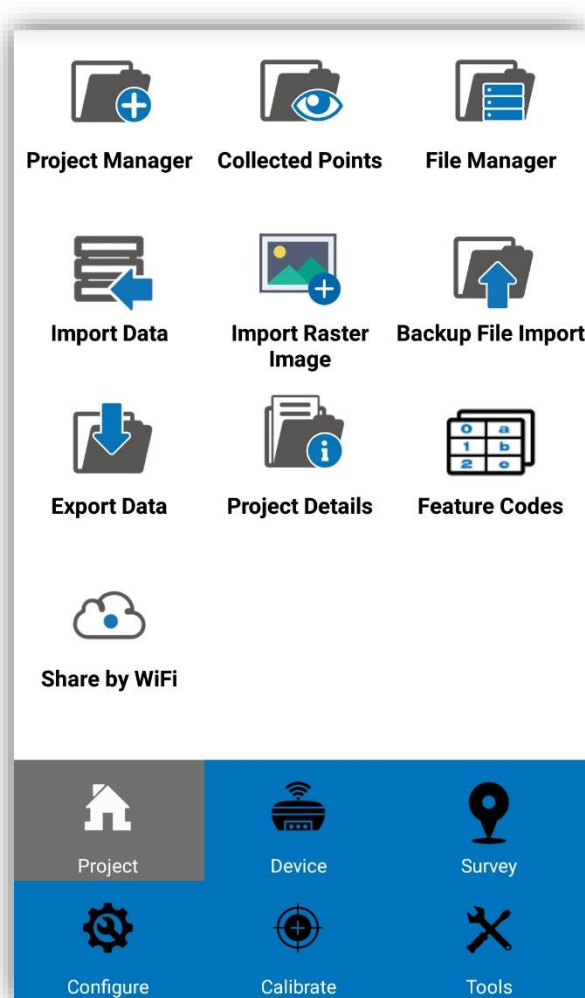


Figure 3.1

Cube-a stores all the data in the form of a set of files called *Project*. **Cube-a** remembers the last used project and reopens automatically that project at the next run. Under normal circumstances, each time you begin to measure an area, you should create a project file matched with the pre-construction engineering, and the file name should be “*.GSW”. After

the project has been created, the software will create a file in the device storage disk and the file name is same of the project, all data will be saved in this file.

3.1 Project Manager

Click "Project Manage" in the *Project* submenu: you will get to the page shown in Figure 3.2.

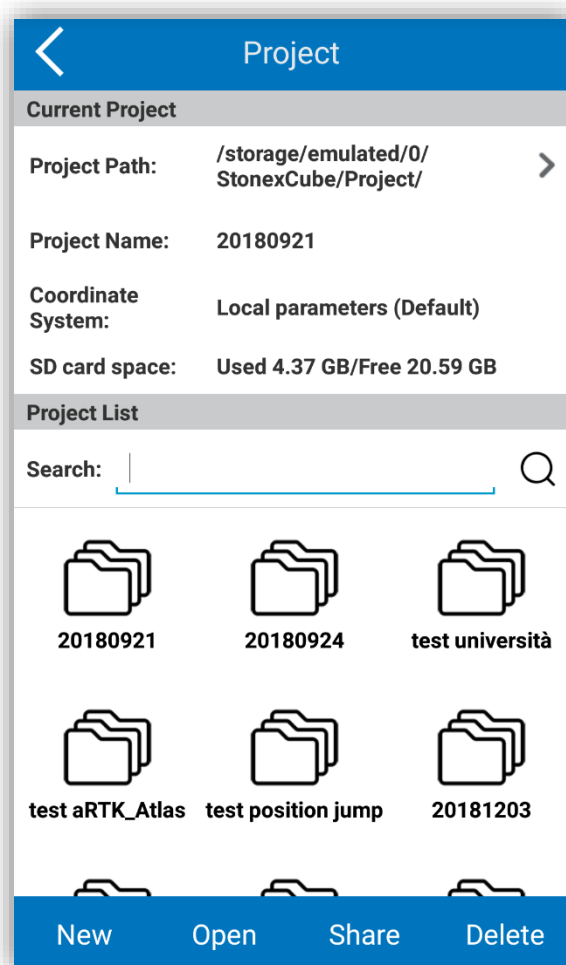



Figure 3.2

Click "New" at the bottom left to create a new project. It will open a page of a new project as in Figure 3.3, click "ok" after entering the project name (mandatory), the device and the notes (optional). Then you will see a request, "Keeping the current coordinate system?". If

you select "OK", the coordinate system parameters of the new project are the same as the current project settings. If you select "Cancel", you can select the coordinate system parameters manually or you can apply the local parameters. Click "OK" and the new project will set the default parameters for the current job and return to the main software interface.

If you want to edit a project file, select the project from the list, or search using the "Search:" bar, by typing the desired name (Figure 3.2). Then click "Open", this project will be opened and once modified will keep the changes during the subsequent openings.

If you click "Delete", the selected project will be deleted.

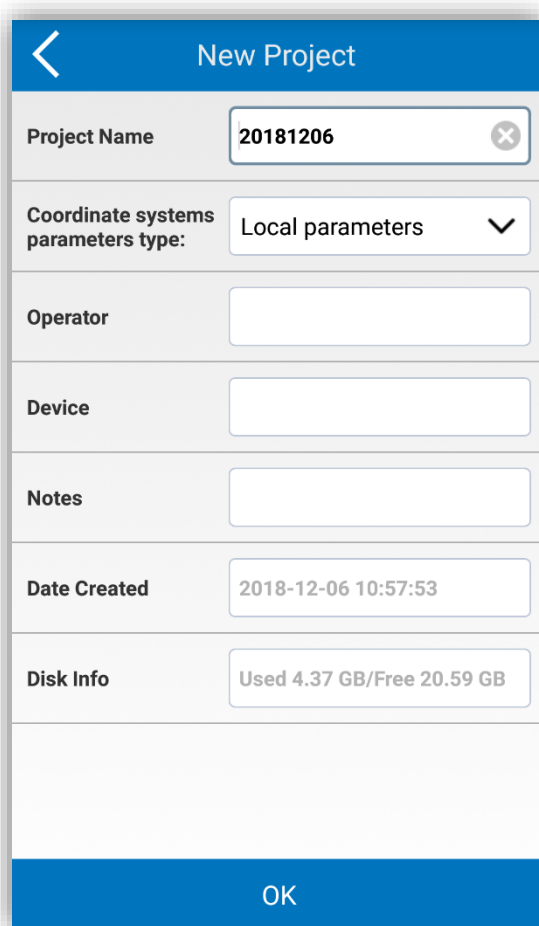


The screenshot shows a mobile application interface for creating a new project. The title bar is blue with a white back arrow and the text "New Project". Below the title bar, there are several input fields and a dropdown menu. The "Project Name" field contains the text "20181206" and has a small 'x' icon to its right. The "Coordinate systems parameters type:" dropdown menu is set to "Local parameters" with a downward arrow. The "Operator", "Device", and "Notes" fields are empty. The "Date Created" field shows the timestamp "2018-12-06 10:57:53". The "Disk Info" field shows "Used 4.37 GB/Free 20.59 GB". At the bottom of the screen, there is a blue bar with the text "OK" in white.

Figure 3.3

3.2 View Data

Click on "Project" and then on "View data", the page shown in Figure 3.4 will appear. The user can view the data of the points in the "Survey Points Library", for example the planimetric coordinates (North, East, Height), the latitude and longitude coordinates and the height with respect to the ellipsoid, the progressive sequence of the points detected, the point number and other information. If there are many points saved in the library, users can search for a specific point by entering the name of the point or the code, to quickly find the point of interest using the "Search:" function.

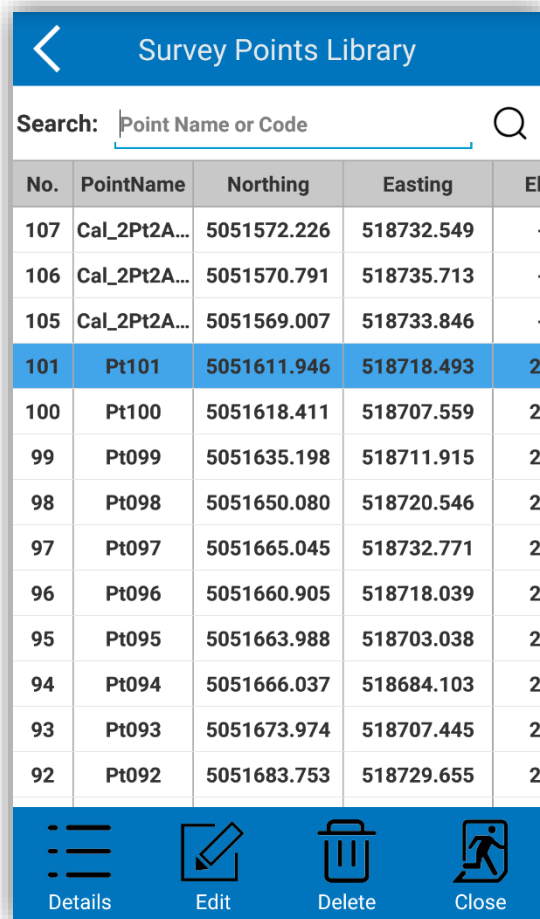


No.	PointName	Northing	Easting	Elk
107	Cal_2Pt2A...	5051572.226	518732.549	-
106	Cal_2Pt2A...	5051570.791	518735.713	-
105	Cal_2Pt2A...	5051569.007	518733.846	-
101	Pt101	5051611.946	518718.493	22
100	Pt100	5051618.411	518707.559	22
99	Pt099	5051635.198	518711.915	22
98	Pt098	5051650.080	518720.546	22
97	Pt097	5051665.045	518732.771	22
96	Pt096	5051660.905	518718.039	22
95	Pt095	5051663.988	518703.038	22
94	Pt094	5051666.037	518684.103	22
93	Pt093	5051673.974	518707.445	22
92	Pt092	5051683.753	518729.655	22

Figure 3.4

Select any point in the library and click "Details" to display the page shown in Figure 3.5. You can view the detailed information of this point, the latitude and longitude coordinates, the

type of point, the storage mode, the number of satellites, HRMS, VRMS, PDOP, HDOP, VDOP, antenna height, base information and so on.

Selecting any point from the library and clicking "Edit", it will be possible to view the page shown in Figure 3.6. From this screen you can change the name, the code and the antenna (measured height, type of measurement, antenna height) of the selected point.

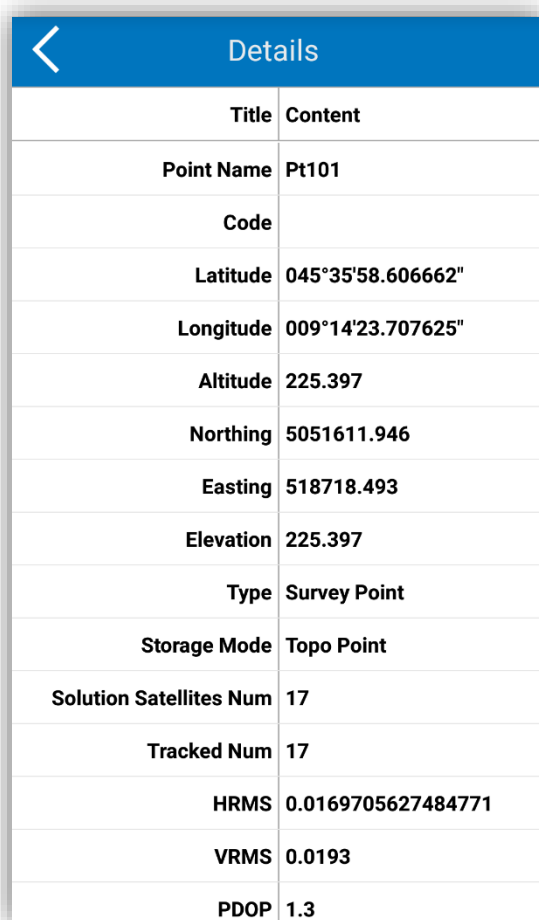


Title	Content
Point Name	Pt101
Code	
Latitude	045°35'58.606662"
Longitude	009°14'23.707625"
Altitude	225.397
Northing	5051611.946
Easting	518718.493
Elevation	225.397
Type	Survey Point
Storage Mode	Topo Point
Solution Satellites Num	17
Tracked Num	17
HRMS	0.0169705627484771
VRMS	0.0193
PDOP	1.3

Figure 3.5

From the same screen, select the Photo and Sketch function to associate an image with the point. This function will be explained in detail below in this manual.

If you click the "Delete" button after selecting the point, this point will be deleted from the "Survey Points Library".

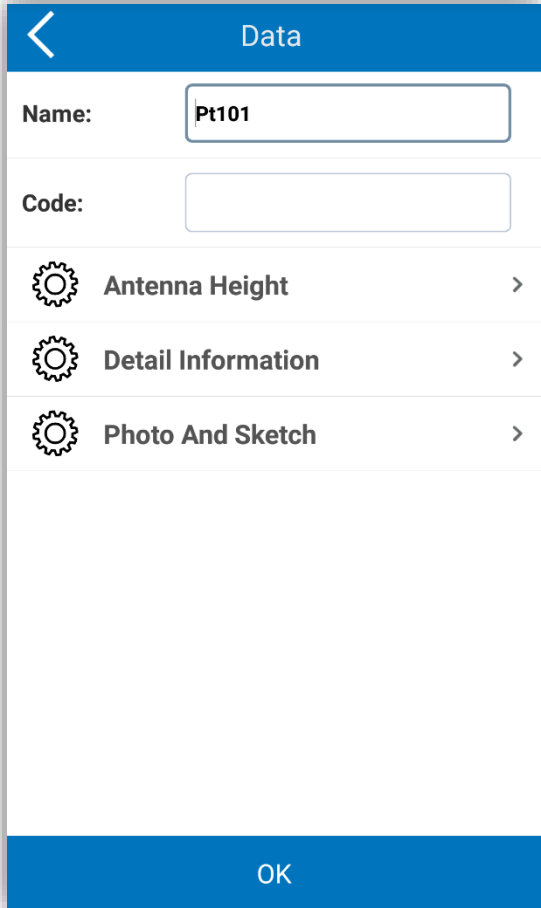

← Data

Name:

Code:

- ⚙ Antenna Height >
- ⚙ Detail Information >
- ⚙ Photo And Sketch >

OK

Figure 3.6

3.3 File Manager

If the data in a project is too large or if you want to split the data into different filedbooks, click "File Manager" to display the page shown in Figure 3.7. Click "New" in the upper right corner to create a new file to store the surveying data and this new file will be the default file to store the data, the file extension will be *. PD. The new document belongs to the current project.

If the project consists of several files, select a data file in the data list, click "Open" to change to a different data file or click "Delete" to delete a data file.

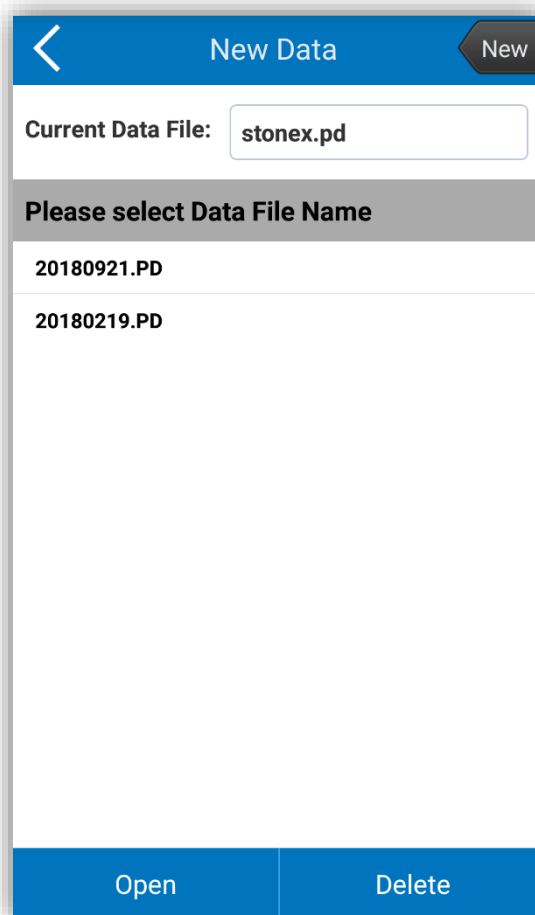


Figure 3.7

3.4 Backup File Import

The backup file is stored in the RTK receiver and when the project stored in the mobile device is lost or damaged, you can restore the data from the backup file.

First, connect the RTK receiver to the PC via a 7-pin cable and copy the backup data to the PC. Then, connect the mobile device to the PC and copy the backup data to the mobile device.

Finally, click "Backup File Import" and "Open Backup File" to select the file to import Figure 3.8. Enter the file name and click "OK" to open the data file.

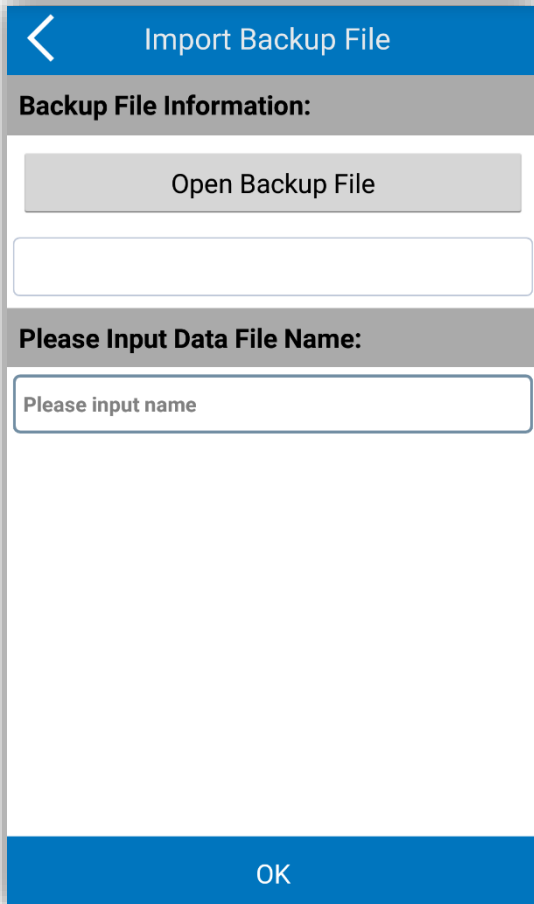


Figure 3.8

3.5 Export Data

Click on "Project" and then on "Export Data", you will see a screen as in Figure 3.9. The export of the data file is used to export the measurement data file, in the format in which the user makes the maps.

You can export data in the specified format or in a custom format. When exporting the data file, enter the file name, select the export path, the data file and the file format. The possible formats in which you can export a file are many, from the custom format to the AutoCAD file format (DXF), from the Google Earth file format (.kml) to the Cass format to the raw data (.csv) and so on. Click "Export" to complete the action.

The function "Share after exporting", if selected will give access to a list of applications in the device which enables the sharing of contents.

Click "Options" (Figure 3.9) to filter the type of exportable coordinate points. The types of points available are: Auxiliary Point, Control Point, Calculate Point, Screen Poin, Survey Point, Manual Point, Stake Point.

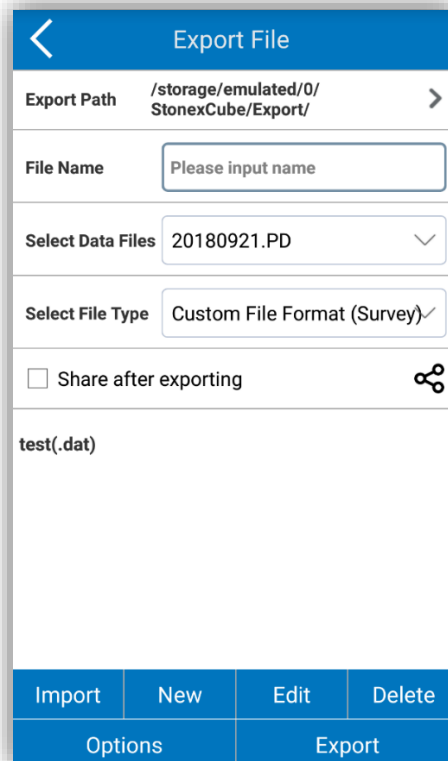


Figure 3.9

Here are the possible selections concerning the type of file:

1. Custom file format settings

If you select the "custom format" and then click the "New" button, you can create a new export file format as shown in Figure 3.10.

Set the field delimiter, file extension, angle format; it is also possible to create a header with the fields selected for the export file. To select the field to export, select an item on the left and click "Add"; or click "Delete" to delete additional content.

Click "OK" to complete the custom export configuration (it is always possible to modify and/or delete the file extension created).


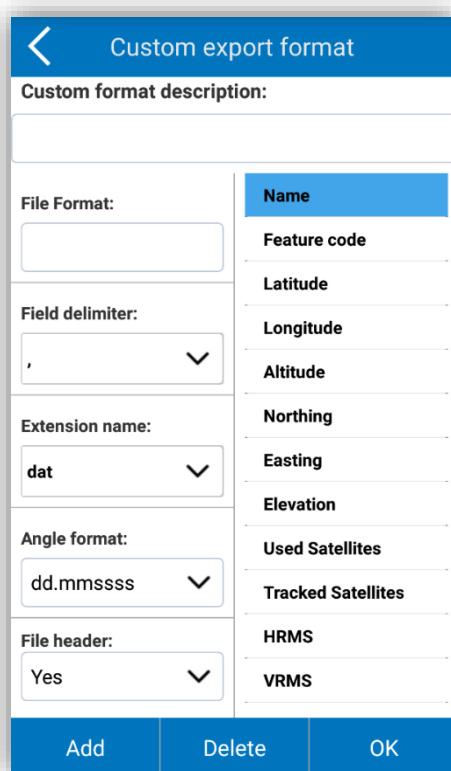


Figure 3.10

2. RW5 format settings

If you intend to export in RW5 format, you will need to set some additional specifications, as shown in Figure 3.11. You will need to set the job name, date and time and establish the linear and angular measurement unit (this setting will not change the format of the geographic coordinates).

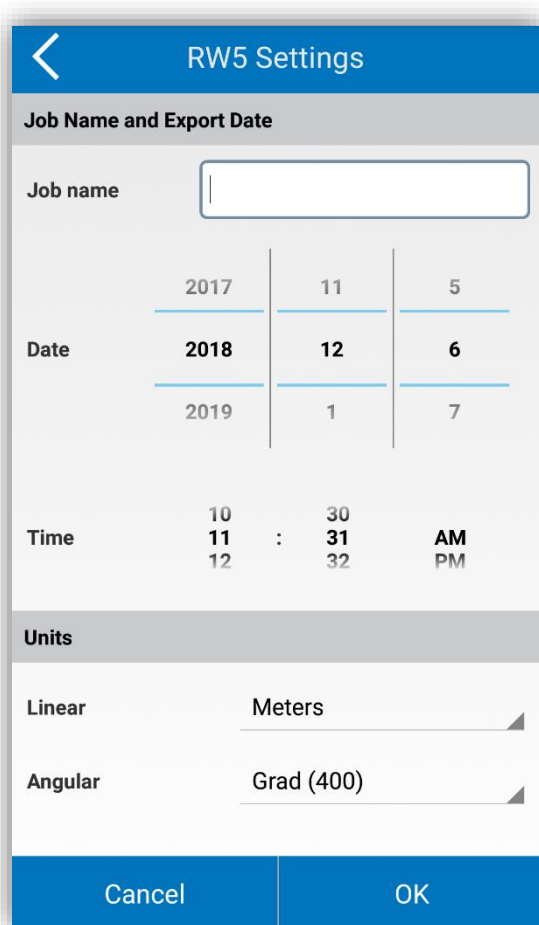

RW5 Settings

Job Name and Export Date

Job name

Date

2017	11	5
2018	12	6
2019	1	7

Time

10	30	AM
11	31	
12	32	

Units

Linear

Angular

Cancel OK


Figure 3.11

3. Pregeo DAT format settings (Italy)

To export to Pregeo (dat), the official format of the Italian land registry, it will be necessary to set some additional information as shown in Figures 3.12 and Figures 3.13 (in Italian language only).

The information to be included is: date of survey, protocol number, name and province of the surveyor, cadastral identification (province, city, sheet and map), average elevation and average east, instrument accuracy (linear and angular), type of update and any additional notes.

The last option at the bottom of the page allows you to "merge" the baselines that refer to multiple GNSS baselines, so that they all refer to a single reference GNSS base (selectable). This option is useful for overcoming some limitations of the Pregeo program in the management of surveys with multiple bases.

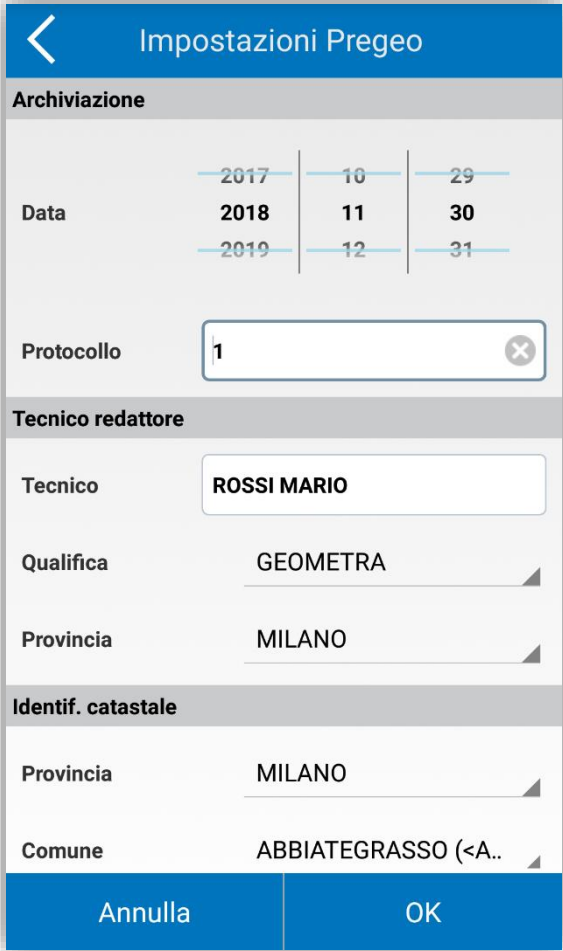

Impostazioni Pregeo

Archiviazione

	2017	10	29
Data	2018	11	30
	2019	12	31

Protocollo:

Tecnico redattore

Tecnico:

Qualifica:

Provincia:

Identif. catastale

Provincia:

Comune:

Annulla OK

Figure 3.12



Impostazioni Pregeo

Inquadramento

Quota media

Est media

Precisioni

Lineare (mm)

Angolare (cc)

Tipo di aggiornamento

Tipo

Nota

Nota

Basi GNSS

Unisci basi GNSS

Annulla OK

Figure 3.13

3.6 Import of Data

Click "Project" and then "Import Data" to enter the importing function. A page like the one shown in Figure 3.14 will open. This command allows you to import points in coordinates (grid coordinates or geographic/ geocentric coordinates).

Choose the format from the File Formats list and click "Open data file" to choose the file.

The path of the chosen file will be shown below the list of file formats and below it the preview of the content you want to import will be displayed. This preview allows, if necessary, to verify that the content of the file contains compatible data.

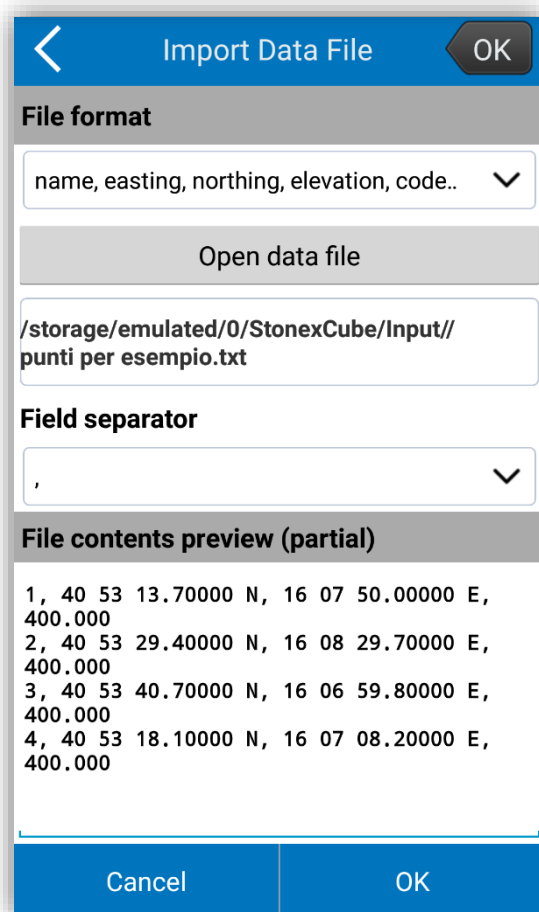


Figure 3.14

Click "OK" to proceed with the import or click "Cancel" to cancel.

The imported points will be registered as "Imported Points", in this way they will not be displayed in the list of surveyed points (i.e. in the list displayed by the "View data" command). To access the imported points, open the "Point Library" (where both the imported points and the surveyed points are collected) after clicking on "Tools" from the main menu. The imported points will be shown and eventually used when the stakeout command is started.

3.7 Import of Raster Images

Click "Project" and then click "Import Raster Image" to import a georeferenced raster image. The program will open a page like the one shown in Figure 3.15. Click the "Open Raster Image" button to choose a raster file to upload.

The program supports raster images stored in one of the following formats:

- PNG (Portable Network Graphics) - data lossless compression
- JPG (Joint Photographic Experts Group) - compressed, not without losses
- Tagged Image File Format (TIF) - usually compressed, usually without loss of data



Figure 3.15

Having a raster image is not enough to have a georeferentiation: the raster image must have a "twin" file that stores the georeferencing parameters. This file is called "World File" and must be created on a PC using software that manages the image georeferencing. In short, the following table shows which type of World file should be stored in the same folder that contains the raster image to be imported:

Raster format	World File Format
*.PNG	*.PGW
*.JPG	*.JGW
*.TIF	*.TFW

Limitations

Cube-a works on Android and must respect its limits on memory allocation. One of these limitations is that any application does not have to allocate large blocks of memory and if an application does so, it must release those blocks of memory as soon as possible.


From Android developer documents: "To allow multiple running processes, Android sets a hard limit for the assigned heap size for each app. The exact limit of the heap size varies between devices based on the amount of RAM available in the device. If your app has reached heap capacity and tries to allocate more memory, the system will generate an out of memory error. "

All of this means that you need to be careful when trying to load raster images. Although a raster image may look small (a few megabytes), the same may not be true for the data that the image contains. Also remember that usually raster image files are compressed and that Cube-a must decompress them before displaying them; this operation may require more memory than the Android operating system can provide.

Typically, an image of W x H in pixels (width x height) requires a free amount of memory equal to: $W \times H \times 3$ bytes. Example: a picture of 5 mega pixels (2560 x 1920) occupies, after decompression, 14745600 bytes or 14 megabytes.

3.8 Project Details

Click on "Project" and then on "Project details" to view and edit information about the current project. In Figure 3.16. you can see the screen with the information you can change. Click "OK" to save the changes and return to the main project interface.

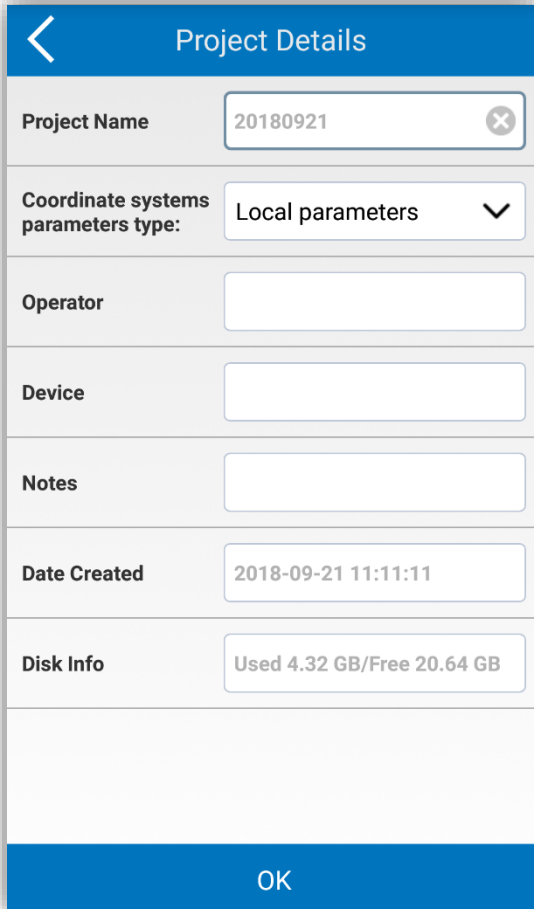

Project Details	
Project Name	20180921
Coordinate systems parameters type:	Local parameters
Operator	
Device	
Notes	
Date Created	2018-09-21 11:11:11
Disk Info	Used 4.32 GB/Free 20.64 GB
OK	

Figure 3.16

3.9 Feature Codes

Click on "Project" and then on "Feature Codes" to view and edit the point codes (Figure 3.17). Thanks to this function, code libraries can be selected so that they can be viewed and modified, new ones can be created or deleted, pressing OK confirms the selection made.

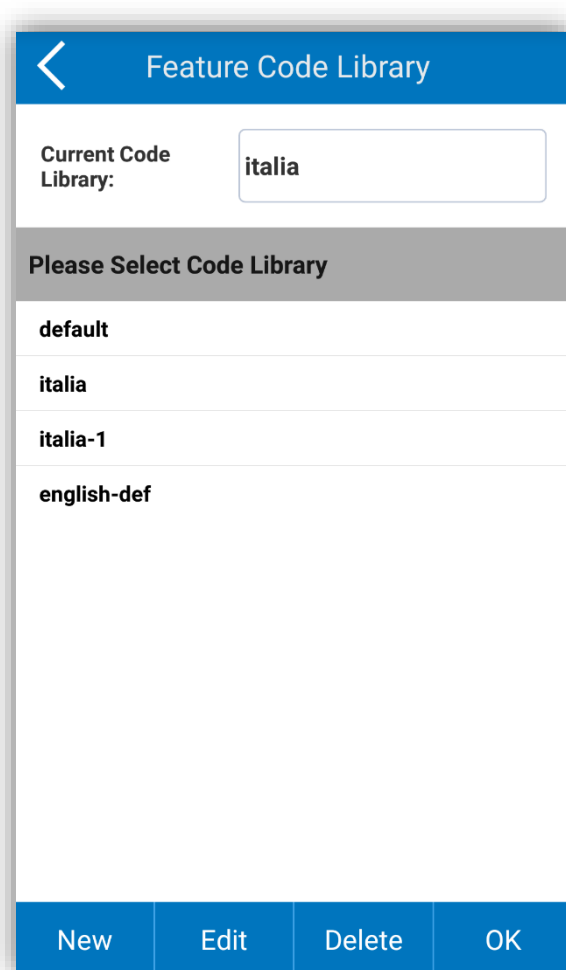


Figure 3.17

3.10 Share by WiFi

Clicking on "Project" and on "Share via WiFi", you can access the screen in Figure 3.18, useful for sharing the project (or projects). This function starts an FTP server on the Android device. On the client (your PC) you can use any FTP client (such as FileZilla and others) to connect to the Android device. Enter the port, user, password and click Start Service (button below); the button will change appearance by displaying the caption Stop Service, the connection will then be active. The host address to be inserted in the FTP client is visible next to the caption "Server IP:".

File Transfer Protocol or FTP is a protocol for data transmission based on a client-server system, the data structure is divided into directories. For the communication to take place, client authentication is required through username and password (established at the time of connection, can be set by the user at will) and the setting of the server address to which the client will connect (it will be defined by the program when the service is running). The IP port must be indicated on the server (Android device) and reported on the client, the IP port must be a number in the following range: 1025-65535. Note: The server (Android device) and the client (FileZilla or others) must be connected to the same WiFi network in order to transfer data.

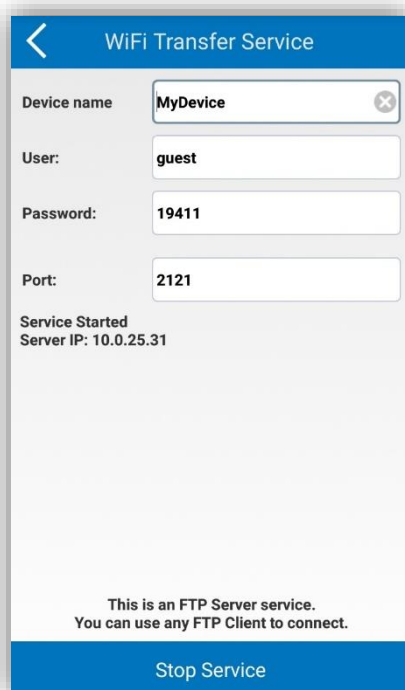


Figure 3.18

4 Software introduction - Device

By clicking on "Device", the page shown in Figure 4.1 will be displayed in the main software interface. The available functions are: GNSS status, data link status, connection settings, working mode, data link settings, device information, RTK reset, data registration, distance meter.

The following sections describe how each option in the submenu works.


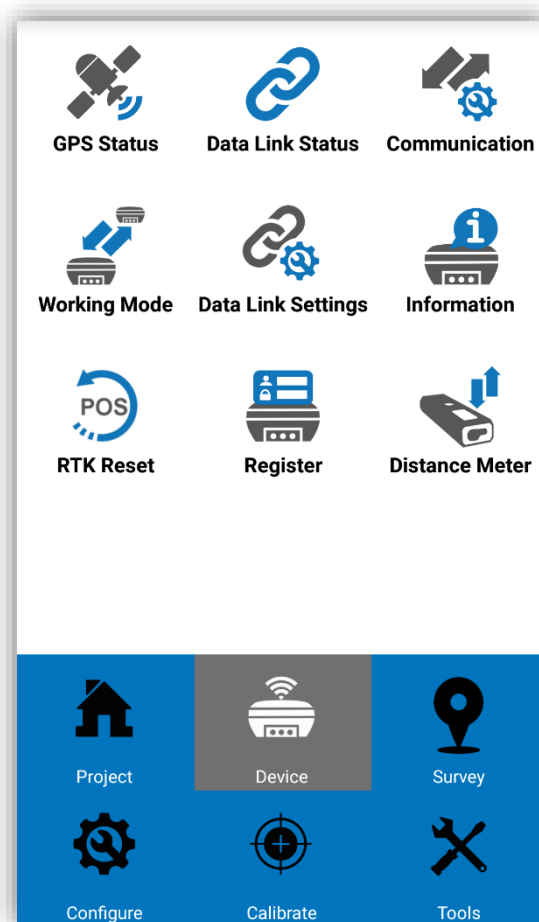


Figure 4.1

4.1 GPS Status

Click on "Device" and on "GNSS Status" to view information on GPS positioning. Click "Details" to display the screen shown in Figure 4.2. The information includes the latitude and longitude coordinates of the current GPS location, planimetric local coordinates, speed, heading, solution, differential mode, differential delay, satellites received, PDOP, HDOP, HRMS, VRMS, UTC time, local time and distance from the base.

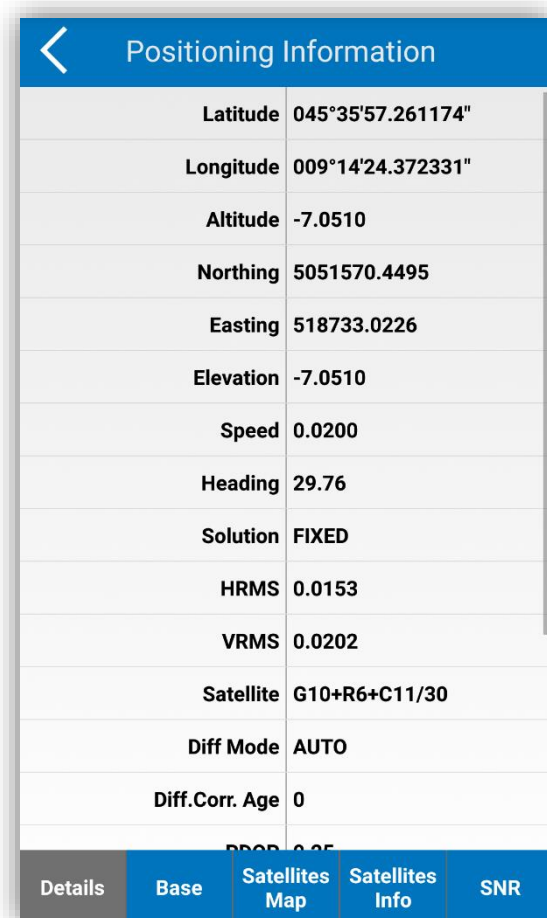

Positioning Information	
Latitude	045°35'57.261174"
Longitude	009°14'24.372331"
Altitude	-7.0510
Northing	5051570.4495
Easting	518733.0226
Elevation	-7.0510
Speed	0.0200
Heading	29.76
Solution	FIXED
HRMS	0.0153
VRMS	0.0202
Satellite	G10+R6+C11/30
Diff Mode	AUTO
Diff.Corr. Age	0
PDOP	0.25

Figure 4.2

Let's look at the information about the solution in detail. The solution can be: SINGLE, DGNSS, FLOAT, FIXED.

SINGLE: it means that the receiver does not receive differential corrections from the base, so the accuracy will be low.

DGNSS: it means that the receiver can receive the differential corrections from the base, but the accuracy of the data is low for several reasons, such as, the position of the receiver does not allow the device to receive many satellites.

FLOAT: it means that the receiver can receive the differential corrections from the base, the accuracy is high, generally below the 0.5 meters.

FIXED: it means that the receiver can receive differential corrections from the base, it is the final solution for transmitting the phase difference corrections of the vector with maximum precision, usually within 2 cm. With high precision GPS measurement, you need to get a fixed solution status to record data.

As for the differential mode it includes the CMR, a type of differential message format defined by Trimble, and the RTCM, a general differential message format that includes X, RTCM32, and so on.

The differential delay indicates the time when the Rover receives the corrections (for example, a 10-second correction delay indicates that the base has sent a signal that will be received by the Rovers after 10 seconds from sending), the unit of measure are the seconds. When the RTK mode is running, the correction delay is low, so the result is better, generally the delay is less than 10 seconds, usually 1 or 2 seconds.

PDOP: Dilution of position accuracy. When the PDOP value is less than 3, it represents the ideal situation. The lower the PDOP value, the better the distribution of the satellites, this facilitates the search for the FIXED solution of the instrument.

HDOP: Dilution of horizontal precision, it is the component of the horizontal direction in the PDOP.

VDOP: Dilution of vertical precision, it represents the component of the vertical direction in the PDOP.

Clicking on "Base" will display a screen as in Figure 4.3. You can then analyze the information related to the reference base, with the function at the bottom, called "Store Base Coordinates" you can turn the base into a point in the survey.

Positioning Information				
Base ID	4715			
Latitude	000°00'00.000000"			
Longitude	000°00'00.000000"			
Altitude	-2.1400			
Northing	0.0000			
Easting	-506049.3110			
Elevation	-2.1400			
Ref Power				
Distance to Ref	4993894.8214			
Store Base Coordinates				
Details	Base	Satellites Map	Satellites Info	SNR

Figure 4.3

By clicking on "Satellites Map" you can view the sky plot (Figure 4.4), the map with the position of the satellites detected by the receiver, positioned according to the azimuth (on the circumference of the circle) and the elevation angle (on the radius), the center of the circle represents the position of the receiver. Legend: GPS-blue (GPS); BD-light green (BeiDou); GLN-red (GLONASS); GAL-magenta (Galileo); SBAS-dark green (SBAS); ATL-yellow (ATLAS).


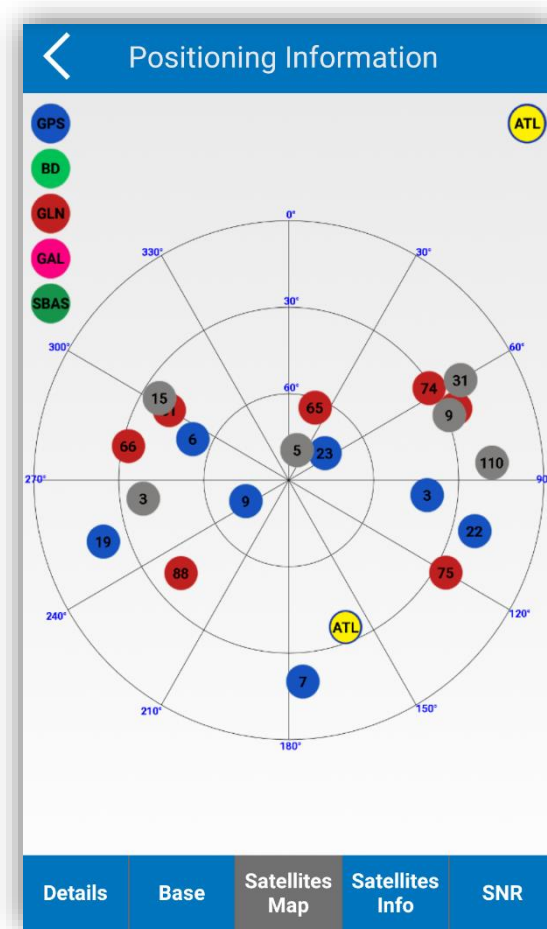


Figure 4.4

By clicking on "Satellite Info" you access a screen as in Figure 4.5. The satellite table includes the name of the satellites, the signal-to-noise ratio (SNR) of the GPS signals (L1, L2, L5) and the BeiDou signals (B1, B2, B3), azimuth and elevation.

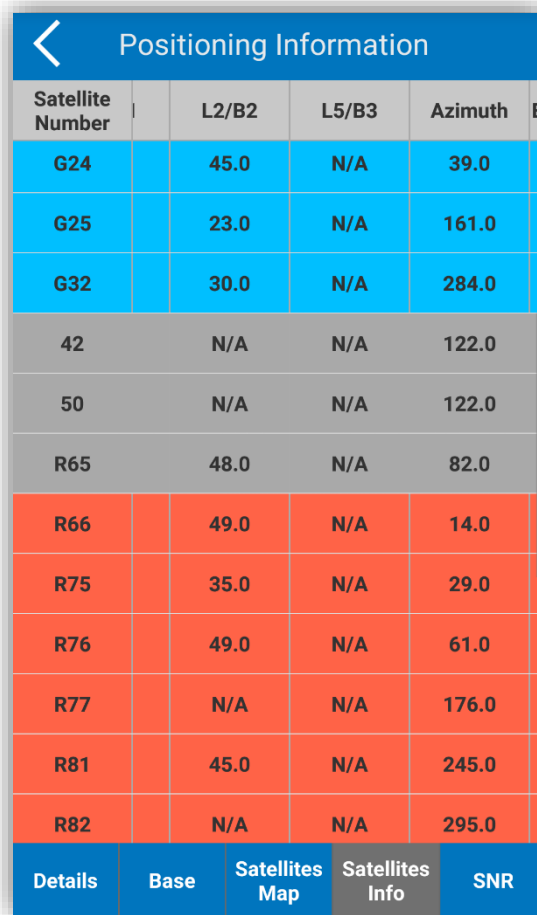

Positioning Information					
Satellite Number		L2/B2	L5/B3	Azimuth	Elevation
G24		45.0	N/A	39.0	
G25		23.0	N/A	161.0	
G32		30.0	N/A	284.0	
42		N/A	N/A	122.0	
50		N/A	N/A	122.0	
R65		48.0	N/A	82.0	
R66		49.0	N/A	14.0	
R75		35.0	N/A	29.0	
R76		49.0	N/A	61.0	
R77		N/A	N/A	176.0	
R81		45.0	N/A	245.0	
R82		N/A	N/A	295.0	

Details	Base	Satellites Map	Satellites Info	SNR
---------	------	----------------	-----------------	-----

Figure 4.5

Clicking on "SNR" you access the screen in Figure 4.6 This histogram is the graphical representation of the signal-to-noise ratio (SNR) of the GPS signals (L1, L2, L5) and the BeiDou signals (B1, B2, B3).


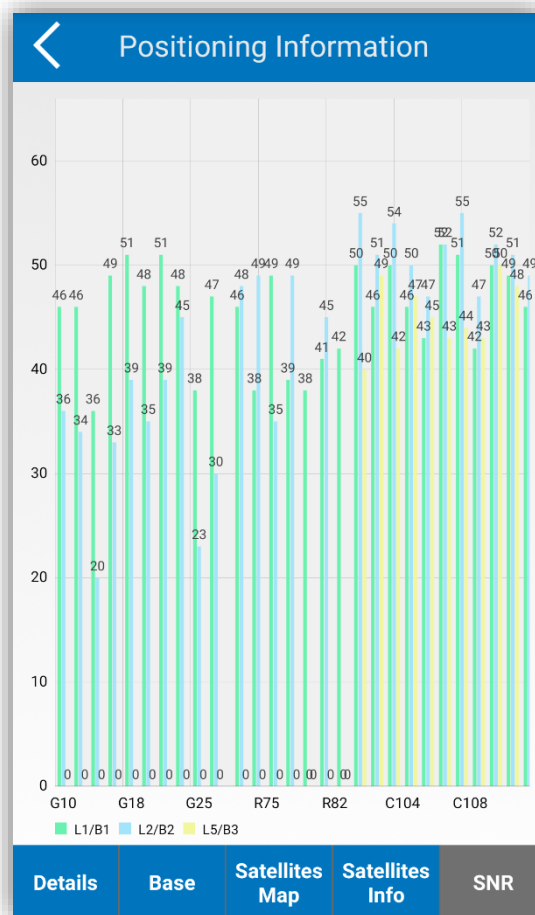


Figure 4.6

4.2 Data Link Status

By clicking "Device" and "Data link status" you can see the configuration and current status of the data link of the receiver. When the data link is set to Phone Network, the data link status is as shown in Figures 4.7 and Figures 4.8.

In the other connection modes, the screens will be different.

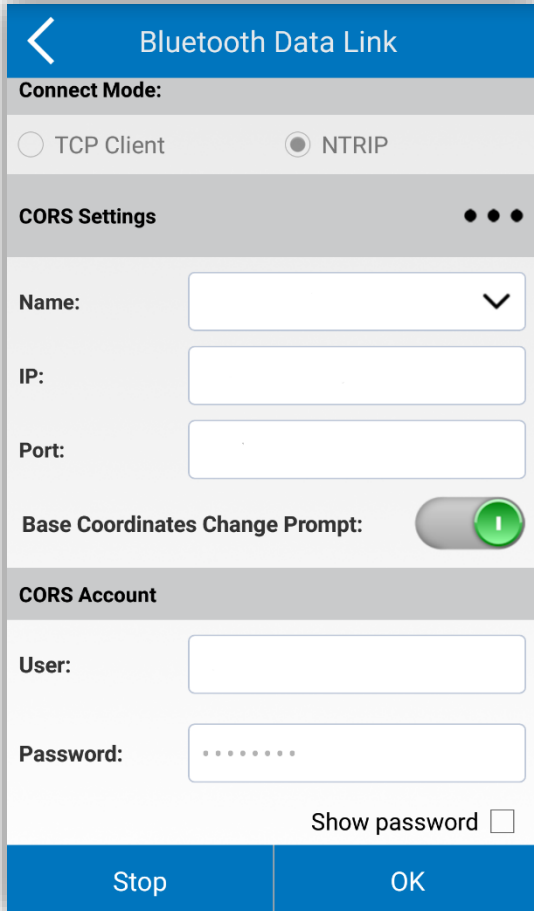

Bluetooth Data Link

Connect Mode:

TCP Client NTRIP

CORS Settings ● ● ●

Name: ▼

IP:

Port:

Base Coordinates Change Prompt:

CORS Account

User:

Password:

Show password

Stop OK

Figure 4.7

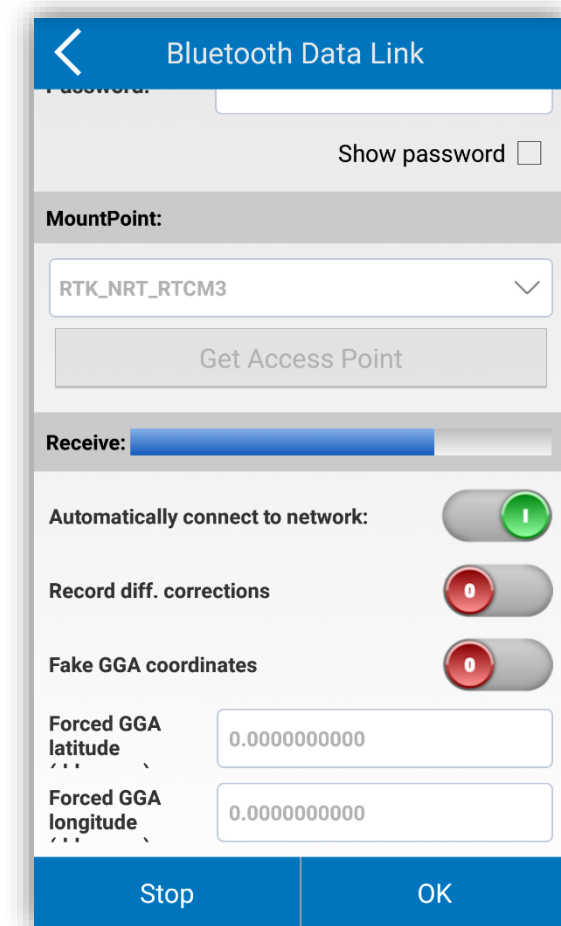


Figure 4.8

4.3 Communication Settings

Clicking "Device" and "Communication" will show the screen in Figure 4.9. Communication settings are mainly used to select the communication mode between the receiver and the Cube-a software. Communication settings must be done in two steps: First, select the type of instrument from: Stonex GNSS, Stonex S5, Stonex S9, Internal GPS.

Secondly, set the communication mode on one of the two options: Bluetooth and WIFI. If the internal GPS is enabled, to obtain positioning, the instrument can read the GPS signal from the integrated antenna.

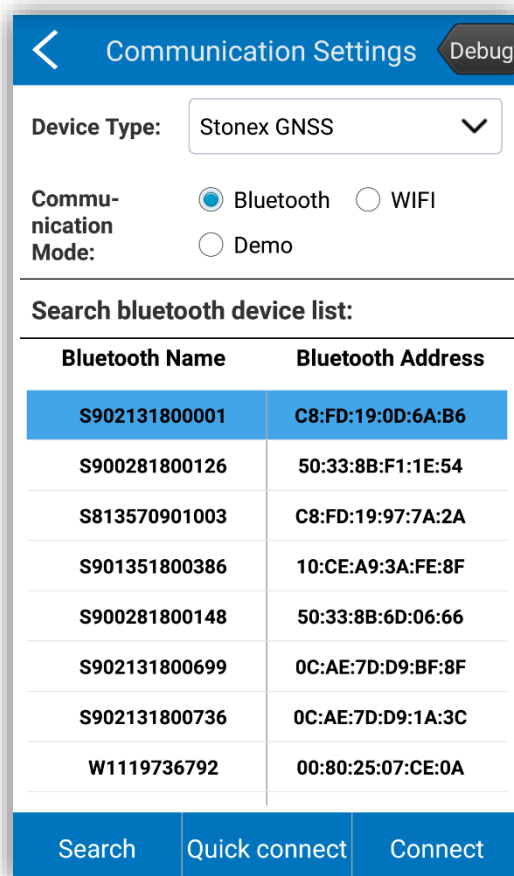


Figure 4.9

1. Bluetooth connection

Select "Bluetooth" in the Communication Mode group, then click "Search" at the bottom of the screen, and a screen like the one shown in Figure 4.10 will appear. If the Bluetooth device you want to connect to is already present in the list of devices, click on "Stop" to stop the search, then select the name of the device to connect the instrument to and then click on "Connect". When the pairing screen appears, click on "Pair" and the connection should be successful. The Quick Connect option performs the search and automatic connection to the only receiver with Bluetooth active in the range of the device. Not working in case of more active Bluetooth devices.

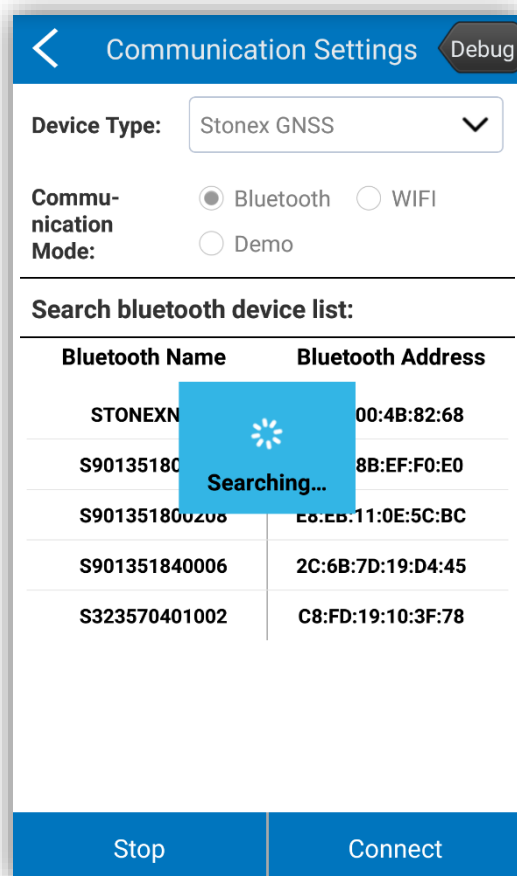


Figure 4.10

2. WIFI connection

Select "WIFI" in the Communication Mode group in the connection settings interface, then click "Settings" to find the WIFI names of the corresponding receivers (the default WIFI name is the serial number of the receiver), then click on the desired WIFI name to connect it. Once the connection is established, go back to the communication settings interface and click "Connect" to complete the setup, as shown in Figure 4.11.

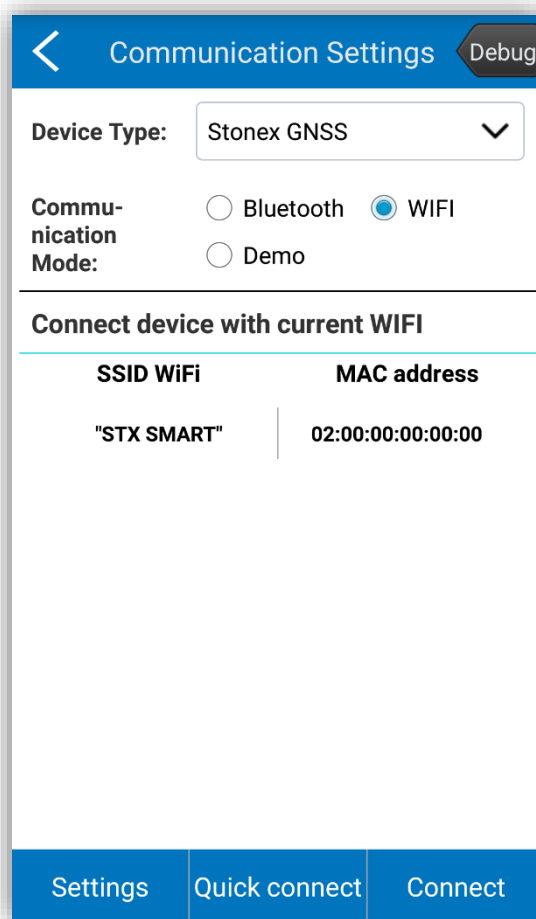


Figure 4.11

3. Demo mode

By selecting this item from the Communication Mode group, you can try each function available in Cube-a without connecting the receiver (Figure 4.12).

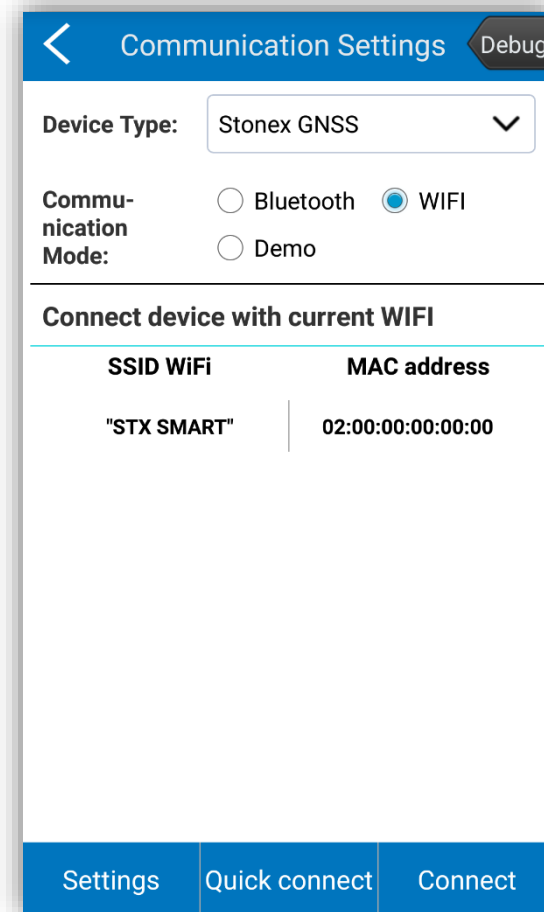


Figure 4.12

4.4 Working mode

Click on "Device" and then on "Working Mode" to enter the work mode selection interface as in Figure 4.13, the working mode is mainly used to set the operation mode of the receiver. Five options are available in the working mode selection interface: Communication, Static, Base, Rover, Preset Configurations.

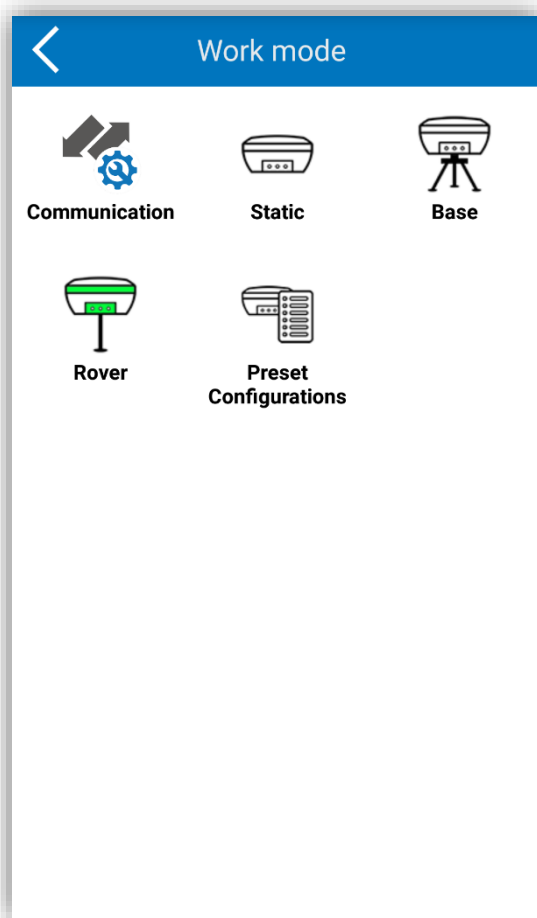


Figure 4.13

When performing static measurements, set the operating mode to Static. When performing RTK measurements, set the working mode to Rover or Base.

After connecting the device and the Cube-a software via the communication settings, you can set the work mode and the data link. The following sections describe the settings in the work mode menu.

4.4.1 Communication

Click "Device", then "Work Mode" and then "Communication", to enter the communication settings such as those shown in section 4.3.

4.4.2 Static Mode

Click on "Device", then on "Working Mode" and then on "Static" to access the interface shown in Figure 4.14. The static work mode contains three groups of settings: parameter settings, antenna parameters and satellites system. The various parameter settings will be described in detail below.

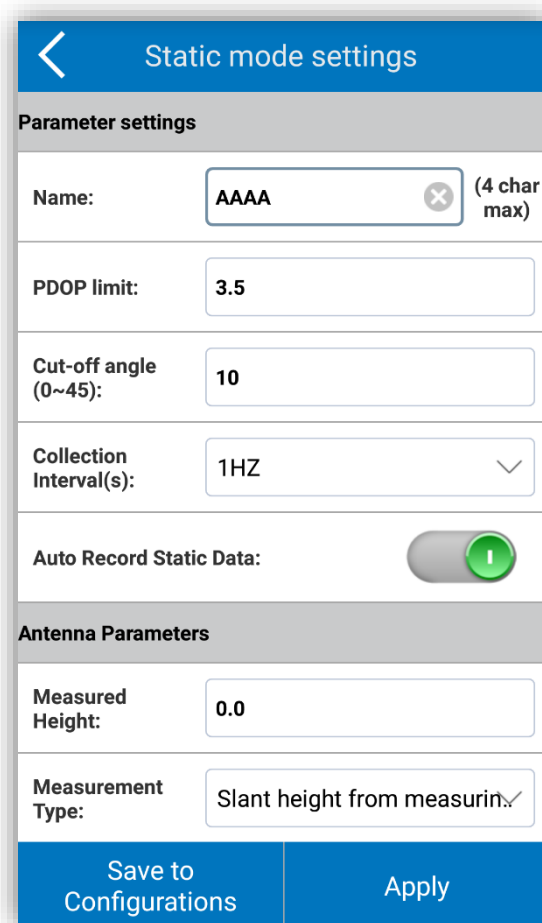


Figure 4.14

Name: the name of the points in static is limited to 4 characters.

PDOP limit: the geometric factor that represents the quality of the satellite distribution. The smaller the PDOP value, the better the satellite distribution. The PDOP value below 3 represents the ideal state.

Cut-off angle: the angle of the signal between satellite/receiver and horizon. The receiver will not consider satellite signals received below the limit imposed by the cut-off angle. Range of values: 0-45 °.

Collection interval (s): 1Hz indicates the acquisition of a data per second, 5HZ indicates the acquisition of five data per second, 5s (0.2 Hz) indicates that the receiver collects data every five seconds, and so on.

Auto recor of static data: if you enable this button, the receiver starts recording automatically when it is switched on and receives satellite signals, otherwise you need to manually record the static data after turning on the receiver.

Antenna parameters: You can enter a value of the measured height and set the type of measurement among the various options available such as Height from the phase center or Slant height from measuring line. The value of the antenna height used in the surveys will be calculated automatically by the program and visible as shown in Figure 4.15.

The known values that the receiver provides are as follows:


b: the height from the bottom of the device to the center of phase p.c.;

c: the height from the bottom of the device to the rubber ring;

R: The radius of the rubber ring of the device;

If the measured height is the vertical height (a) from the bottom of the device to the ground, the measured height must be set to "Height from the phase center ". And the height of the antenna: $h = a + b$.

If the measured height is the height of the inclination from the rubber ring to the ground, the height measured is the "Slant height from measuring line". Antenna height $h = \sqrt{(s^2 - R^2)} - c + b$

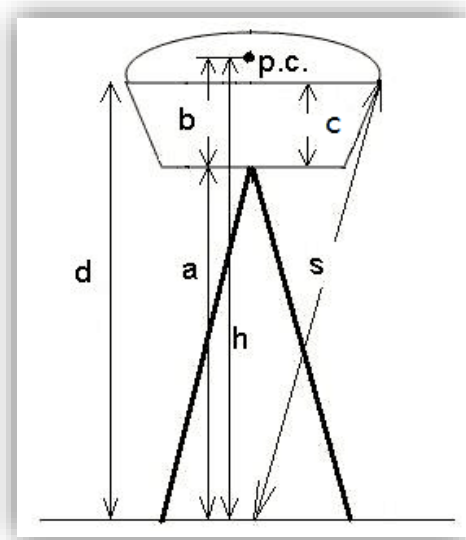

Satellite constellations: the satellite system settings include five systems: GPS, GLONASS, BeiDou, Galileo and SBAS. Depending on the job requirements, it is possible to choose whether to receive the signal corresponding to a certain constellation of satellites, or to disable it. The SBAS system is a large-scale differential correction system (improvement system based on satellite signal reception quality). Navigation satellites are detected by many different widely distributed stations and the raw data acquired is sent to the console. Then from the console, through the calculation of the various satellite positioning correction information and through the upload stations are sent to GEO satellites. Finally, GEO satellites send corrections to users, helping to improve positioning accuracy.

In Static mode, after setting all parameters, click "Save to Configurations" to memorize the static parameters. In this way it will be possible to open a new project and recall the Static mode settings previously saved, without having to re-insert them. Click "Apply" to start the receiver in static work mode.

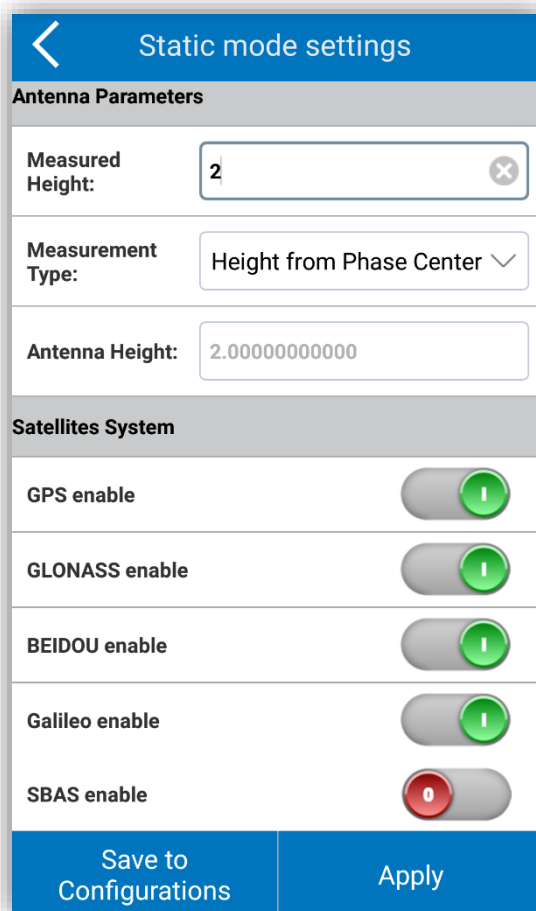


Figure 4.15

4.4.3 Base Mode

Click on "Device", then on "Working Mode" and then on "Base" to access the "Basic mode settings" screen shown in Figure 4.16. The base mode settings are divided into: Start Up Mode, Options settings, Data Link, Satellites System.

Start Up Mode: There modes, "Use Current Coordinates" and "Input Base Coordinates". Use current point coordinates: The Base station takes the WGS-84 coordinates of the current point and sets it as the base coordinates. Input base coordinates: allows you to manually enter the coordinates to use for the base. The difference between the entered coordinates and the precise WGS-84 coordinates of the current point on which the base is positioned, must not be very large, otherwise the Base station will not work optimally. If you select "Input Base Coordinates", click "Set Base Coordinates" to access the base coordinate settings as in Figure 4.17. You have three possibilities to enter the coordinates: search for the coordinates inside the library, acquire the GPS coordinates of the current point or enter the coordinates manually. Then click "Set Base antenna height" to set the antenna parameters.

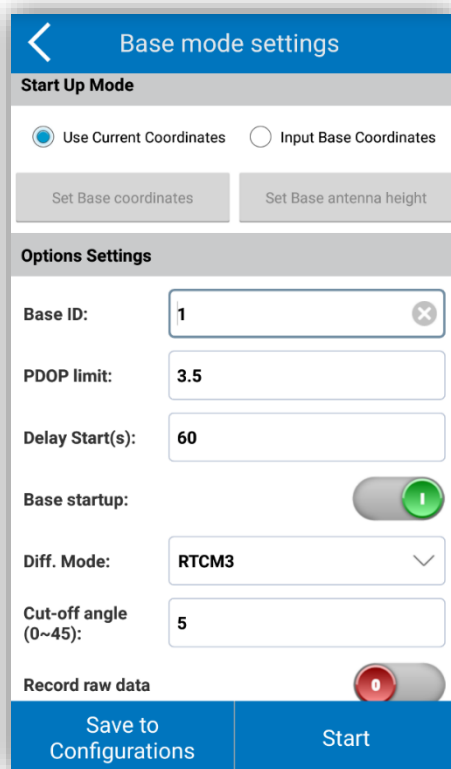


Figure 4.16

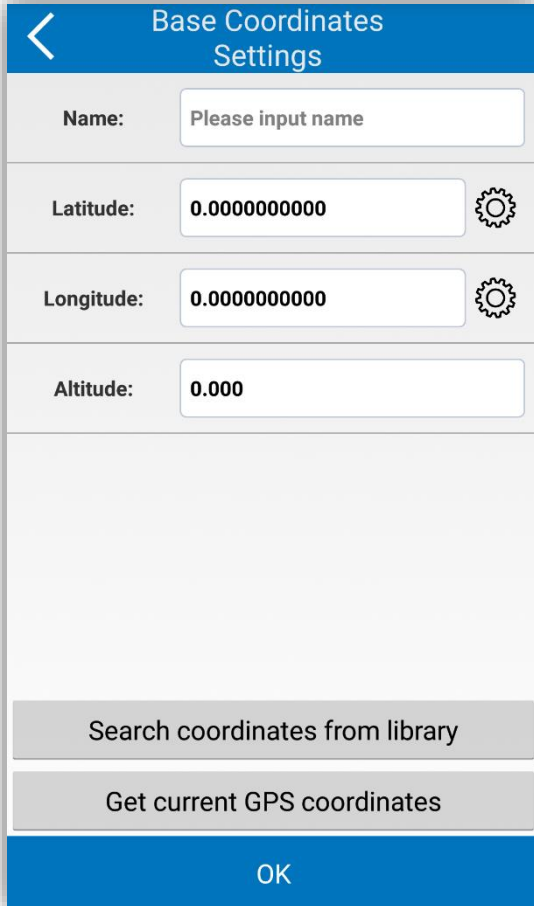


Figure 4.17

In the Options settings (Figure 4.16), it is possible to indicate the Base ID, the PDOP limit value, the start time of the delay, the format of the differential data, the cut-off angle and whether to enable the recording of raw data.

Data link: There are 4 modes of communication in data connection, the following: None, Internal Network, Internal Radio, External Radio, Dual (Figure 4.18).

Below we see in detail these modes.

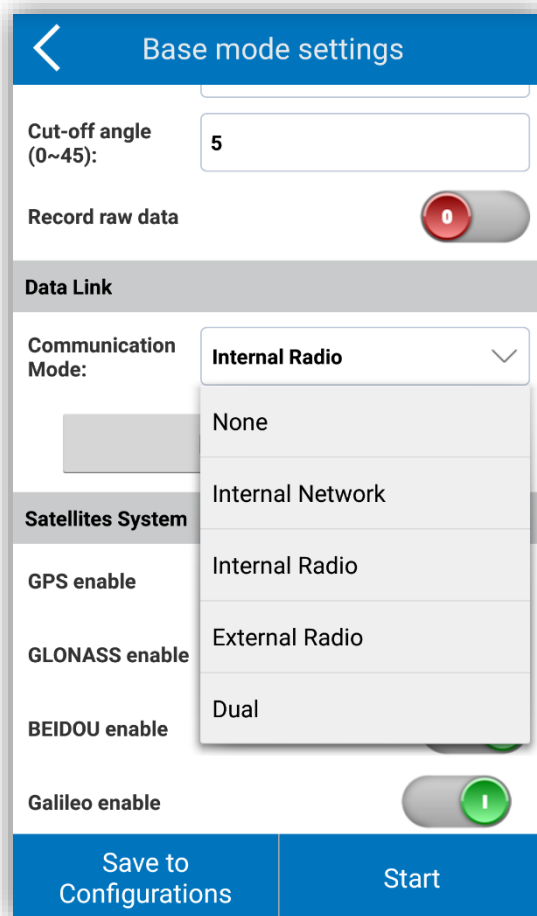


Figure 4.18

None: No differential data is sent.

Internal Network: The transmission of differential data is carried out via the network, so a SIM must be inserted into the receiver for data to be transmitted.

Internal Radio: Differential data transmission takes place via the internal radio. The RTK Base and the Rover have a built-in radio, which can receive and transmit differential data. The Base can transmit differential data via the internal radio and the Rover can receive differential data via the internal radio.

External Radio: the base is connected to an external radio and transmits differential data via the external radio.

Dual: Simultaneous sending of data to a remote station via the internal network and via external radio.

As a last setting for the Basic work mode, you can enable/disable the satellites to receive the signal or not.

After all the parameters for the Base mode have been set, click on "Save to Configurations" to save the parameters. The current parameters can be saved, so that you can recall the configurations later without having to reinsert them.

After setting the parameters for the Base mode, click "Start" to start the Base work mode.

4.4.4 Rover mode

Click on "Device", then on "Working Mode" and then on "Rover" to access the "Rover mode settings" page, shown in Figure 4.19. The settings of the Rover mode are divided into: Options settings, Data link, Antenna parameters, Satellites system.

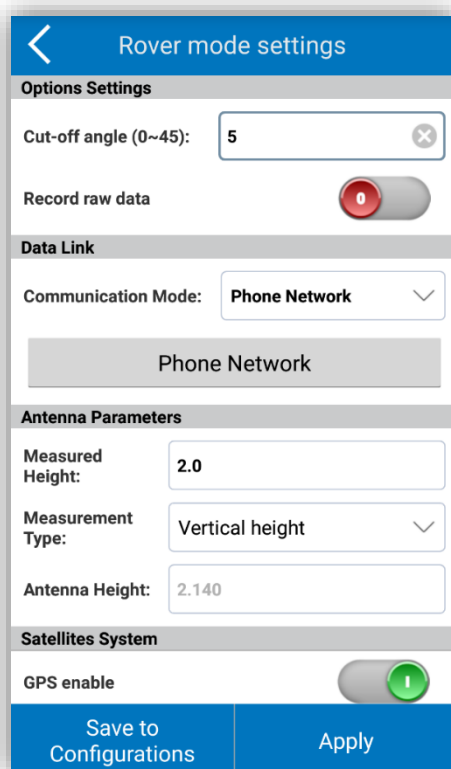


Figure 4.19

Options: If you enable the "Register raw data" option, you can set the name of the recorded raw data file. Then it will be possible to acquire points in "Stop and Go" mode on the survey page.

Collegamento dati: There are 6 communication mode options in data link: None, Internal Network, Internal Radio, External Radio, Phone Network and L-band. As shown in Figure 4.20.

The meaning of the first four modes of communication is the same as described previously in the section concerning the Base.

Phone Network: The transmission of differential data is carried out through the mobile device network. With this communication mode, a SIM must be inserted in your mobile device or you must be connected to a Wi-Fi network.

L-band (Atlas): Using the precision system based on corrections sent by the satellites, it is possible to receive the differential corrections and reach an accuracy level between 5 and 12 cm. This option allows you not to rely on base stations, CORS or network, in areas where the differential signal could be absent such as deserts, oceans or mountains, you only need to have the availability of receiving L-band satellites.

After setting the parameters, click on "Save to Configurations" to save the settings and click "Apply" to change the working mode in Rover, the Rover will then receive the corrections from the Base.

If the radio has been set as the connection between Base and Rover, then the frequency and the protocol must be the same.

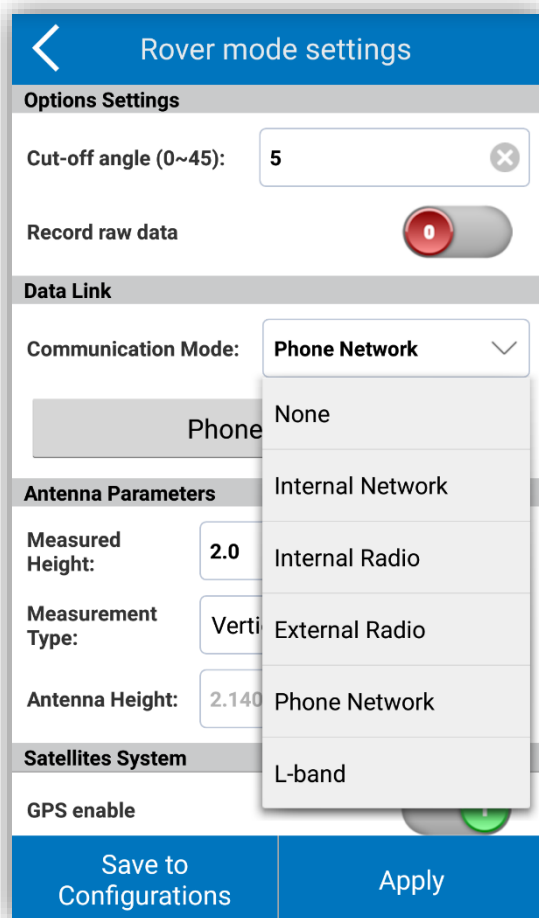


Figure 4.20

4.4.5 Preset Configurations

Click "Working Mode" and "Preset Configurations" to enter the "Retrieve the Configuration" interface shown in Figure 4.21.

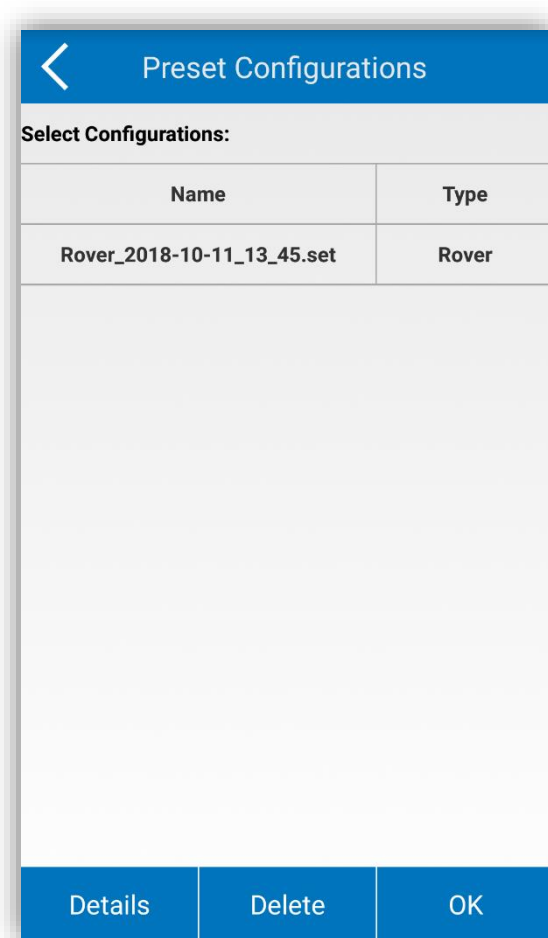


Figure 4.21

If you select a configuration and click "OK", the device will work with the selected configuration.

If you select a configuration and click on "Details", all the parameters of this configuration are displayed.

If you select a configuration and click on "Delete", the configuration will be deleted.

4.5 Data Link Settings

The data link settings are mainly used to set the data transmission mode between the Base and the Rover. Click "Device", then "Data Link settings" to access the screen as in Figure 4.22. The menu is divided into two subgroups: Current Work Mode (which can be Basic or Rover) and Data Link.

When the current operating mode is Base, four data link modes are available: None, Internal Network, Internal Radio, External Radio, Dual (Figure 4.23). To find out the details of these modes, see paragraph 4.4.3, related to the Base working mode.

When the current operating mode is Rover, there are six data link modes: None, Internal Network, Internal Radio, External Radio, Phone Network, L-band. To find out the details of these modes see paragraph 4.4.4, concerning the Rover working mode.

After selecting the data link mode, you can click the button under the data link mode to set the corresponding parameters, the button takes the name of the link mode set.

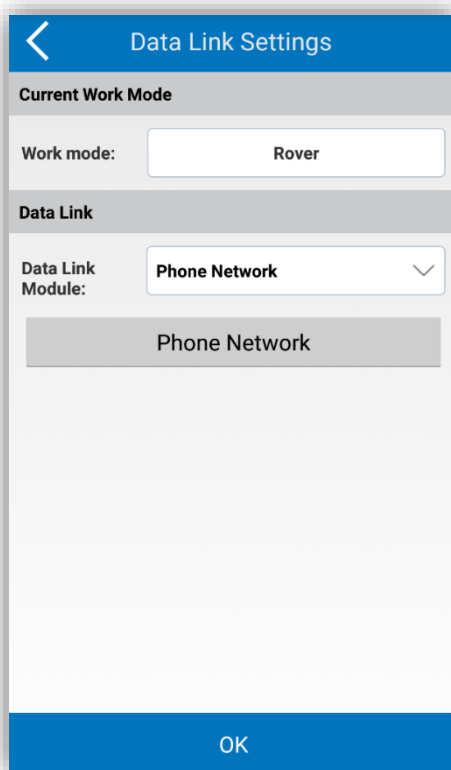


Figure 4.22

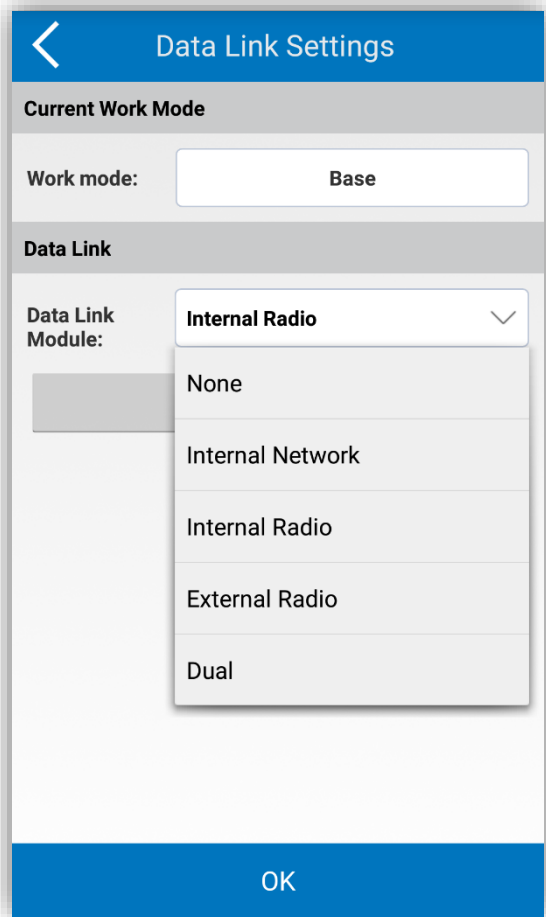


Figure 4.23

4.5.1 Internal Network

There are 2 types of network: Internal network and phone network. When Cube-a is in Base work mode, the network can only be an internal network. When the work mode is Rover, the network can be an internal network and a phone network.

Now let's analyze the settings available in the case of Base working mode with internal network, the reference screen will be like that in Figure 4.24. The available options are: Connect mode and option, APN settings and CORS settings. In case of Rover working mode, the available settings will be: Connection modes and options, Wi-Fi settings, CORS settings, CORS accounts and mountpoints.

As for the connection mode select TCP, for a standard transmission control protocol, specific for network transmissions. Select NTRIP, for a standard protocol used to transmit differential data via the CORS network. It is also possible to define a custom transmission protocol.

As for connection options, the default GGA upload interval is 5s, it is also possible to change the GGA upload interval. It is possible to enable/disable the automatic connection to the network and the 2G. In Rover mode, you can set the Network Relay.

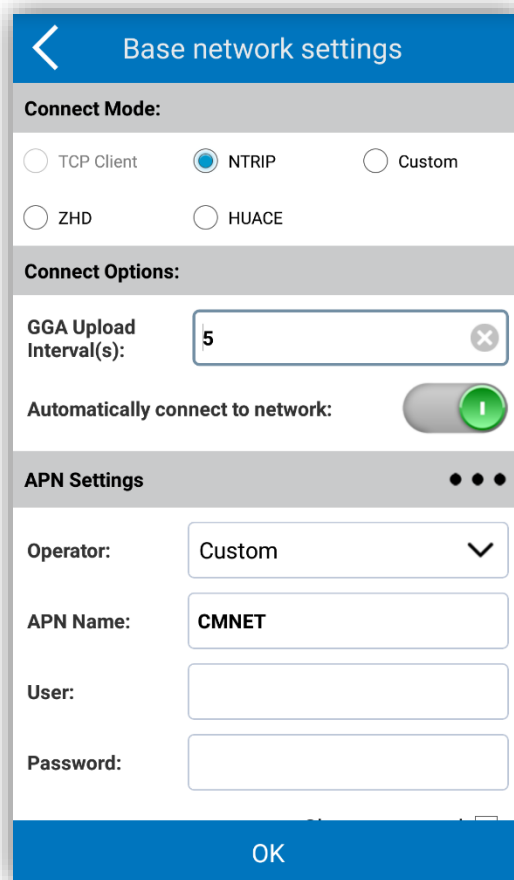


Figure 4.24

In the APN settings you can search for an operator by clicking on the search button at the top (with the three dots).

Base network settings: in the CORS settings, enter the IP, port, base mountpoint and password. If you click on the search button on the right side, you can add or edit the CORS server parameters.

Rover network settings: in the CORS settings, enter the IP and the port, click on the search button on the right to add or modify the CORS server parameters. Some parameters of corrections are already present in the software as shown in Figure 4.25.



No.	Country	Name
1	Croatia	CROPOS (VPPS/NET)
2	Croatia	CROPOS (VPPS/SINGLE)
3	Europe	EGNOS (EDAS)
4	Europe	EUREF
5	Germany	SAPOS/LGB
6	Hungary	GNSSnet/FOMI
7	Italia	GPS Veneto
8	Italia	GPSEmilRomagna
9	Italia	ItalPoS
10	Italia	Regione Abruzzo
11	Italia	Regione Campania

Figure 4.25

Then set the mountpoint, you can use "RTK network" or "mobile phone network" to get the mountpoints and select a mountpoint. Finally, set the user and password in the CORS account. If the Base is set up independently, the user and password can be entered with any character. If you use a CORS account, you must enter the corresponding user and password.

The IP in the Base and Rover settings must be the same.

4.5.2 Internal Radio

Select the "Internal Radio" data communication mode, click on the "Internal Radio" button to access the screen where to set the parameters (Figure 4.26). The parameters in Base and Rover modes are the same, including channel, frequency and protocol. Channels 1 to 7 are fixed, the frequency can not be changed; channel 8 is the customizable channel, the frequency could be set according to your needs. By clicking " Default radio settings", you can set the frequency of channels 1-8.

If the data communication mode of Base and Rover is the internal radio, the frequency and protocol of Base and Rover must be the same. In Base mode, the radio power will affect the signal transmission distance. Low power, low power consumption, the signal transmission distance is close; High power, high power consumption, the signal transmission distance is far away.

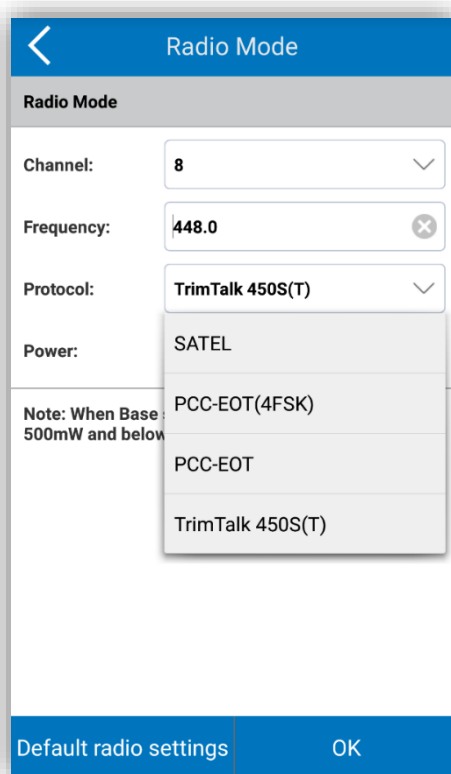


Figure 4.26


4.5.3 External Radio

Select the "External Radio" data communication mode and click on the "External Radio" button to set the parameters. The parameters of the Base and Rover modes are the same, only the baud rate must be set. The default speed value is 38400.

4.5.4 Phone Network

This mode of data communication is only available in Rover mode. Select this mode and click on the phone network button to set the parameters (Figure 4.27), the parameters include the CORS settings and the entry point. If the search button on the right side of the CORS settings is on the CORS server, you can add or modify the CORS server parameters.

These settings are the same as those already illustrated for the internal network communication mode, in this case, however, the network used in the telephone network mode is that of the mobile device, which requires access to the Internet.



Collegamento dati Bluetooth

Modalità di connessione:

TCP NTRIP

Imposta CORS

Nome:

IP:

Porta: 2101

Avviso cambio coord. della Base:

Account CORS

Nome utente:

Password:

Mostra password

Avvia OK

Figure 4.27

4.6 Information

Contains detailed parameters and status of devices, antenna, network, radio and satellite systems.

4.7 RTK Reset

Its function is to force the re-initialization of the OEM card, thus forcing a complete recalculation of the position starting from new satellite signals. Click "Reset RTK", the dialog box shown in Figure 4.28 will appear, then click "OK" and the receiver will restart positioning.

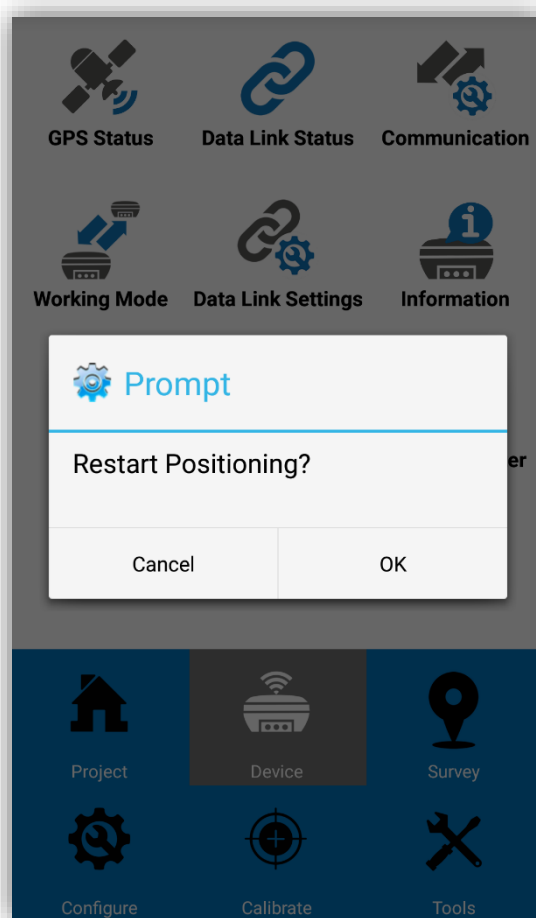


Figure 4.28

4.8 Register

With this command you can view the serial number of the device and the expiration date of the license registration. In this screen you can enter any license codes and then register the GNSS (in case of license expiring, for example), the device must of course be connected to the Cube-a

4.9 Distance meter

Click on "Device" and then on "Distance meter" to connect a Disto in Bluetooth mode. A screen will open as in Figure 4.29, where it will be possible to search and connect a disto. It will therefore be possible to measure with the instrument, starting the measurement directly from the Cube-a; in Figure 4.30 you can see the "Measure" command at the bottom, which will start the measurement, in this case two measurements have been made. The top button "Clean" will be useful to delete data and start from scratch. The Disto command is available in all Cube-a functions that require a measurement (but the command will only be visible if previously connected).

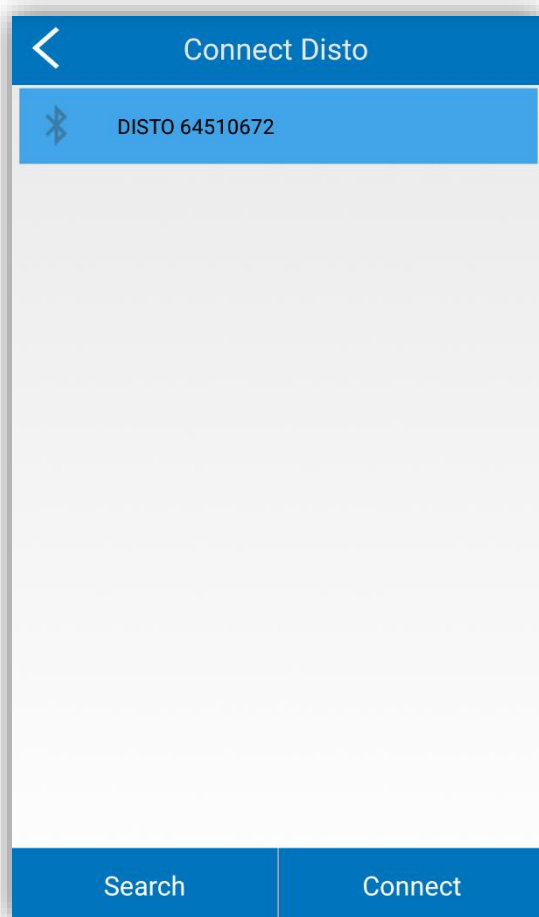


Figure 4.29

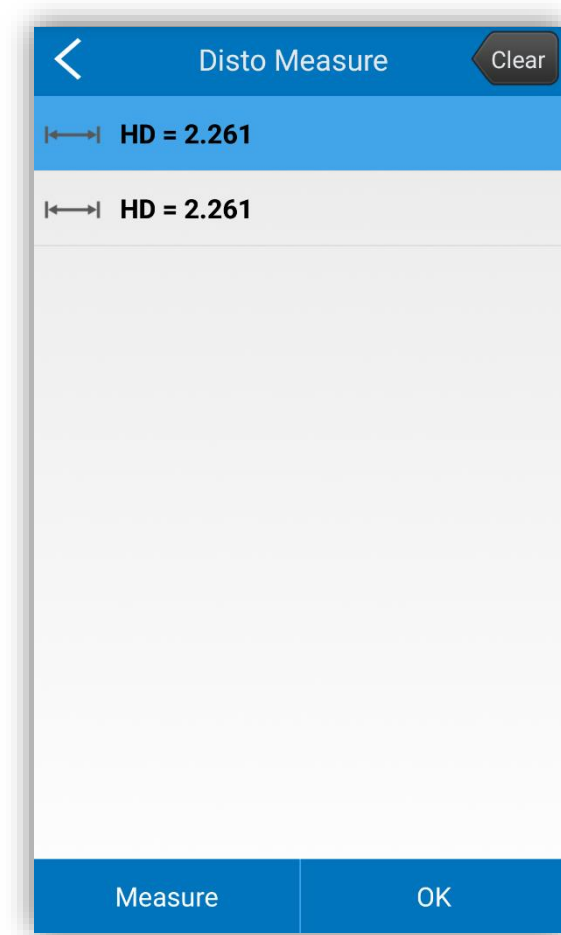


Figure 4.30

5 Software introduction – Survey

This chapter provides information on using commands from the "Survey" menu. After clicking on "Survey" you can access the screen as in Figure 5.1 and you can access the following commands: Points Survey, Point Stakeout, Line Stakeout, Elevation Control, Geophysical Stakeout, View in Google Earth.

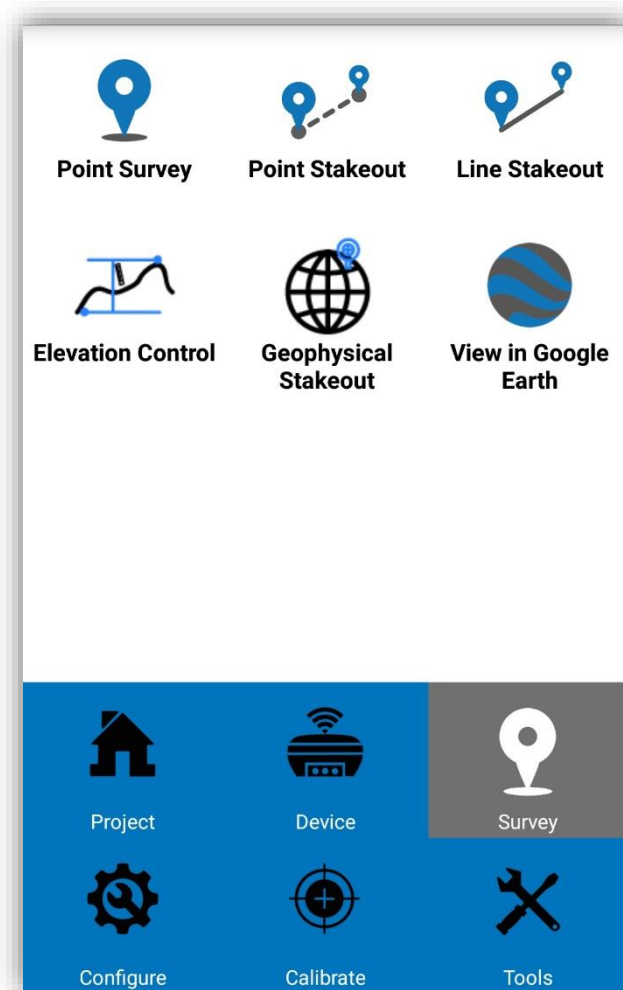


Figure 5.1

5.1 Point Survey

The Point Survey function will access the screen as in Figure 5.2. Let's see in detail the information that this screen provides us.

In the top bar starting from the left we find an arrow pointing to the left, this command will exit this screen, returning to the screen in Figure 5.1.

The green dot is a colored indicator that reveals the quality of the solution and whether the RMS limits are within the established range. If the color is green, it means that the solution reflects (or is better than) the value indicated by the user in the settings (for example FIXED, if FIXED was set) and the RMS values are lower than the maximum values indicated by the user in the settings. If the color is yellow it means that the solution reflects (or is better than) the value indicated by the user in the settings (the solution is FIXED and at least FLOAT solution was required), the RMS values are higher than the maximum values indicated by the user in the settings. If the color is red, the solution is worse than the one indicated by the user in the settings (for example FLOAT instead of FIXED), the RMS values are not checked because the solution is not compatible with the desired one. Below the quality indicator you can read the horizontal (H :) and vertical (V :) precision of the current point. This command is clickable and leads to the settings of the point being surveyed (shown in detail below).

The following written FIXED is the command where to read the solution and the relationship between satellites seen and used. This command is also clickable and leads to the position information screen (Figure 4.3).

The second command from the right gives us information on the type of data link (the communication mode and the reception interval). This command, if clicked, leads to the data link screen (shown in section 4.5)

The last command on the right provides information on the status of the battery, or batteries.



Figure 5.2

The blue bar below the commands shown above indicates the coordinates of the current point.

Below on the left we find the zoom functions, these can be used in combination with the pinch gestures.

To the right of the zoom controls we can find the compass that if clicked leads to the screen as in Figure 5.3. This function is important because at the base of the compass we can see an information on the accuracy of the calibration, this information is clickable and if clicked opens a screen as in Figure 5.4. From here, following the instructions, it will be possible to improve the accuracy of the calibration.

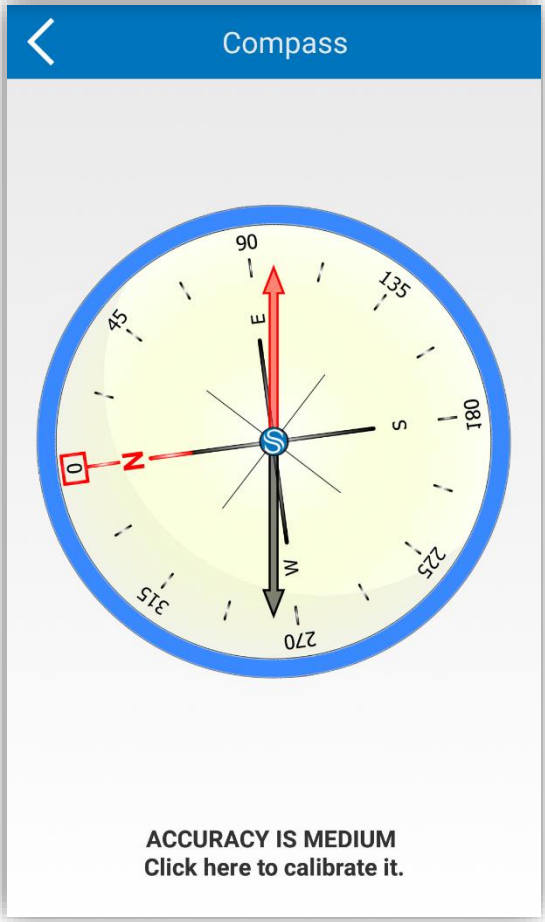


Figure 5.3

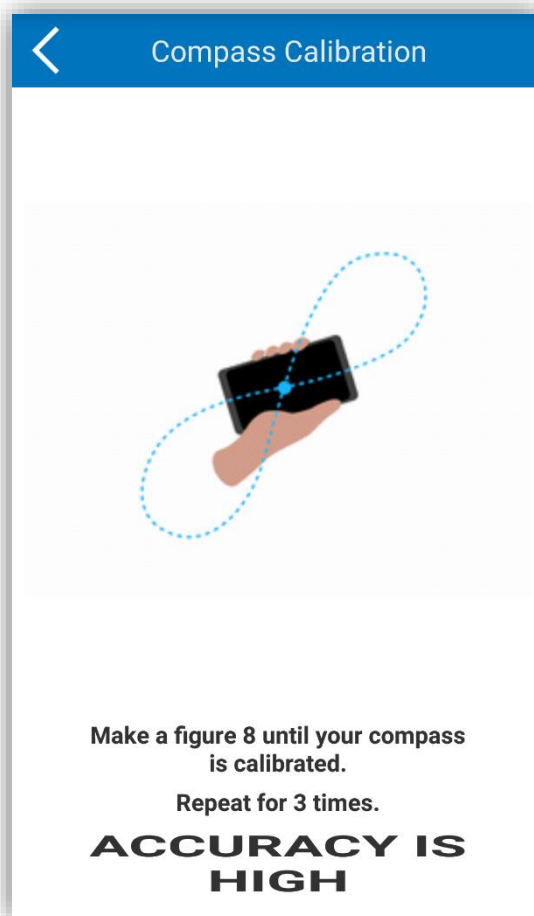


Figure 5.4

Returning to the main survey screen (Figure 5.2), in the bottom bar we have information about the name, the code and the height of the antenna. Each one of this information is clickable and will lead to related screens.

Point name (Figure 5.5), the function is quite intuitive, you can change the name using the increase and decrease buttons and you can restore the initial name.

Point code (Figure 5.6), the function allows to set the code of the point, also selecting the codes from a library which will be accessed with the search button on the right (button with the three dots). The functions, Store the Code and Store the Name, select the contents from the code column or name column of the selected row, and set it as a code of the point.

Antenna height (Figure 5.7), the function allows you to set the antenna height and what type of measurement it is (you can see the available options in the figure), this function overrides the parameter settings (shown in section 4.4).

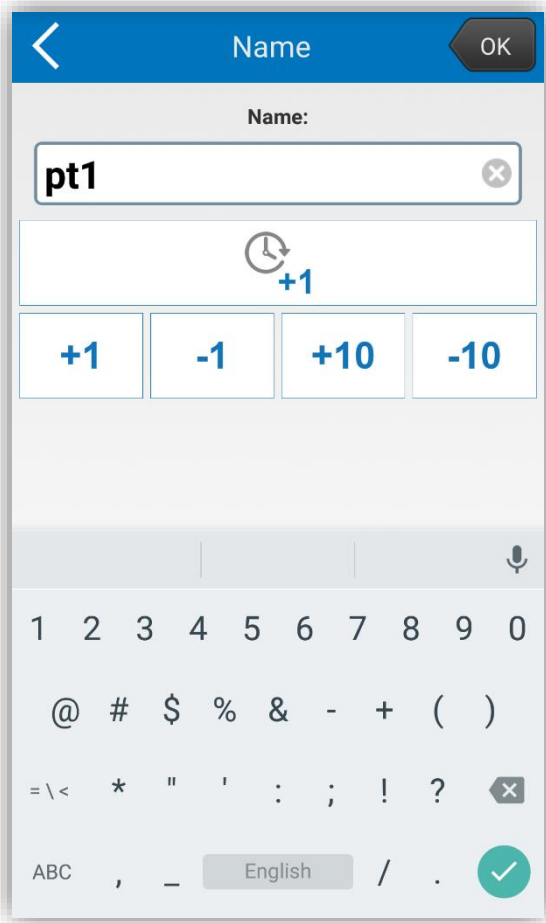


Figure 5.5

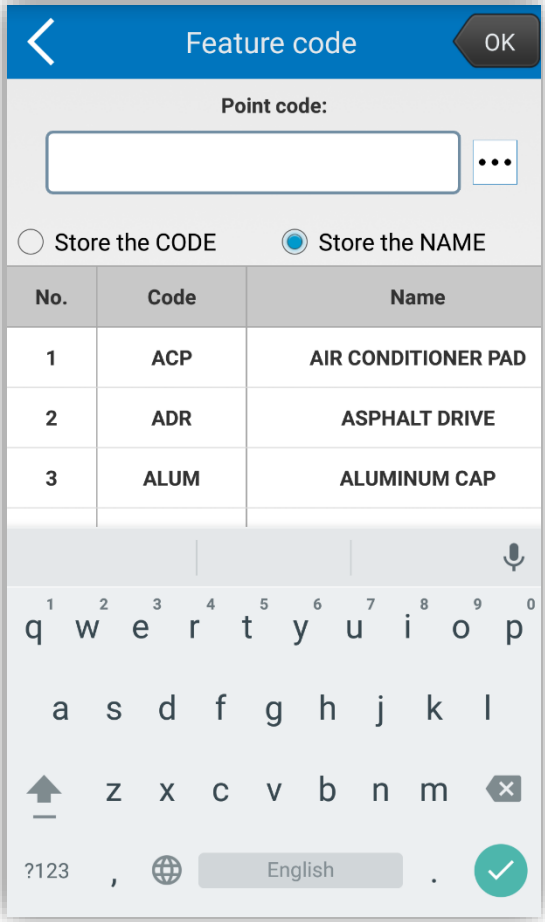


Figure 5.6

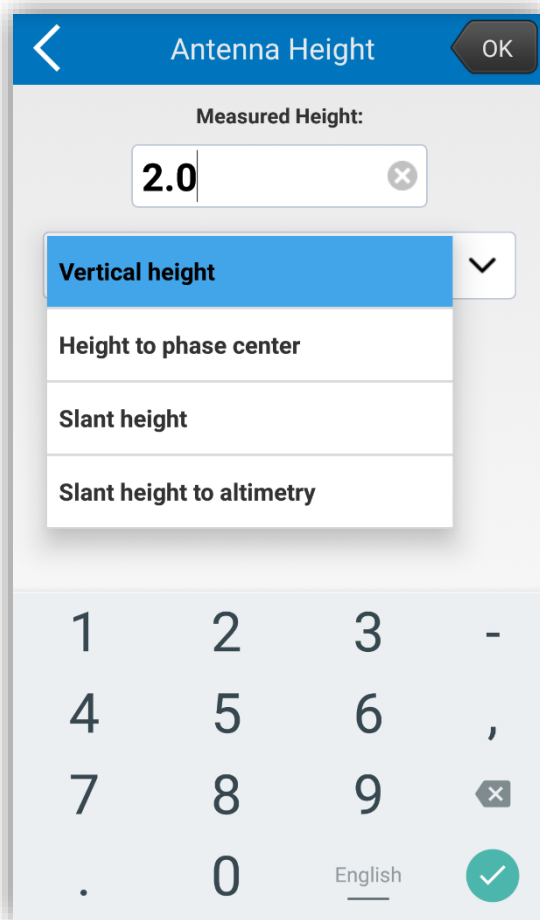


Figure 5.7

Let's go back to the general screen (Figure 5.2) and see the commands on the left sidebar in detail.

From above, the icon with the question mark enables the command to measure areas (if enabled the command becomes yellow), just click on the points you want to select as vertices of the figure to be measured, the area will be visible in red as in Figure 5.8, click on the icon again to reset/cancel the measurement.

The second command from above will be useful in case you want to select points from graphic elements (DXF or Shapefile etc.), it becomes yellow if active and leads to a screen like that in Figure 5.9. It will be possible to see the selected layer and eventually select a new one; the same possibility applies to the selected element, whose vertices and relative

coordinates will be seen. The selected vertex can be tapped, saved as a point, visible later in the collection point library and consult its properties.

The third top command (also turning yellow if enabled) is a point selection command, like the one described above. Selecting a point will result in the opening of a screen as in Figure 5.10. The point on the screen can be staked, you can see the details of it and it can be edited or deleted.

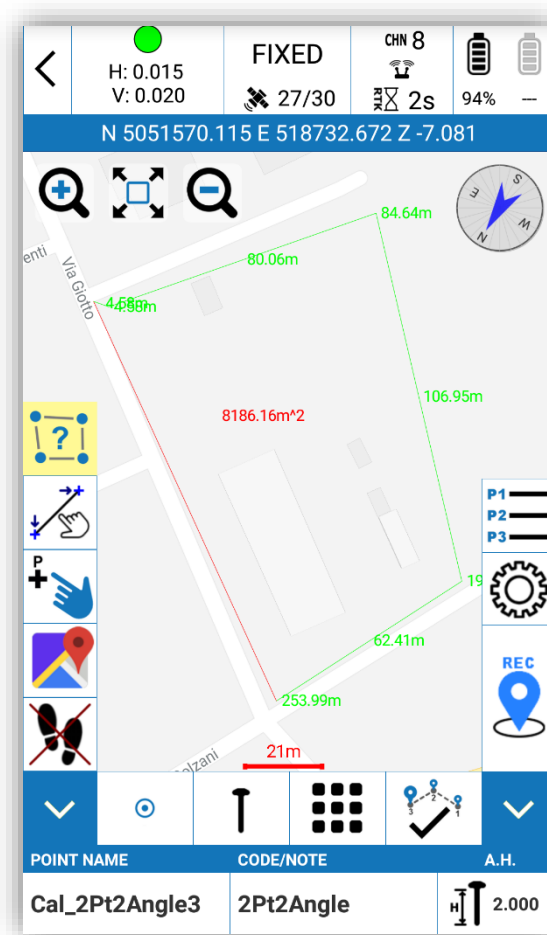


Figure 5.8

<
Layer Element

Layer Name: lavoro intergeo.dxf ▼

Element Select: 3313 ▼


No.	Northing	Easting	Altitude
0	-1255.926	1229.182	0.000
1	-1257.491	1230.864	0.000

✔
Stakeout

Save As Stakeout Point

📄
Properties

Figure 5.9

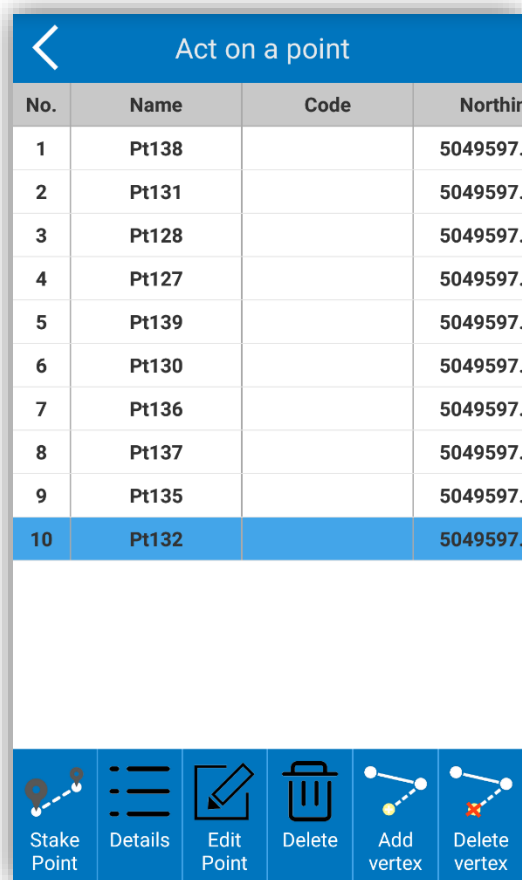

No.	Name	Code	Northir
1	Pt138		5049597.
2	Pt131		5049597.
3	Pt128		5049597.
4	Pt127		5049597.
5	Pt139		5049597.
6	Pt130		5049597.
7	Pt136		5049597.
8	Pt137		5049597.
9	Pt135		5049597.
10	Pt132		5049597.

Figure 5.10


Returning to Figure 5.8 let's explain the meaning of the button with the map, the fourth starting from the top. In this case the button is set to display the street view map, by clicking it will change state and cyclically will switch to the satellite view of the map and then turn off the map, and so on.

The command with the footprints activates or deactivates automatic centering of the map. If enabled, the GNSS position indicator (arrow) will always be in the center of the screen. The map automatically scrolls to maintain the correct position. If disabled (the footprints appear to be barred), the GNSS position indicator (arrow) moves to the map and can also exit the screen. The map does not move.

Below this command, the arrow pointing downwards will close the sidebar and make it invisible, increasing the visibility of the map below.

Now let's see the commands on the right side of Figure 5.8 (at the bottom we find an arrow pointing downwards that will close the right bar).

The first command at the top (with the list point P1, P2, P3) if clicked will open the window of the survey points library (Figure 5.11). In this screen are summarized all the points surveyed, by selecting a point you can click on details to see the relevant information. Selecting a point and clicking on Edit will access a screen as in Figure 5.12. The Antenna Height, Detail Information and Photo and Sketch functions will lead to three different screens, some of which previously encountered. Antenna Height will open the screen as in Figure 5.7, relative to the point in question. Detail information opens the screen with details of the point information (this screen can be called from several parts in the program), the last one starts an interesting function that will be illustrated later.

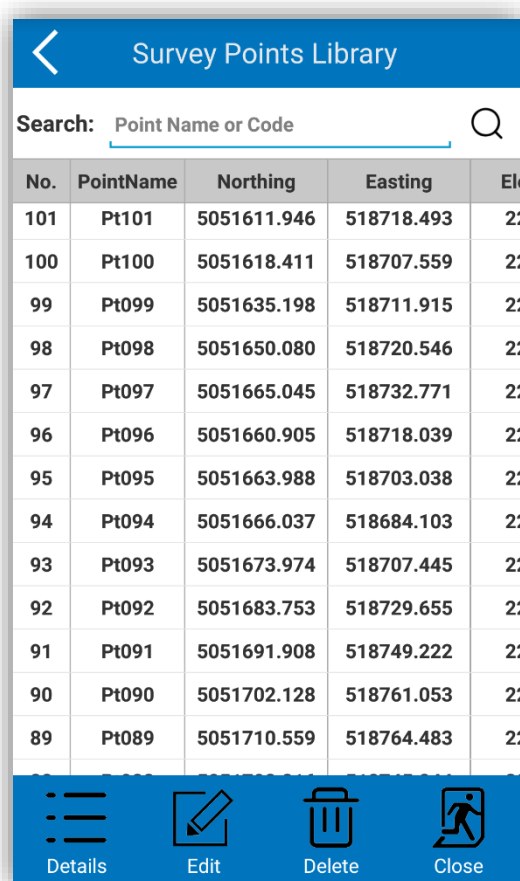

No.	PointName	Northing	Easting	Ele
101	Pt101	5051611.946	518718.493	22
100	Pt100	5051618.411	518707.559	22
99	Pt099	5051635.198	518711.915	22
98	Pt098	5051650.080	518720.546	22
97	Pt097	5051665.045	518732.771	22
96	Pt096	5051660.905	518718.039	22
95	Pt095	5051663.988	518703.038	22
94	Pt094	5051666.037	518684.103	22
93	Pt093	5051673.974	518707.445	22
92	Pt092	5051683.753	518729.655	22
91	Pt091	5051691.908	518749.222	22
90	Pt090	5051702.128	518761.053	22
89	Pt089	5051710.559	518764.483	22

Figure 5.11


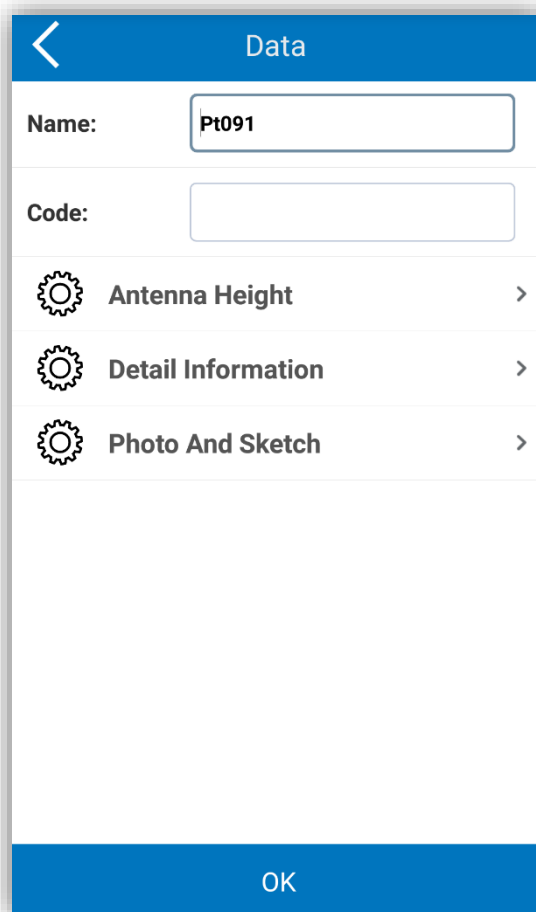


Figure 5.12

Returning to the controls on the main screen, the command with the gear icon opens a screen as in Figure 5.13. From here you can select the type of point to be surveyed. For each type, you will access the settings information screen (we will see these functions in detail later), these settings can be saved by clicking the "Default Configurations" button at the bottom. You can also indicate how to set the code (The same as last point, Mileage assignment code, Code is empty by default) and the increment of the point name, click "Save" to start surveying points with the settings made.

By pressing the command with the writing REC you can actually survey a point, you will access a screen similar to that in Figure 5.14. This screen can change according to the type of point surveying set. From this screen you can access the Photo and Sketch function that we will explain later. By clicking OK, the current point is recorded.

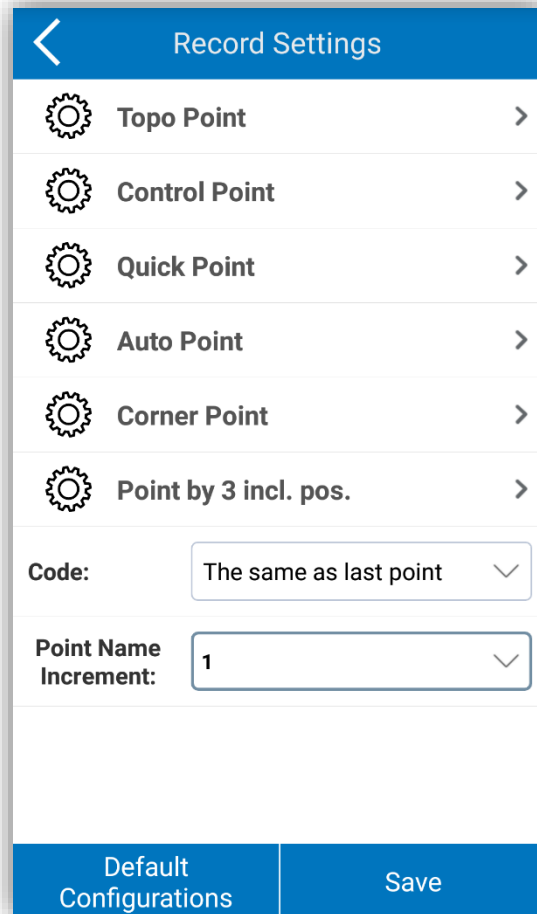

Record Settings

- Topo Point >
- Control Point >
- Quick Point >
- Auto Point >
- Corner Point >
- Point by 3 incl. pos. >

Code: The same as last point

Point Name Increment: 1

Default Configurations Save

Figure 5.13


Topo Point	
Measured point info	
Record	<1/1> Collected
Solution	(27/30) FIXED
HRMS	0.01526
VRMS	0.02020
PDOP	0.3
Northing	5051571.56439
Easting	518734.18954
Elev.	-6.95100
Delay	0
To Last Distance	?
Longitude	009°14'24.426331"
Latitude	045°35'57.297174"
Altitude	-6.95100
Local Time	17:20:19
Local Date	2017-03-15
Base Distance	34.8483
 Photo And Sketch OK	

Figure 5.14

Now let's analyze the commands at the center-bottom of the main screen (Figure 5.8). They are four, the first two change aspect, depending on the selection made. The first, if clicked, opens a drawing tool grid (Figure 5.15), it is possible to draw vector CAD elements during the surveying. The vertices of vector CAD elements are the points acquired while a drawing tool is active.







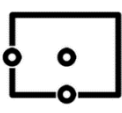




Figure 5.15

You can draw vector CAD elements (connect acquired points to form a vector shape) by activating one of the following drawing tools:

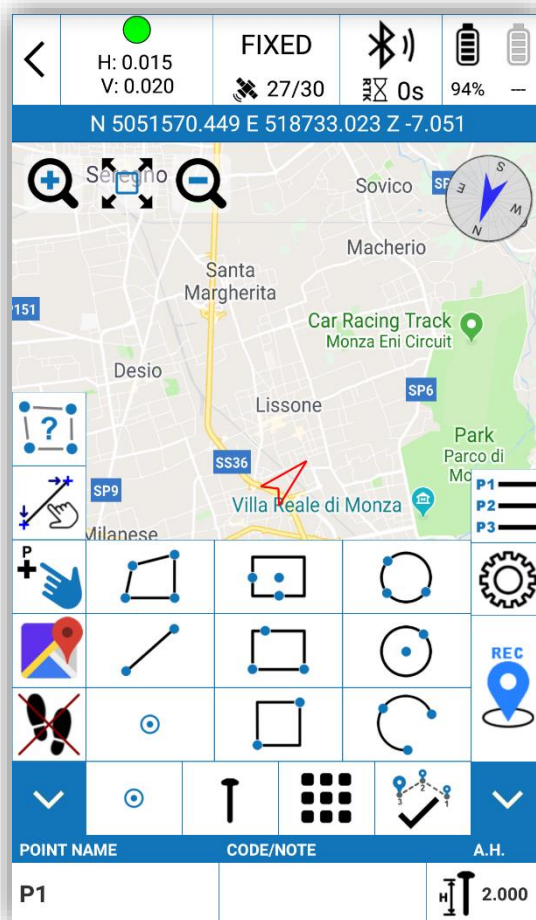	<p>Point</p> <p>Enables the standard simple point acquisition. No vector CAD entities will be created.</p>
	<p>Polyline</p> <p>Enables the acquisition of polylines.</p> <p>While this tool is active, the program will connect all acquired points to form a polyline.</p> <p>Push the CONFIRM button (see below) to end the acquisition of the polyline.</p>

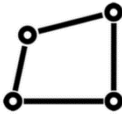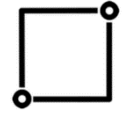	<p>Parcel/Closed polyline</p> <p>Enables the acquisition of parcels/closed polylines. While this tool is active, the program will connect all acquired points to form a closed polyline. Push the CONFIRM button (see below) to end the acquisition and to close the polyline.</p>
	<p>Square by 2 pts</p> <p>Enables the acquisition of a square shape acquiring two points which are at the extremes of the diagonal of the square. The acquisition automatically ends as soon as the second point has been acquired.</p>
	<p>Rectangle by base side + 3rd point on parallel side</p> <p>Enables the acquisition of a rectangular shape acquiring two points that defined one side plus one 3rd point that defines the distance of the opposite parallel side. The acquisition automatically ends as soon as the 3rd point has been acquired.</p>
	<p>Rectangle by center point + 2 points on the mid point of 2 orthogonal sides</p> <p>Enables the acquisition of a rectangular shape acquiring three points: the first point defines the "center" of the rectangle, the second point defines the position of the mid point of one of the sides, the third point defines the position of the mid point of one of the two orthogonal sides to the previous side. The acquisition automatically ends as soon as the 3rd point has been acquired.</p>
	<p>Arc of circle by 3 points</p> <p>Enables the acquisition of an arc of circle acquiring three points that define (in order) the starting point of the arc, a constraint point for which the arc must pass through, the end point of the arc. The acquisition automatically ends as soon as the 3rd point has been acquired. The three points must not be aligned along a straight line.</p>
	<p>Circle by 2 points</p> <p>Enables the acquisition of a circular shape acquiring two points: the first point defines the center of the circle; the second point defines the radius of the circle. The acquisition automatically ends as soon as the 2nd point has been acquired.</p>



Circle by 3 points

Enables the acquisition of a circular shape acquiring three points: the three points must be acquired in order, walking either in a clockwise or anti-clockwise direction along the circular shape to be acquired.

The acquisition automatically ends as soon as the 3rd point has been acquired.

The 3 points must not be aligned along a straight line.

Returning to the general commands, on the opposite side of the drawing command for vector CAD, the button with the confirmation flag is the button that can be used to confirm/exit the drawing function, the action performed by this button depends on the type of active drawing tool and the number of points/ vertices already stored, the table below helps you to discover the operation of this command.

Drawing Tool	# of vertices stored	COMMIT action
Point	-	None
Polyline	< 2	Cancel acquisition
"	>= 2	Store & Restart
Parcel/Closed polyline	< 3	Cancel acquisition
"	>= 3	Store & Restart
Square by 2 pts	< 2	Cancel acquisition
Rectangle by base side + 3rd point on parallel side	< 3	Cancel acquisition
Rectangle by center point + 2 points on the mid point of 2 orthogonal sides	< 3	Cancel acquisition
Arc of circle by 3 points	< 3	Cancel acquisition

Circle by 2 points	< 2	Cancel acquisition
Circle by 3 points	< 3	Cancel acquisition

Then returning to the main screen, the command that in Figure 5.8 has the icon of a pole will open a list like the one in Figure 5.16. By selecting one of the available options, it is possible to set the type and mode of acquisition of the points to be surveyed (Topo Point, Control Point, Quinck Point, Auto Point, Corner Point, Stop&Go, Point by 3 incl. pos). Each of these options will allow you to enter a screen for general settings.

Let's see the various types of points.

Topographic point (Figure 5.17): In this case you can enter two groups of settings, those related to the quality of the solution and those related to the recording options. The settings of the first group will be those taken into consideration by the colored indicator illustrated in paragraph 5.1. In the recording options you can establish the number of points to be surveyed and averaged over a time interval x , always established by the user.

Control Point (Figure 5.18): In the control settings interface, you can enter two groups of settings, those related to the quality of the solution and those related to the recording options, as for the topographic point, however the possible settings are generally greater for this type of point. In the recording options we can set the number of readings to mediate, the average GPS interval, the number of repetitions of the reading and the fixed delay. If the fixed delay is 15s, it means that the registration of the coordinates takes place after 15 seconds from the click of the registration command. If the average GPS interval is 2s and the repetition number of the readings is 10, it means that it performs 10 times the readings of the point and for each set of readings it makes a reading every 2 seconds. If the repetition number is 2, it will collect 2 sets of data. The registration of this type of points generates a window as in Figure 5.19. At the end of the survey the screen in Figure 5.20 will be displayed, pressing OK will display the message "Control points report generated" (Figure 5.21). Click OK if you want to view the report (Figure 5.22, example of report).

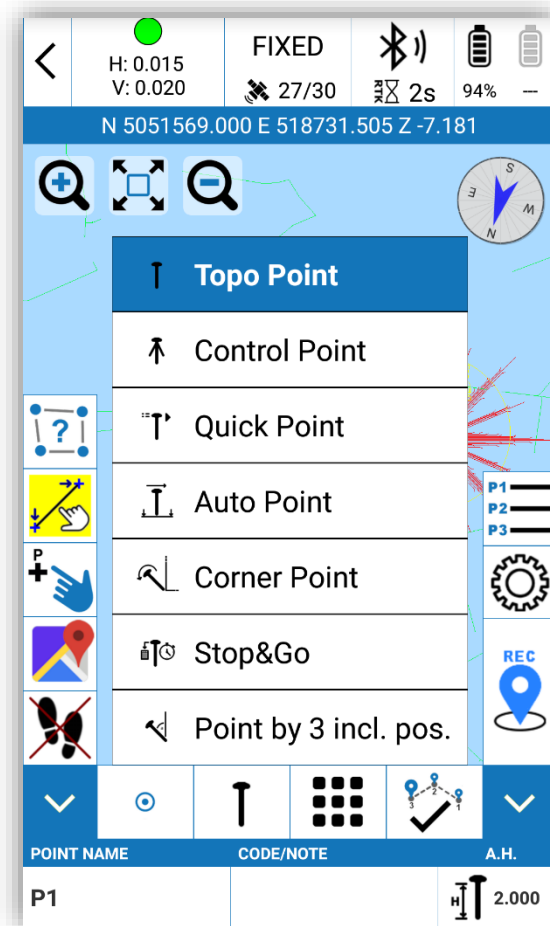


Figure 5.16

← Topo Point Settings

Quality Checks

Solution Limit: FIXED

HRMS Limit: 0.1

VRMS Limit: 0.1

PDOP limit: 3.0

Diff. corr. delay limit [s]: 30

Record Options

Average GPS Count: 1

Averaging delay [s]: 15

Save

Figure 5.17

Control Point settings

PDOP limit:	3.0
Diff. corr. delay limit [s]:	5
Plane Limit:	0.03
Elevation Limit:	0.05
Record Options	
Average GPS Count:	5
Average GPS Interval:	2
Repeat Count:	1
Averaging delay [s]:	1

Save

Figure 5.18

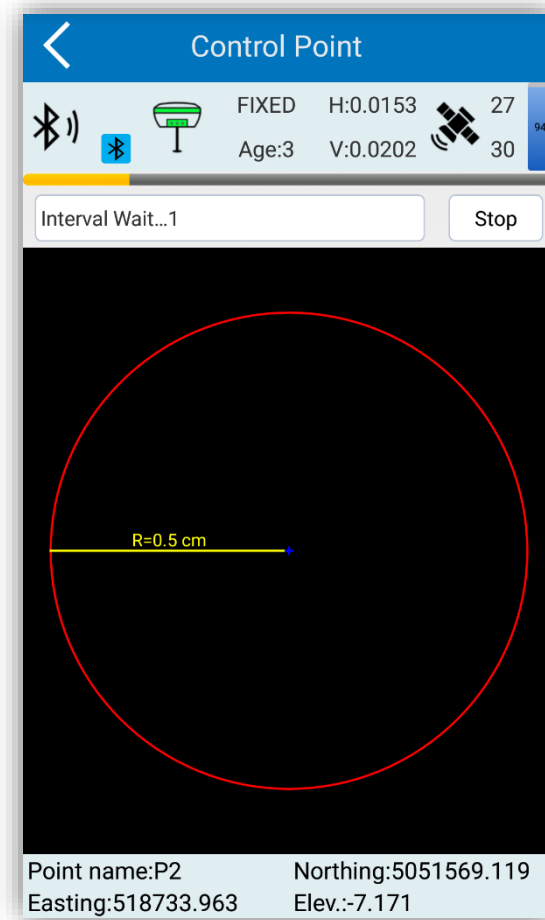


Figure 5.19

<
Control Point

Name:

Code:

Measured Height:

Measurement Type:

Measured point info	
Record	<5/5> Collected
Solution	(27/30) FIXED
HRMS	0.01526
VRMS	0.02020
PDOP	0.3
Northing	5051569.45302
Easting	518734.31290
Elev.	-7.14100
Delay	1
To Last Distance	3.4176
Longitude	009°14'24.431731"
Latitude	045°35'57.228774"
Altitude	-7.14100

📷
Photo And Sketch
OK

Figure 5.20

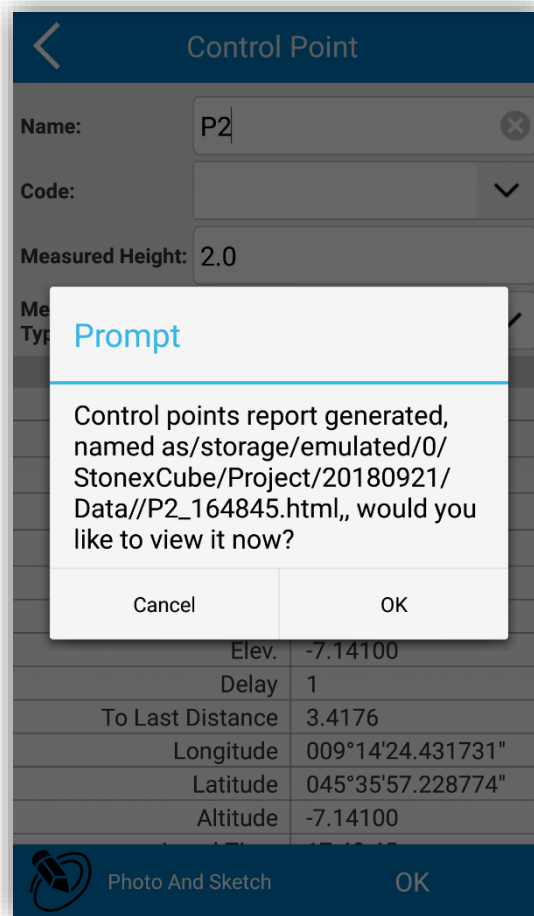


Figure 5.21

GPS control point measurement report		
Basic info		
Project Name	(20180921 - stonex-1.PD)	
Operator		
Report date	2018-12-06 16:49:02	
Antenna Height	2.14	
Collect date	10	
Coordinate System		
Coordinate system name	Default	
Ellipsoid	Ellipsoid Name	WGS-84
	Semimajor axis	6378137.0
	1/f	298.257223563
	Projection Mode	Gauss Krüger
	Central Meridian (dd.mmss)	9.000000000
	False Northing	0.0


Figure 5.22

Quick Point: When a quick point type is selected, if RTK settings are used, the quick point will be recorded once the registration button is clicked; if you do not have saved settings, a screen like the one in Figure 5.23 will appear, where you can set some values on the quality of the solution. In any case, no save pop-up will appear.

Auto point (Figure 5.24): For the automatic point it will also be necessary to set values for the quality of the solution and the recording options. After clicking on the registration button, at the top of the main interface buttons will appear to put in "Pause"/"Start" and to end "Close" the survey.

Corner Point (Figure 5.25): In the setting interface of corner points, it is possible to set the quality checks and the number of readings to be averaged. Each time a corner point is recorded, the point must be registered at least 15 times and the distance between two different points should be greater than 1/10 of the pole height. You can then calculate the

coordinates of the center of the corner through the coordinates of the corner points, the coordinates of the center of the corner are the coordinates of the calculated corner point.

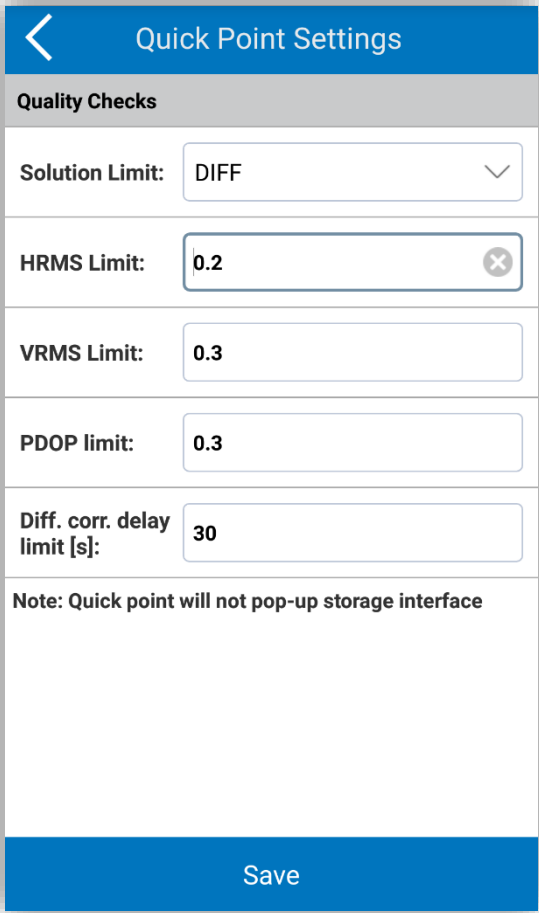

Quick Point Settings

Quality Checks

Solution Limit: DIFF

HRMS Limit: 0.2

VRMS Limit: 0.3

PDOP limit: 0.3

Diff. corr. delay limit [s]: 30

Note: Quick point will not pop-up storage interface

Save

Figure 5.23

Auto Point Settings

Quality Checks

Solution Limit: SINGLE

HRMS Limit: 10.0

VRMS Limit: 10.0

PDOP limit: 50.0

Diff. corr. delay limit [s]: 3000

Record Options

Record mode: Record according to Time

Interval (seconds or meters): 30.0

Save

Figure 5.24

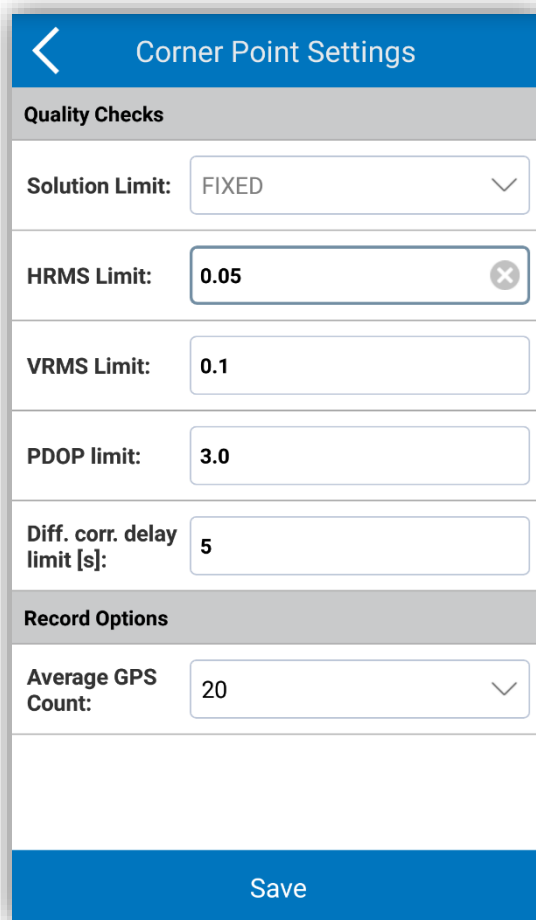


Figure 5.25

Stop&Go (Figure 5.26): In case of registration of Stop & Go points it will be necessary to set the number of epochs and activate the recording of the raw data. After starting the recording, a screen similar to the one in Figure 5.27 will be displayed. At the top we can see the recording phase, we can then stop the acquisition by pressing down the Stop button (the button will turn into OK if the acquisition phase ends without be blocked). As with many acquisitions, even for this type of points you can access (below) the function Photo and Sketch, we will discuss this topic in the following chapters.

Point of 3 mis. inc. (Figure 5.28): Available only with GPS with electronic bubble. It will be necessary to set values for the quality of the solution and for the registration options, as we have seen repeatedly for other types of acquisition. Once the recording has started, a screen will appear as in Figure 5.29, just click the buttons on the left to register the points individually. Graphically below you will see the colored circles, related to the points acquired.

Once the acquisition is finished, the screen in Figure 5.30 will be displayed, press OK to save the point.

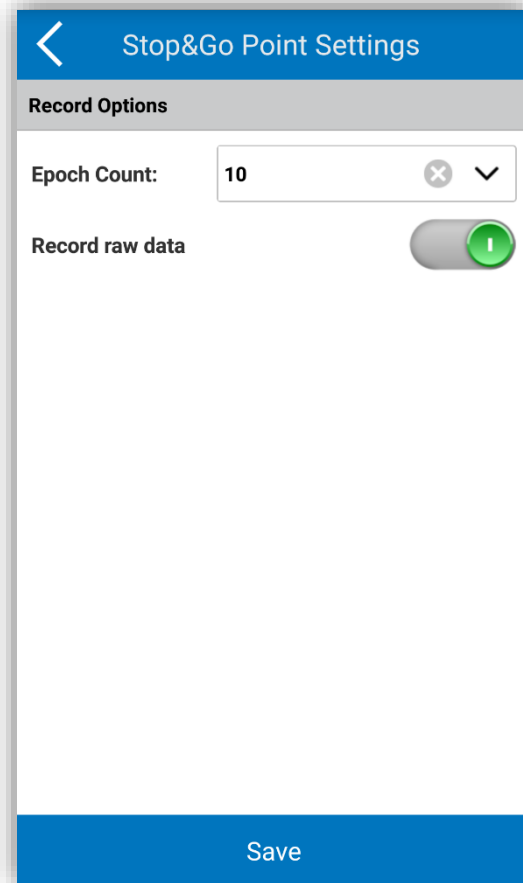


Figure 5.26

Measured point info	
Record	<10/10> Collected
Solution	(7/9) FIXED
HRMS	0.02324
VRMS	0.03348
PDOP	2.8
Northing	5049561.47657
Easting	518736.58440
Elev.	229.25010
Delay	1
To Last Distance	0.8233
Longitude	009°14'24.884240"
Latitude	045°35'57.637770"
Altitude	229.25010
Local Time	17:27:38
Local Date	2018-12-06
Base Distance	13293.5628

Photo And Sketch OK

Figure 5.27

Tilt Point Settings

Quality Checks

Solution Limit: FIXED

HRMS Limit: 0.05

VRMS Limit: 0.1

PDOP limit: 3.0

Diff. corr. delay limit [s]: 5

Record Options

Average GPS Count: 3

Averaging delay [s]: 3

Save

Figure 5.28


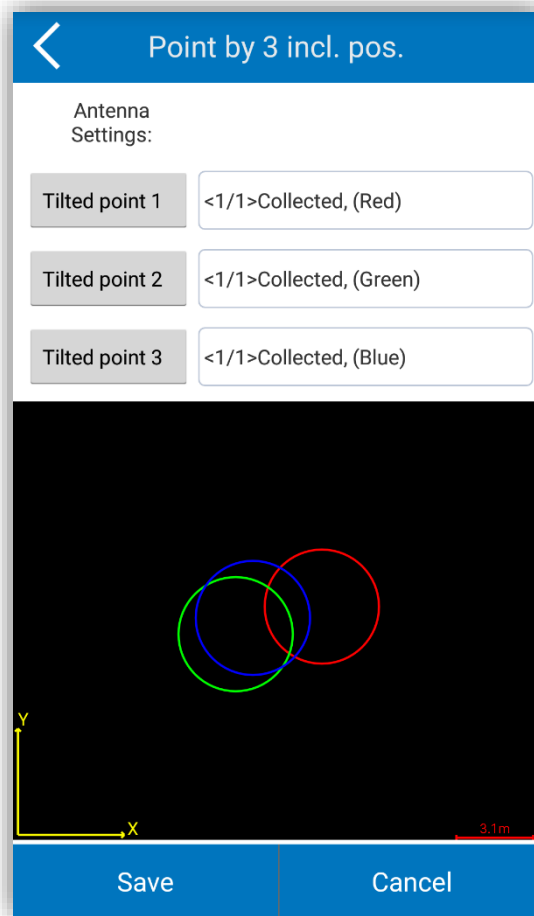


Figure 5.29

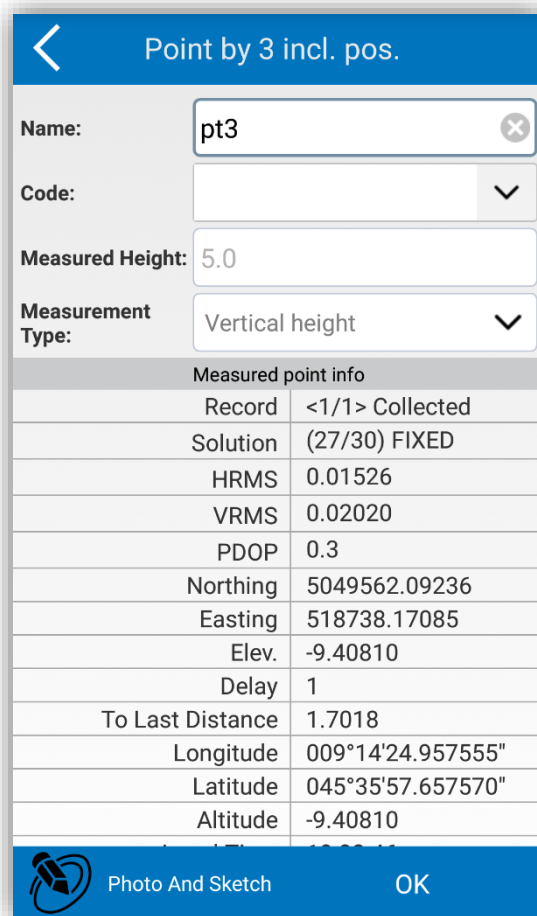

Point by 3 incl. pos.

Name:

Code:

Measured Height:

Measurement Type:

Measured point info	
Record	<1/1> Collected
Solution	(27/30) FIXED
HRMS	0.01526
VRMS	0.02020
PDOP	0.3
Northing	5049562.09236
Easting	518738.17085
Elev.	-9.40810
Delay	1
To Last Distance	1.7018
Longitude	009°14'24.957555"
Latitude	045°35'57.657570"
Altitude	-9.40810

Photo And Sketch OK

Figure 5.30

Let's go back to analyzing the commands of the general interface (Figure 5.8), the button to the right of the button just explained, opens the screen on surveying instruments (button has an icon with nine small boxes), Figures 5.31. From the top the commands available are: Use last collected point, Use point from list, Use point from CAD, Pause entity-Collect points and Resume paused entity are commands to be used when activating a vector drawing tool, they are simple and easy to understand. Commands: Hidden Point-dist-dist intersection, Vector and Hidden Point-two alignment intersection are part of the COGO functions discussed later in this manual. The last two commands, CAD Layers and Entity List will open the screen in Figure 5.32 and the one in Figure 5.33. They are commands for the management of layers and graphic entities. In the second case, you can select an entity, press the Edit button and access the screen in Figure 5.34, where you can make changes to the type of line, the color, the layer, the name.

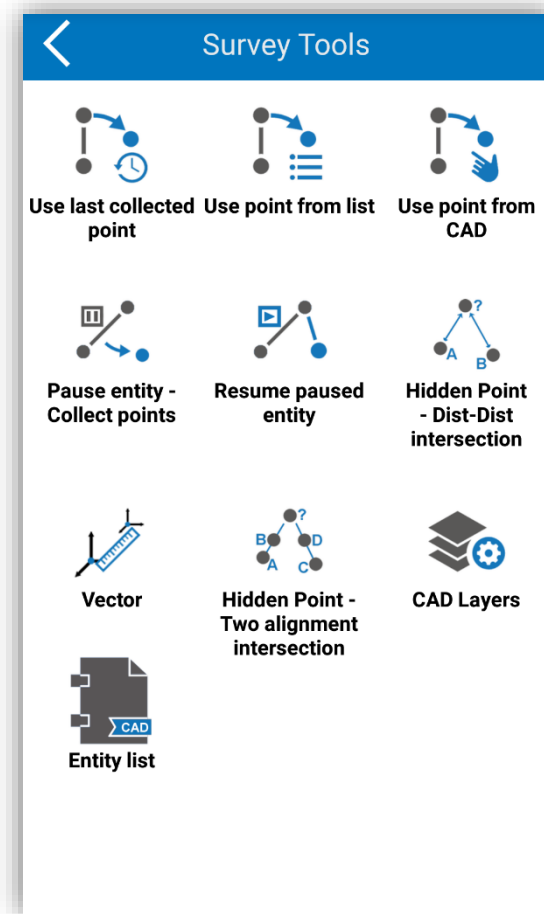


Figure 5.31



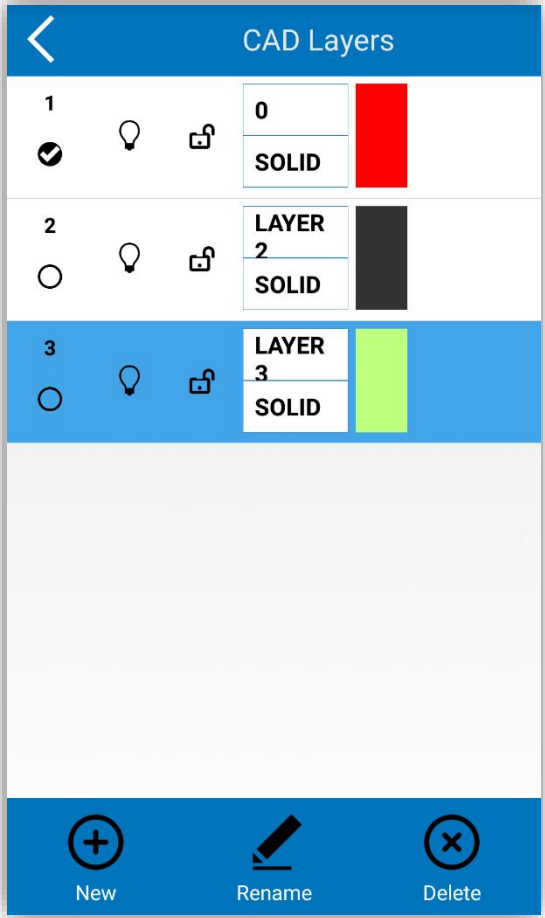


Figure 5.32

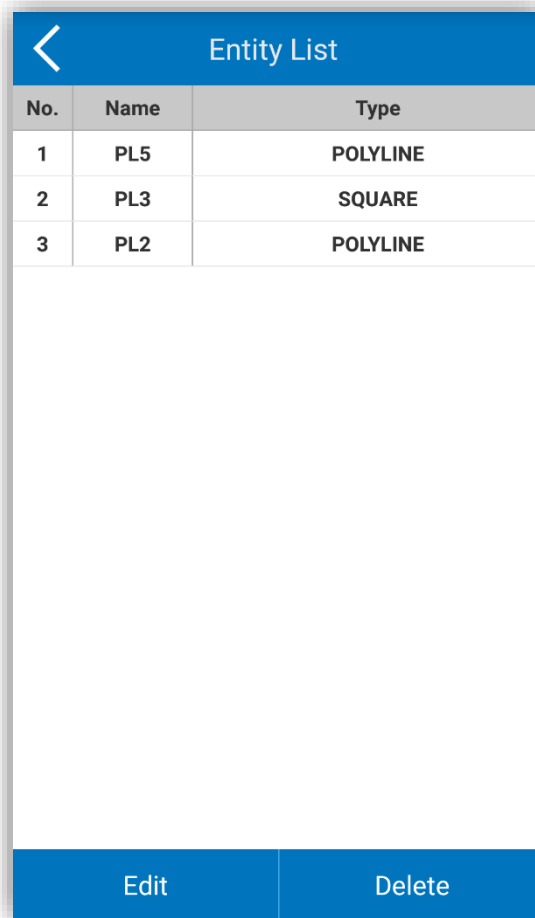

No.	Name	Type
1	PL5	POLYLINE
2	PL3	SQUARE
3	PL2	POLYLINE

Figure 5.33

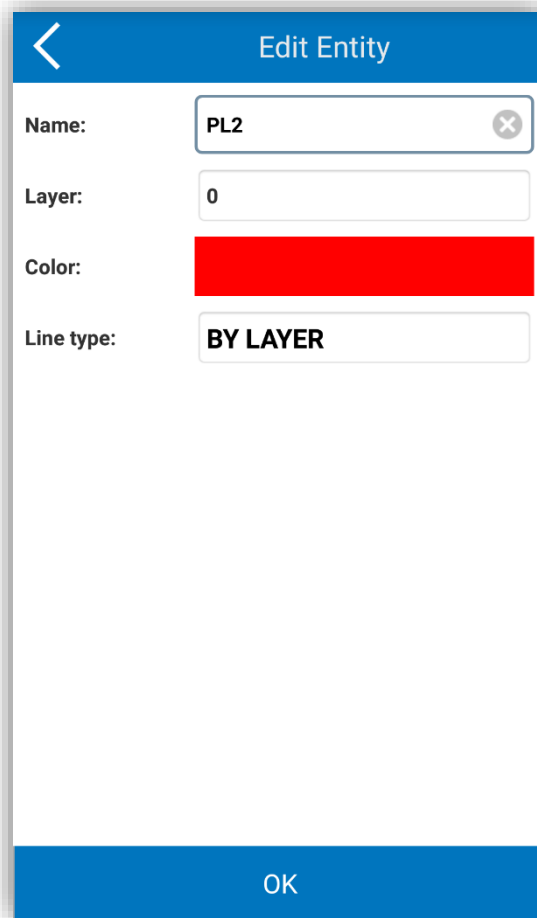

Edit Entity

Name: PL2

Layer: 0

Color:


Line type: BY LAYER

OK

Figure 5.34

5.2 Point Stakeout

Click "Survey" and "Point Stakeout " to enter the Points Library as in Figure 5.35. Select a point and click "OK" to enter the stakeout interface as shown in Figure 5.36.



No.	PointName	Northing	Easting	Ele
195	Pt195	5049561.479	518736.590	23
194	Pt194	5049597.963	518720.983	22
193	Pt193	5049597.964	518720.979	22
192	Pt192	5049597.966	518720.988	22
191	Pt191	5049597.974	518720.986	22
190	Pt190	5049597.959	518720.989	22
189	Pt189	5049597.972	518721.000	22
188	Pt188	5049597.987	518721.014	22
187	Pt187	5049597.973	518721.017	22
186	Pt186	5049597.978	518721.002	22
185	Pt185	5049597.989	518720.979	22

Figure 5.35

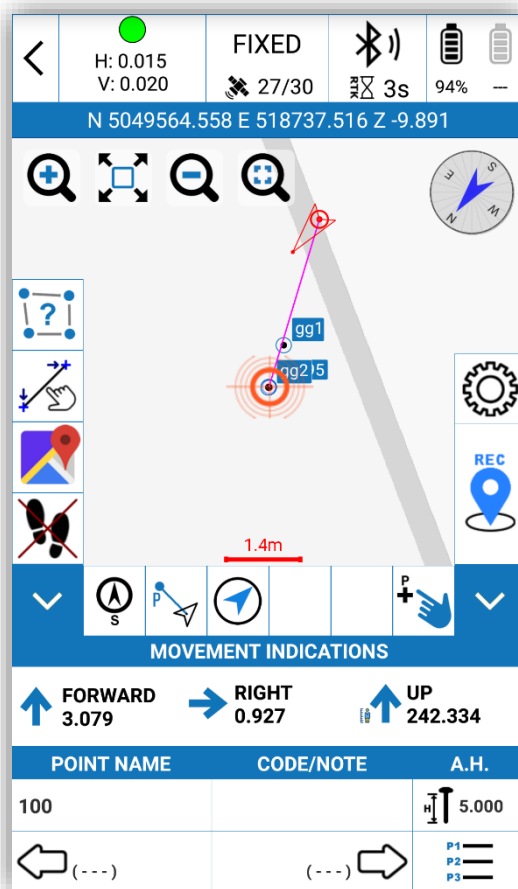


Figure 5.36

We analyze from the bottom all the information and commands available. The first command at the bottom right hand side brings directly to the point library (Figure 5.35), in which you can change the selected point.

The buttons with the arrows move to the previous and next point, above these commands are always available information about the current point: name, code, pole height.

Below the heading MOVEMENT INDICATIONS, we find the indications to approach the current point and perform a stakeout in tolerance. If the indications show the written IN TOLERANCE, it means that no further changes to the position are required. The default tolerance is set to 20 cm, it is always possible to modify the general settings (Figure 5.37) by clicking on the right side, on the button with the gear wheel icon.

There are several options for establishing the reference for movement indications. By pressing the button that in Figure 5.36 has the compass symbol with an S below (the button changes appearance depending on the selection made), you can expand the menu as in

Figure 5.38, you can then choose which reference to set. The options are: North, South, Sun, Shadow, Point, Line. If you select the North or South options, in order to have the right movement indications, you must position the device taking care to check the compass, in order to have the cardinal point selected in front of it. If you select Sun (or Shadow) the screen will be like the one in Figure 5.39. In the case of the Sun, the yellow indicator on the map will help to position itself with the sun in front, in the case of Shadow the indicator on the map will help to position itself with the sun behind. If you want to select Point as a reference, Cube-a will take you directly to the point library to allow you to select a point. Line indicator allows you to draw a line between two points and based on this Cube-a will give you information about the movement. To draw to line, you can use the command with the hand icon and the letter P (point selection command). The selection of a point (button with the hand on the right) generates the screen as in Figure 5.41, here it will be possible to see the selected point and all the ones available. You can change the selection, you can directly stake the selected point, you can view and edit the information related to the point and finally you can set the point as the first or second vertex of the line (Line indicator). The screen with the drawn line will be as in Figure 5.40.

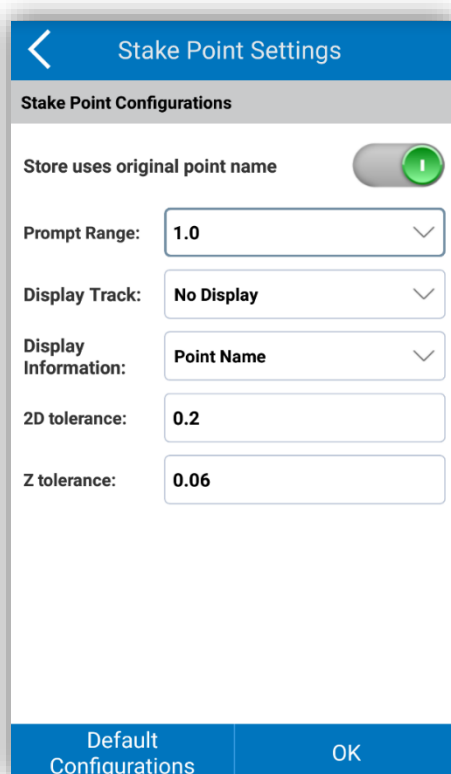


Figure 5.37

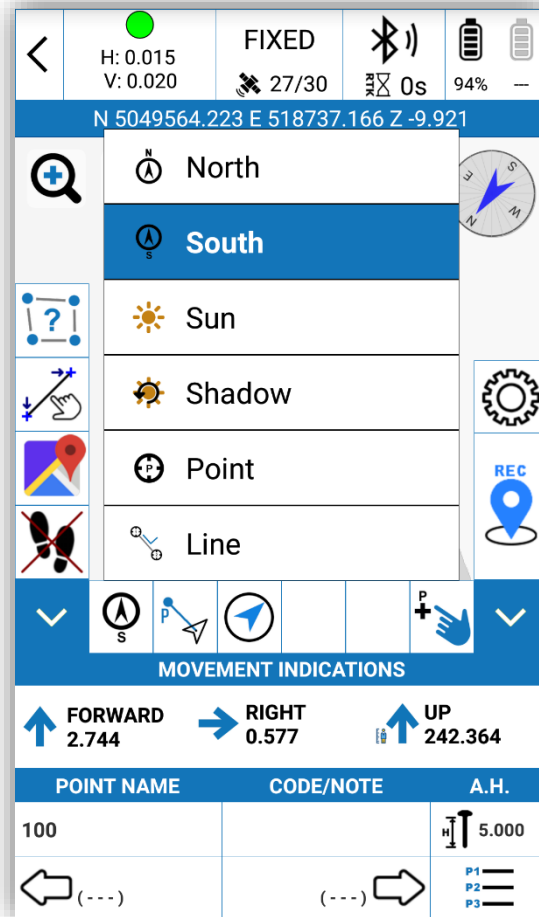


Figure 5.38


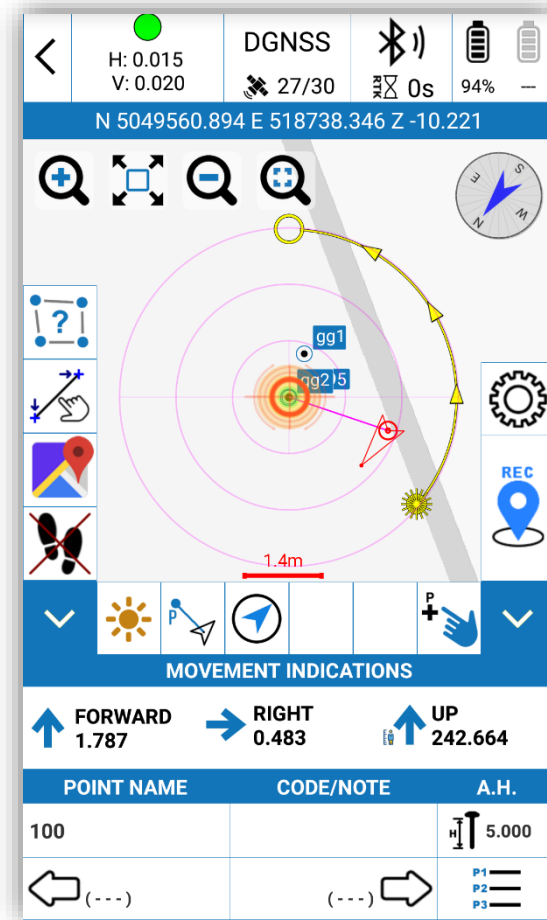


Figure 5.39



Figure 5.40

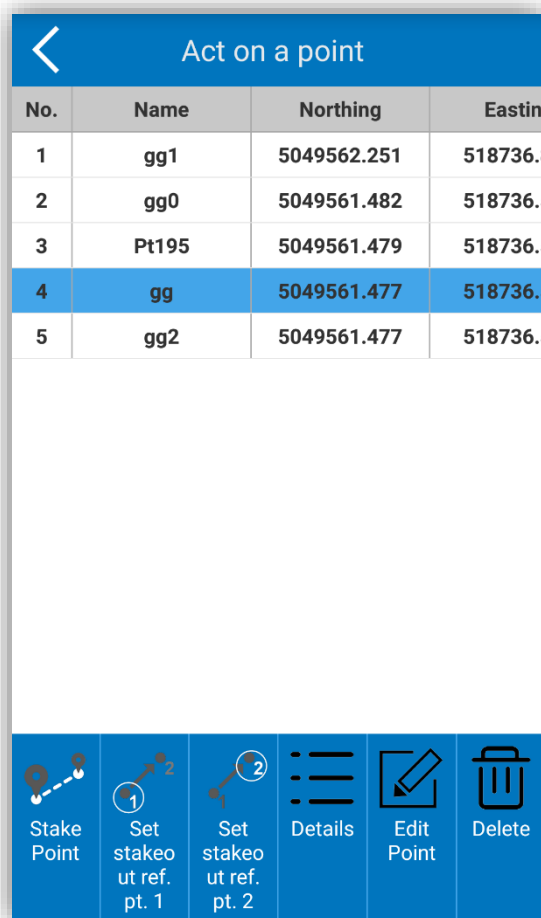

No.	Name	Northing	Eastin
1	gg1	5049562.251	518736.8
2	gg0	5049561.482	518736.5
3	Pt195	5049561.479	518736.5
4	gg	5049561.477	518736.5
5	gg2	5049561.477	518736.5

Figure 5.41

Returning to the commands on the main screen, the two remaining buttons, beside the command for the reference indicator, are two commands to change the map display. The first will display the classic arrow screen with the direction as in Figure 5.36, the second will start a display mode with a large directional arrow in the middle of the map.

When we are stakeout, the graphics of the map changes to facilitate the work of the surveyor. In Figure 5.39, we note that on the map there are concentric circles, these circles are generated at a set distance (in the general settings of stakeout, command called Prompt Range), the center of the circles is the point to stake. Also, among the zoom commands, at the top left, a command will be displayed, the fourth, which only appears in stakeout mode. The command in question generates a screen as in Figure 5.42, the colored concentric circles indicate that we are near the point to stake, if we are in the green area we are in tolerance.

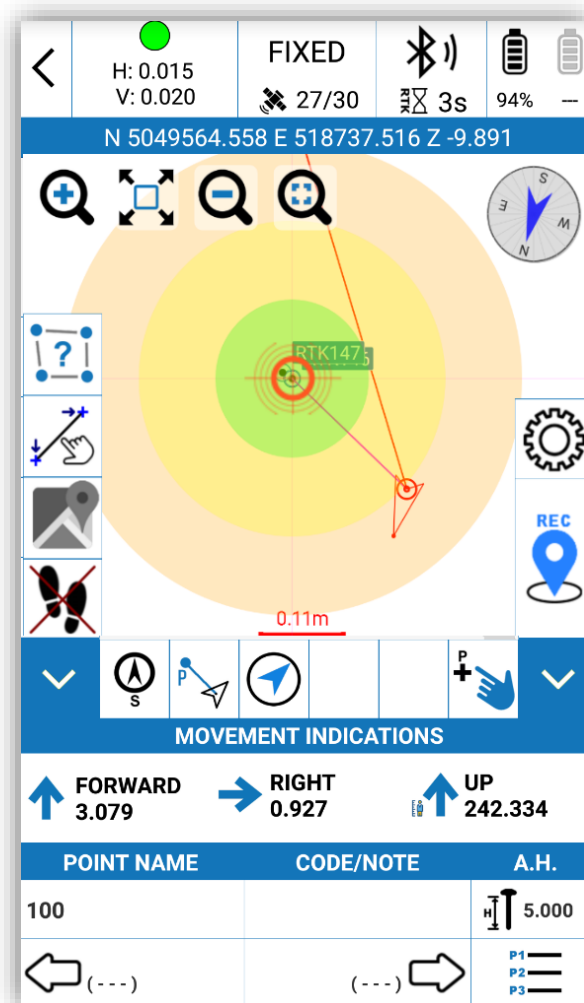


Figure 5.42

5.2.1 Photo and Sketch

The Photo and Sketch command (Figure 5.43) allows you to associate a photo with a point. To start the Photo and Sketch function, you must press the relative button that can be found at the bottom of the screen while you are:

- reviewing the details of the point just collected;
- modifying the data of a point from the library of survey points.

The photo will be taken using the built-in camera of your mobile device and will be stored as a JPEG file in the Photos folder of the active project. The image file will have the same name as the name of the collected point.

You can also draw on the image and insert:

- Text notes
- Information about the point (name, coordinates)
- Arrows
- Simple sketches (hand drawn polylines).

Each of the above elements can be moved and rotated freely. Images can also be deleted.



Figure 5.43

5.3 Line Stakeout

Click on "Survey" and "Line Stakeout" to enter the lines library, select a line, click "OK" to set the parameters, click "OK" again to access the line stakeout interface. The main screen for stakeout is in Figure 5.44. The line library can always be consulted by clicking the command at the bottom right, the one with the list of points that we have already met for other types of survey. In the library you can edit a line, the reference screen for this command is the one in Figure 5.45. Through this function you can enter a line, enter the name of the line, the start and end point, set the azimuth and the length of the line, then it will be calculated automatically. You can also just set the start point of the line and its length.

You can click on "Options" (in the Lines Library screen) to check if "The end chainage of last segment as the start chainage of the next segment." is enabled. If the item is checked, it means that all the lines are connected in a single total line.

By clicking "Import", if you choose the command "Import Line Library from file" and set the start chainage (the field should be empty), you can import files with *.sl format. If, on the other hand, you select "Import Coordinates file" as the import format and set the start chainage (which should be empty), you can import files in *.dat format. Imported files can be lines of other projects or lines modified previously, duplicates are not allowed.

By clicking "Export" you will need to select the export path and enter the file name. The project line file (.sl) can be exported to a specific path and used for other operations, or it can be imported into another project.

By clicking OK you access a screen as in Figure 5.46, from here you can enable the division of the line into points. This command will give the possibility to enter the progressive number, consult the interval and determine how to divide the progressive (intervals which will in turn be the subdivision parts of the line or the length of a part).



Figure 5.44

< Line parameters

Road Name:

Start chainage:

Azimuth:

Line length:

Start Point(gg2,5049561.477,518736.584)

End Point(gg,5049561.477,518736.589)

OK

Figure 5.45

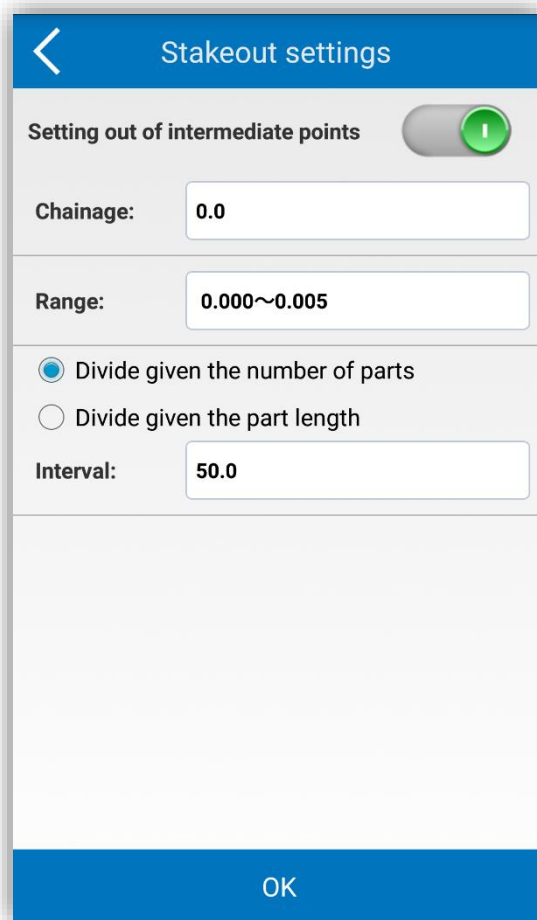


Figure 5.46

In the main stakeout screen (Figure 5.44) the commands with the arrows on the left are used to move from one line to another. The commands below those have been illustrated previously in paragraph 5.1. The arrows at the bottom instead move on the steps of the line to be staked.

Now let's see the commands on the right side, the first command from above (with the pole and the + symbol) leads to the screen in Figure 5.47. There are two ways to add stakes. The first way is to calculate the coordinates through the chainage and the offset distance; to perform this operation it is necessary to enter the chainage, the offset distance and the offset angle. The second way is to calculate the offset and distance using the coordinates; to do this you need to enter the name, North, East and altitude, or search for the coordinates from the library or take the current GPS coordinates of the receiver. After setting the parameters in the Add Stake screen, pressing "OK" will show a message on the display with the calculated

result. Click "Stakeout" to stakeout and register this point in the points library. By clicking "Cancel", the point will not be staked but you can still store it in the points library.


By clicking the command with the gear icon, below the command for adding stakes, you can set the line stakeout options (Figure 5.48). You can set the prompt range, the chainage prompt step, the warning range (tolerance) and whether to display the track.

Prompt range: Assume the line as the center and assume the prompt range as the width of both sides, generating six parallel lines. The area contained in the six parallel lines is the prompt range.

Chainage prompt step: the software warns us when the current point is close to the maximum number of chainage steps.

Warning range: the software will notify us when the current point is below the danger distance.

By clicking on "Default Configurations", the line stakeout configuration will be reset to the default configuration.

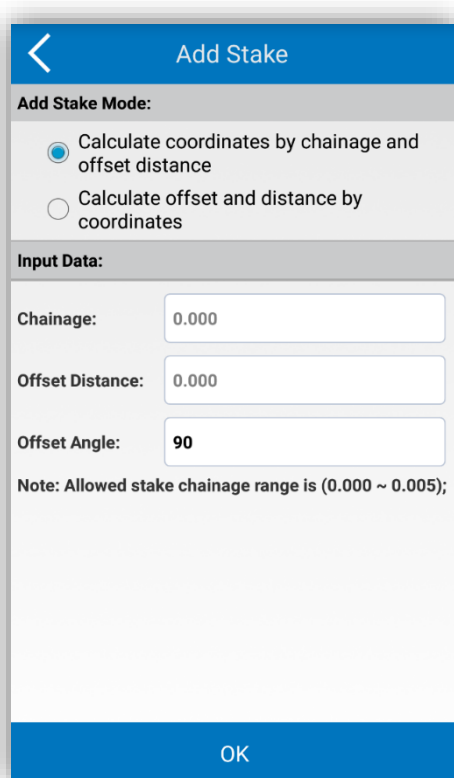

Add Stake

Add Stake Mode:

- Calculate coordinates by chainage and offset distance
- Calculate offset and distance by coordinates

Input Data:

Chainage: 0.000

Offset Distance: 0.000

Offset Angle: 90

Note: Allowed stake chainage range is (0.000 ~ 0.005);

OK

Figure 5.47

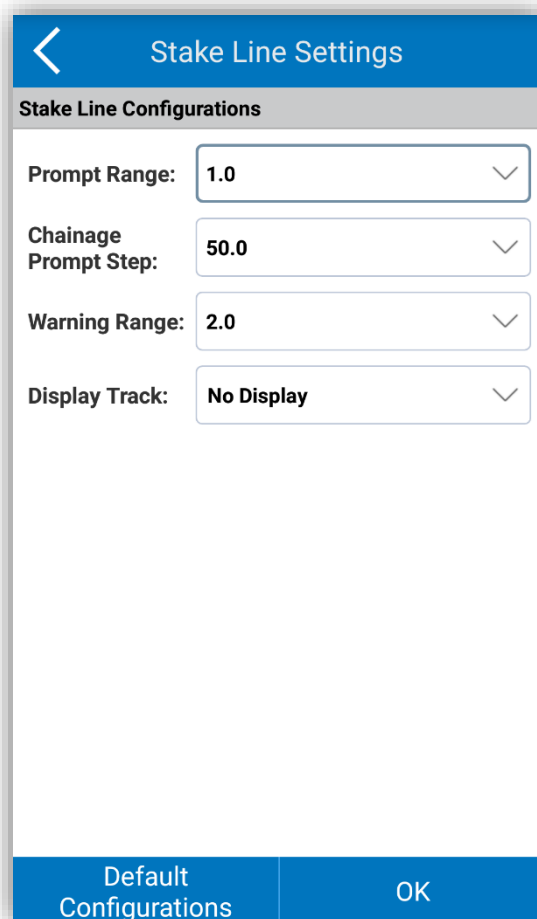


Figure 5.48

The remaining commands of the interface have the same functionality and appearance as those shown in paragraph 5.2, points stakeout.

Steps to stakeout a line:

Depending on the project to be processed, modify the line to be staked in the library or import a file.

Select the line to stakeout and click OK to access the line stakeout interface where the green flag indicates the starting point, the red flag indicates the point of arrival, the circle indicates the target point and the arrow indicates the direction of movement.

Direction of movement: Follow the directions indicated in the MOVEMENT INDICATIONS bar, after setting a reference for the indicators (North, South, Sun, Shadow, Point, Line).

When the line offset on both sides is within the established range, parallel lines will be generated on both sides of the line to be staked according to the "prompt range" settings.

If you need to add a stakeout point to the line during stakeout, click on the add stake button (detailed in this section) to set it and define its position, then click OK to show the result screen.

5.4 Elevation Control

Elevation Control tool lets you to "stakeout heights".

The tool will display the difference between the current GPS height and a given reference height.

If the height difference is positive then the program will show "cut" followed by the absolute difference value: this means that to reach the reference height you must perform a "height cut", that is excavate the soil or just move down the GPS pole if it not yet touching the ground.

If the height difference is negative then the program will show "fill" followed by the absolute difference value: this means that to reach the reference height you must perform a "height fill", that is fill some soil or just move up the GPS pole if you are just going to mark level of the reference height.

Reference height(s) can be defined in different ways:

- Import a Triangulated Irregular Network file (TIN or SJW file types)
- Add Triangles manually (by specifying the coordinates of its 3 vertices)
- Define a plane by 2 points (one 3D point plus one 2D point plus the slope in the direction point 1 > point 2)
- Define a plane by 1 point (one 3D point plus north and east slopes).

5.5 Geophysical Stakeout

Geophysical Stakeout tool is an expansion of the Line Stakeout tool.

While with the Line Stakeout tool you can define uncorrelated lines, with the Geophysical Stakeout you can define sets of parallel lines to a previous defined line.

For example, you define an initial line A through two given points, then you define/add a set of secondary lines, parallel to the line A, by specifying how many lines you want (at the right and at the left sides of the given line A).

This tool is useful when you have to stakeout points which are all arranged along parallel lines.

When staking out a line you have the same options of the standard Line Stakeout tool: you can stakeout the line without splitting it in parts or you can stakeout specific points on the line (split the line in equal parts or split it by part length).

5.6 View in Google Earth

This command allows you to view the active survey using the Google Earth application, so you can also view it in 3D. To use this service, the Google Earth application must be installed on your device.

Note: points and CAD entities are "clamped to ground", that is, the heights are ignored, and all features are placed on the ground following the terrain.

6 Software introduction – Configure

By clicking on "Configure", you can access a submenu with seven commands (Figure 6.1): Coordinate System, Record Settings, Display Settings, System Settings, Survey Area Settings, Layer Settings, Administration.

6.1 Coordinate System

By clicking on "Configure" and on "Coordinate system", you can access the screen in Figure 6.2. All options are editable.

By clicking on "Use existing" at the top, you can choose between three options. "Local Disk" to import coordinate systems saved on the device (*.SP and *.EP files are supported). "QR code" in order to scan the QR code to acquire the parameters of the coordinate system. "Predefined Projections" allows access to the collection of projections divided by country (Figure 6.3).

Ellipsoid: This command opens a screen where you can set the ellipsoid name, which supports parameters already defined or customizable. To set a custom ellipsoid it is necessary to set the value of the semimajor axis and the 1/f flattening ratio, which should be consistent with the ellipsoid used for the calculation of the parameters.

Projection: Usually the most used projection is Gauss Krüger; after connecting the device, the central meridian can be automatically calculated by clicking on the classic drop icon (Figure 6.4, icon on the right side) or manually entered with the exact value. The common parameters of the projections are set as follows: False Northing 0, False Easting 500000, Scale Factor 1, Projection Height at low altitudes 0, Latitude of Origin 0.

ITRF Conversion: Enable/disable ITRF conversion. To enable ITRF conversion, choose the type of conversion, enter the reference time (year of source coord.) and enable or disable the speed input (velocity). If the speed is enabled, the parameters VX, Vy and Vz must be entered.

The 7 parameters; 4 parameters/Horizontal Adjustment; Vertical Control Parameter; Vertical Adjustment Plane; Geoid file; Local Offsets can be enabled or disabled and will generate screens where it will be possible to set working values.

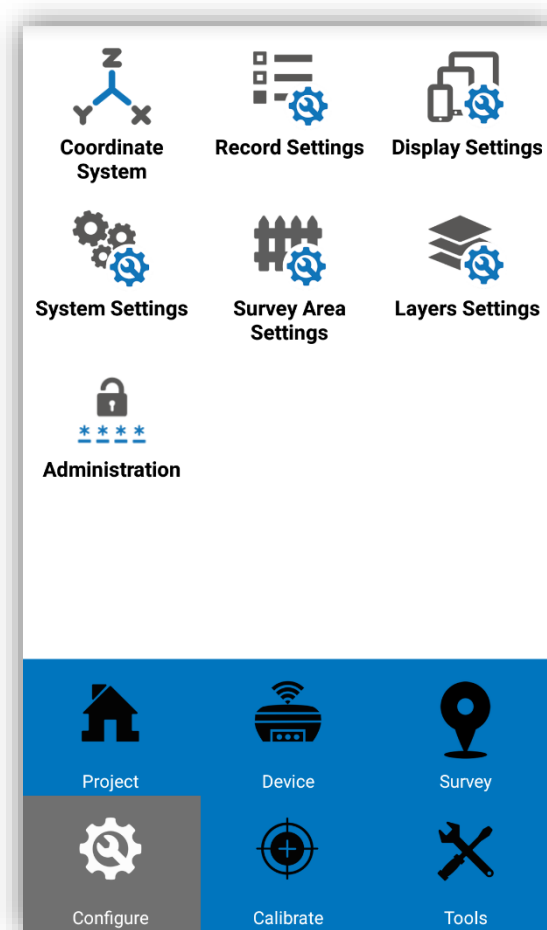


Figure 6.6.1

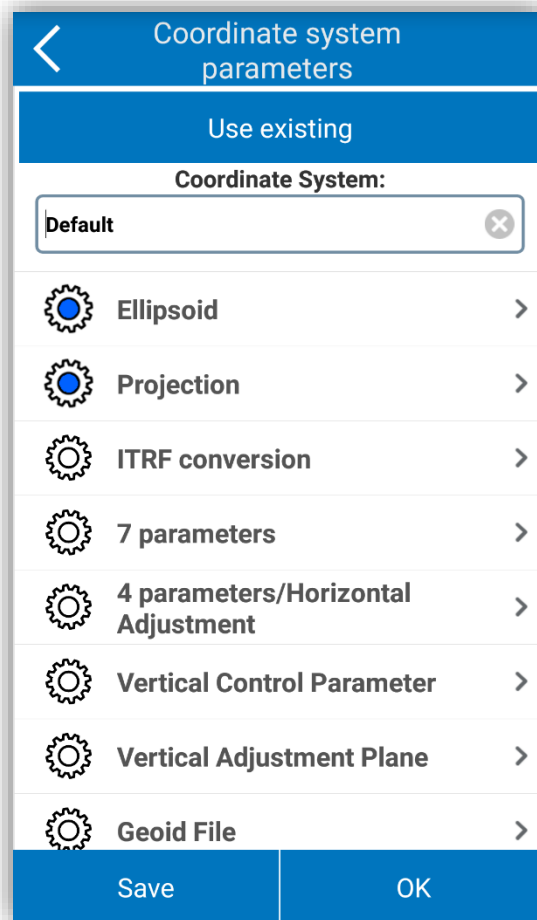


Figure 6.6.2

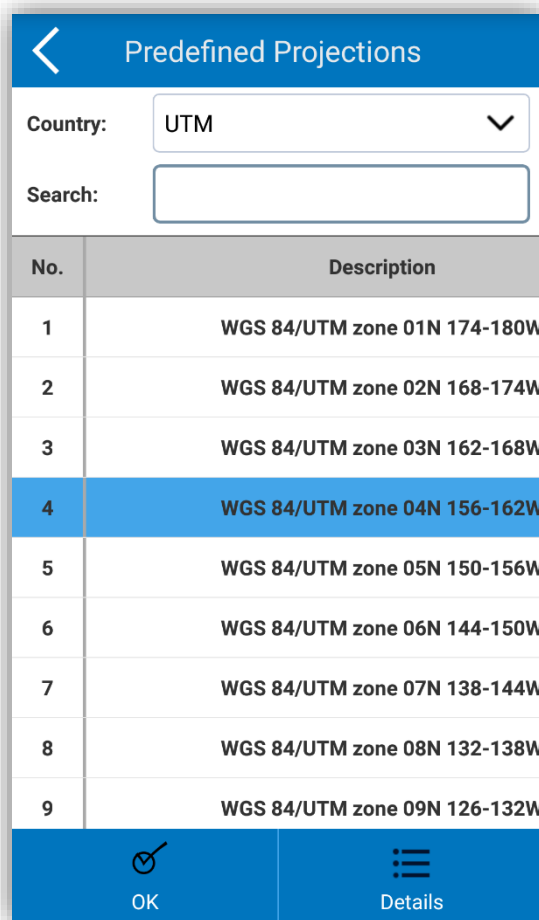



Figure 6.6.3

< Projection

Projection Mode	Gauss Krüger ∨
Central Meridian (dd.mmss)	9.000000000 
False Northing	0.0000
False Easting	500000.0000
Scale Factor	1.00000000
Projection Height	0.0000
Latitude of Origin (dd.mmss)	0.000000000

OK

Figure 6.6.4

6.2 Record Settings

Click on "Configure" and then on "Record Settings" (this function has been explained in detail also in paragraph 5.1, Figure 5.13), in this way it will be possible to set the settings for saving topographic points, control points, quick points, automatic points, corner points and points with tilt. You can set the code and choose how to increase the point names. The default configuration is also supported.

Code: you can set it as same to the last point, as a mileage or leave it blank.

Point Name Increment: naming rule for saved points. For example, if the increment point name is 2 and the default point name of the first saved point is pt1, the second will be pt3, and so on.

6.3 Display Settings

Click on "Configure" and then on "Display Settings" to access the function. This function is intended to set the information that will be shown in the survey interface. It is also possible to filter the quantity of visible points.

6.4 System Settings

Click on "Configure" and then on "System Settings" to access the function (Figure 6.5). You can set the current time zone, the solution, the unit of measurement, enable/disable voice prompts during stakeout, enable/disable the electronic bubble (or tilt if available), enable/disable the voice function and the Wi-Fi function, set the shortcuts for surveying and for stakeout, enable/disable Google Maps.


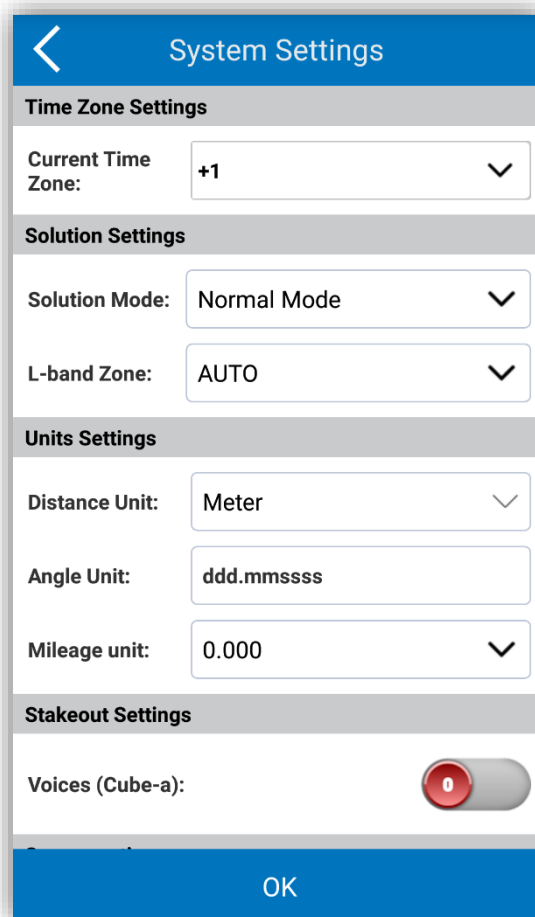


Figure 6.6.5

6.5 Survey Settings

Click on "Configure" and then on "Survey Area Settings" to access the function (Figure 6.6). Click "Add" to set the coordinates of the point or look for coordinates in the point library or use the current GPS coordinates. Generally, the survey area needs at least three points. Points can be chosen, modified or deleted. Click "Import" to import the coordinate files (*.dat, *.txt, *.csv). After the setting, the survey area is visible as a figure with red lines, as shown in Figure 6.7. While surveying, you can check whether the current point is in the survey area.

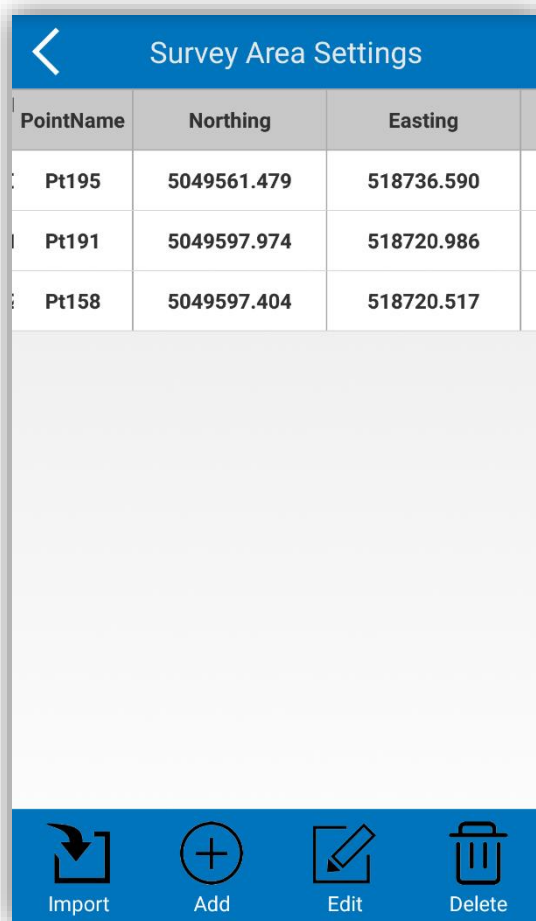

PointName	Northing	Easting
Pt195	5049561.479	518736.590
Pt191	5049597.974	518720.986
Pt158	5049597.404	518720.517

Figure 6.6.6

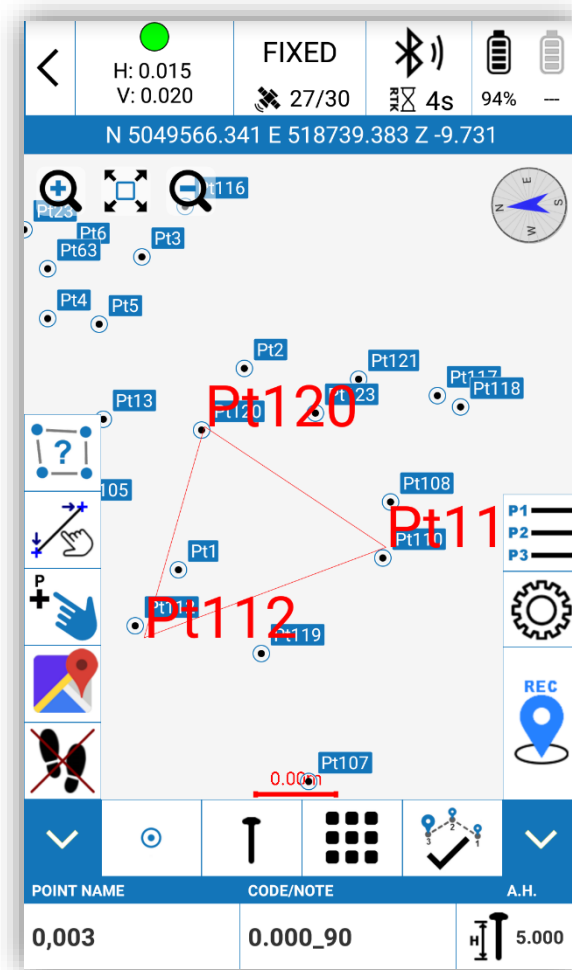


Figure 6.6.7

6.6 Layers Settings

Click on "Configure" and then on "Layers Settings" to access the function. Click "Add" to import a layer. The program supports *.shp files (Esri Shapefile) and *.dxf (AUTOCAD drawing files). Choose the layer and click on "Edit" to modify the layer properties (name, visibility etc.).

6.7 Administration

Click on "Configure" and then on "Administration" to access the function (Figure 6.8). For most of the fields where passwords appear, Cube-a has been provided the ability to set the visibility of these passwords. It is also possible to block access to these settings by entering an admin password (below), in this way clicking on "Administration" again will require entering the password to enter. If this field is left blank, access to this screen will be free.

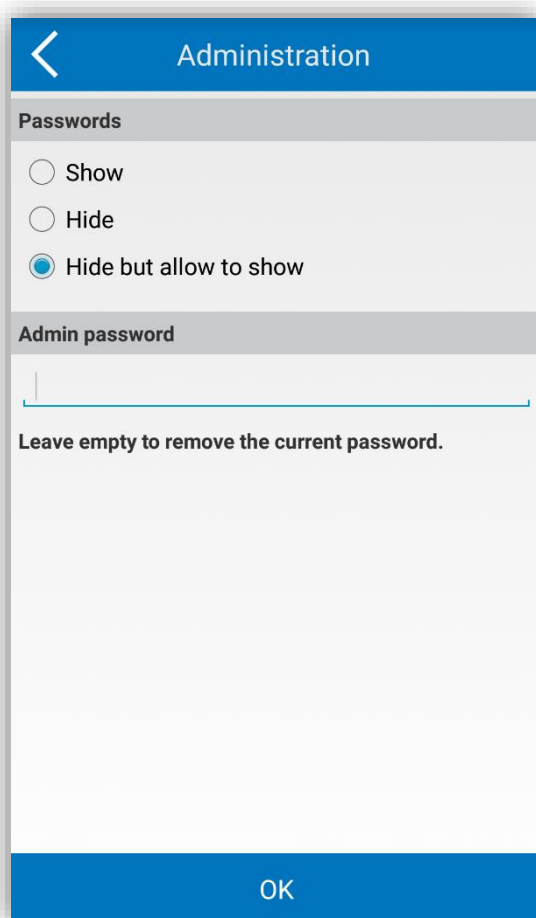


Figure 6.6.8

7 Software introduction - Calibrate

This chapter provides useful information about the calibration function, click "Calibrate" to access the screen in Figure 7.1. The commands available are Site Calibration; Calibrate Point; Calibrate Sensor.

7.1 Site Calibration

In general, the GPS receiver's output data are WGS-84 coordinates, latitude and longitude. The coordinates must be converted into a reference system based on the work to be performed, this requires coordinate conversion parameters that are calculated and set by the software.

There are three methods of coordinate conversion, including "four parameter + elev. correction", "7 parameter + four parameter + elev. correction" and "seven parameters". Users must evaluate which method should be used based on the known point.

4 parameters: At least two control points, must be known. This is the coordinate transformation mode used to perform a conversion between different coordinate systems within the same ellipsoid. The parameters include four values (North translation, East translation, Rotation and Scale), the scale must be very close to 1.

In general, the distribution of control points directly determines the difference in height and the four parameters to be controlled. The use of four parameters for the RTK measurement method can be used in a reduced area (20-30 square kilometers).

Measure a point in grid coordinates and operate in the precision of a control network with height coordinates of known points. The more known points selected the greater the accuracy (2 or more than 2).

Note that in a very large distribution of points (for example ten kilometers) the transformation parameters often do not help, in this case to have an increase of precision both in the grid coordinates and on the height, we should use the 7-parameter transformation.

First, you need to perform a static survey in the area where the control points are, then select a point A as a static reference station (in WGS84) that will be used to correct the point network. Use a receiver in static mode to measure a single fixed point for more than 24 hours

(this step, in the test areas can be performed in less time and in the case of low accuracy required, this step can also be omitted) and then import into the software, as a single point all the data acquired, the average of the readings will be the actual coordinates of point A in WGS84 coordinates. The absolute precision should be below 2 meters, so about the regulation of the 3D control network, it is necessary to assume the point A WGS84 as the control point to calculate the 3D coordinates of other points.

The 4-parameter model, used to perform a 2D adjustment, can be either a barycentric roto-translation (around the average point of the source coordinates, called "Horizontal Adjustment") or a non barycentric roto-translation (around the axes origin, called "Four Parameter").

When the 4-parameter model is used, the vertical correction will be automatically enabled.

The actual vertical correction parameters used depend on the number of points used. If less than 3 points are used, then the heights are adjusted using the average of the corrections about the given 3 points.

If 3 to 6 topographic points are used, then an inclined plane is calculated. If more than 7 points are used, then a paraboloid surface is used.

7 parameters: At least three control points, must be known. This is the coordinate transformation mode used to perform a rectangular transformation of spatial coordinates between different ellipsoids. The parameters include seven values: 3 translations, 3 rotations and the scale factor (ΔX , ΔY , ΔZ , $\Delta\alpha$, $\Delta\beta$, $\Delta\gamma$, scale).

How to calculate the conversion parameters?

Generally, use 3 known points (A, B and C) to calculate the parameters, so first you need to know the coordinates WGS84 and the local coordinates of the 3 known points (A, B and C).

There are 2 methods for obtaining the WGS84 coordinates of points A, B, C. The first method is to set up the static control network and then obtain the WGS84 coordinates from the GPD acquisition of the post-processing software. Second method, the Rover GPS records the original WGS84 coordinates in fixed solution when the correction parameters are not active.

Click "Calibrate" and then "Site Calibration", to see the screen shown in Figure 7.2. The six commands available are: add, edit, delete, options, calculate, import, export, close.

By clicking "Add" you can set the coordinates of the known points. There are 2 methods to set the coordinates of the known points: the first, click on the search button (with the lens

icon) to select a point from the point library, the second is to manually enter the coordinates, name, north, east and height.

Then set the geodesic WGS84 coordinates and click OK to add the first group of coordinates. The coordinates of the other points can be entered with the same procedure. Add coordinates of the known points until you get the number of points needed to calculate the parameters.

Select "Modify" to modify the parameters of the points and the geodesic WGS84 coordinates.

Select "Delete" to delete all data related to a point from the site calibration interface.

Click "Options" to access the screen shown in Figure 7.3. You can select one of the three conversion methods: four parameter + elev. correction, 7 parameter + four parameter + elev. correction and seven parameters.

Click "Import" to import *.COT or *.loc files, (useful extensions to import coordinates).

Click "Export" to export and save coordinates, in a file with the *.COT extension. The coordinates can be used in the future without having to reinsert them.

After entering all the coordinates click "Calculate" to perform the operation and a report will appear containing the calculated GPS parameters. Click on "Return" to return to the previous interface, then click on "Close" to exit the site calibration. Before closing, a message will appear asking if you want to use the calculated parameters for the current project. You can confirm or exit without saving the calculation.

After applying the conversion parameters, the original coordinates in WGS84 present in the point library of the current project will be converted into the coordinate system based on the calculated conversion parameters. To verify that the results are accurate, it is possible to carry out a check by accessing another known point.

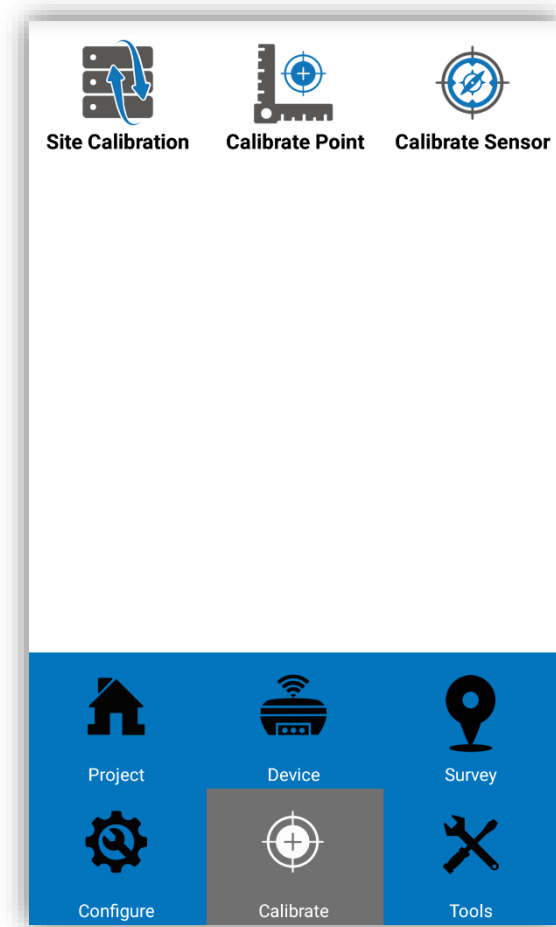


Figure 7.1


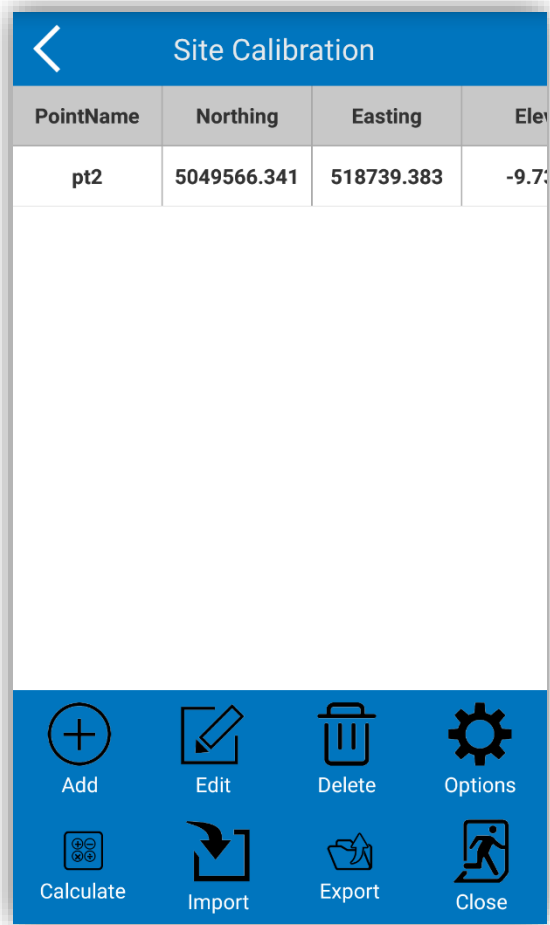


Figure 7.2

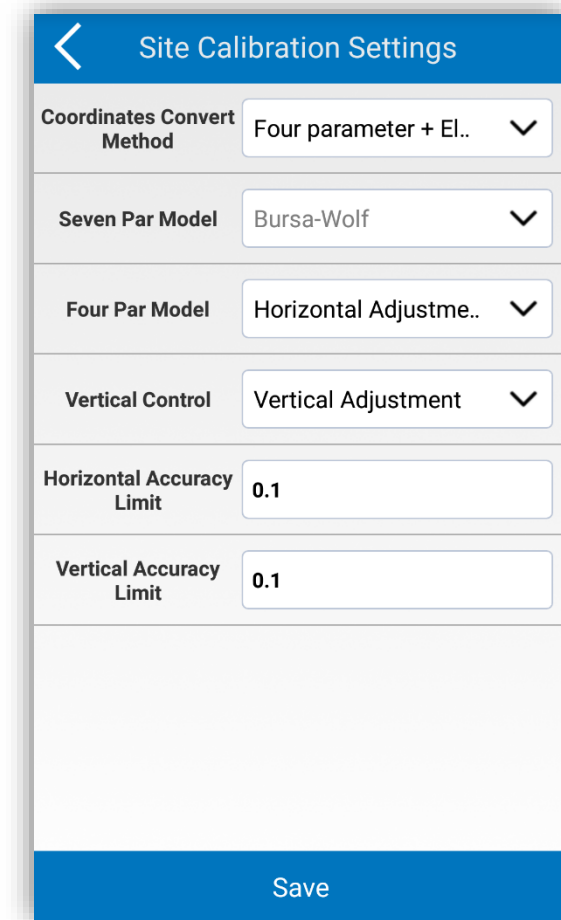

The screenshot shows a mobile application interface for 'Site Calibration Settings'. At the top is a blue header with a back arrow and the title 'Site Calibration Settings'. Below the header are several settings rows, each with a label on the left and a value on the right. The first row is 'Coordinates Convert Method' with the value 'Four parameter + El..' and a dropdown arrow. The second row is 'Seven Par Model' with the value 'Bursa-Wolf' and a dropdown arrow. The third row is 'Four Par Model' with the value 'Horizontal Adjustme..' and a dropdown arrow. The fourth row is 'Vertical Control' with the value 'Vertical Adjustment' and a dropdown arrow. The fifth row is 'Horizontal Accuracy Limit' with the value '0.1' in a text input field. The sixth row is 'Vertical Accuracy Limit' with the value '0.1' in a text input field. At the bottom of the screen is a blue bar with the text 'Save' in white.

Setting	Value
Coordinates Convert Method	Four parameter + El..
Seven Par Model	Bursa-Wolf
Four Par Model	Horizontal Adjustme..
Vertical Control	Vertical Adjustment
Horizontal Accuracy Limit	0.1
Vertical Accuracy Limit	0.1

Figure 7.3

7.2 Calibrate Point

Click "Calibrate" and "Calibrate Point" to access the interface shown in Figure 7.4. The program has two methods to calibrate the station: Base point calibration and marker point calibration.

Calibration on the base point steps:

Select "Base Point Calibration" to access the interface shown in Figure 7.5. Then enter the coordinates of the known point (ie the known coordinates before conversion); they can be inserted from the point library or manually entered. Then click "Current base coordinates" to set the antenna parameters. Proceed to the calculation by pressing "Calculate".

Note: the station calibration should be done in a fixed solution.

Calibration on marker point steps:

Click "Marker Point Calibration" to access the screen shown in Figure 7.6. Then enter the coordinates of the known point and the coordinates in WGS84. Click "OK" to perform the operation and display the result.

Click "View Local Offsets" to see the current deviation (Figure 7.7).

The calibration of a station should be done based on the already calculated transformation parameters.

Here are the cases where you need to perform the station calibration.

If in the start parameters of a base, the option "use current coordinates" is selected, the Rover should calibrate the station if the base has just been restarted or the position has been changed.

When the user knows the conversion parameters of the working area, the base can be calibrated in any position. However, the conversion parameters must be entered, and the Rover will now calibrate the station.

If "input base coordinates" is selected when starting the base and the base has been moved, then the Rover should calibrate the station.

If the entry "input base coordinates" is selected when the base is started and if the base has not been moved, then it should be enough to switch the device back on and there is no need for the Rover to calibrate the station.

The station calibration parameters do not update the coordinates of the current point in the library. When the current coordinates are shown, the calibration parameters of the station will also be shown, the next coordinate measurement will be corrected according to the calibration parameters of the station. The transformation parameters obtained from the calculation of the parameters from the library will update the coordinates of the current point. The WGS84 coordinates of the measured point are converted to local coordinates using conversion parameters.


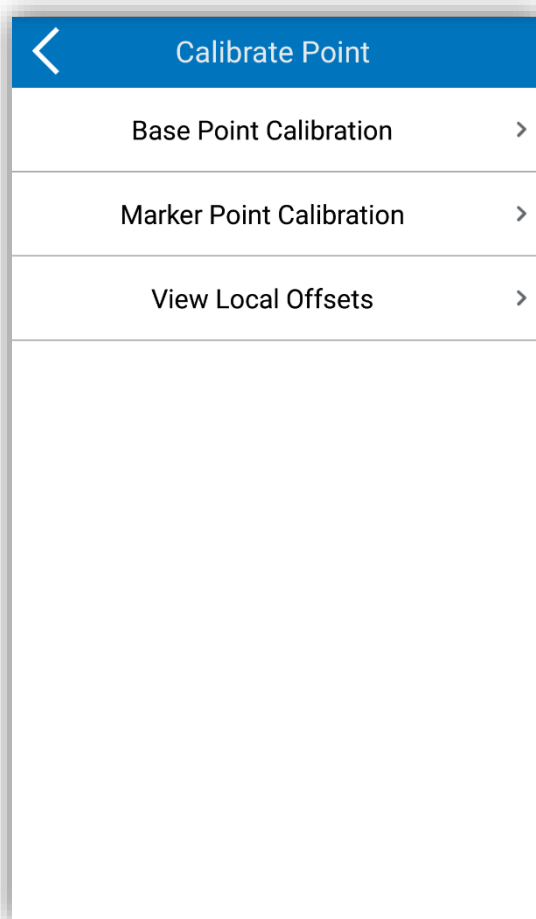


Figure 7.4

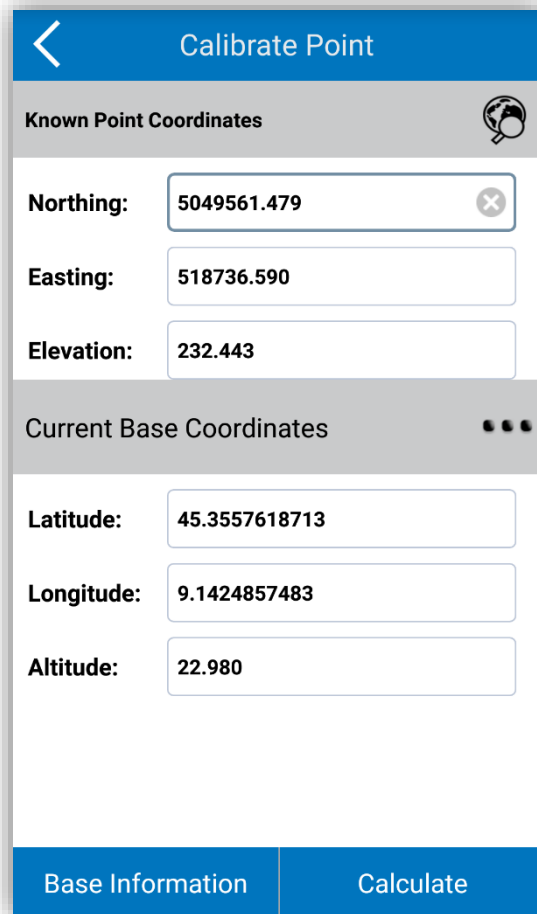

Calibrate Point

Known Point Coordinates

Northing: 5049561.479

Easting: 518736.590

Elevation: 232.443

Current Base Coordinates


Latitude: 45.3557618713


Longitude: 9.1424857483


Altitude: 22.980

Base Information Calculate

Figure 7.5



 Calibrate Point

Known Point Coordinates 

Northing: 

Easting:

Elevation:

Current WGS84 Coordinates  


Latitude:

Longitude:

Altitude:

OK

Figure 7.6

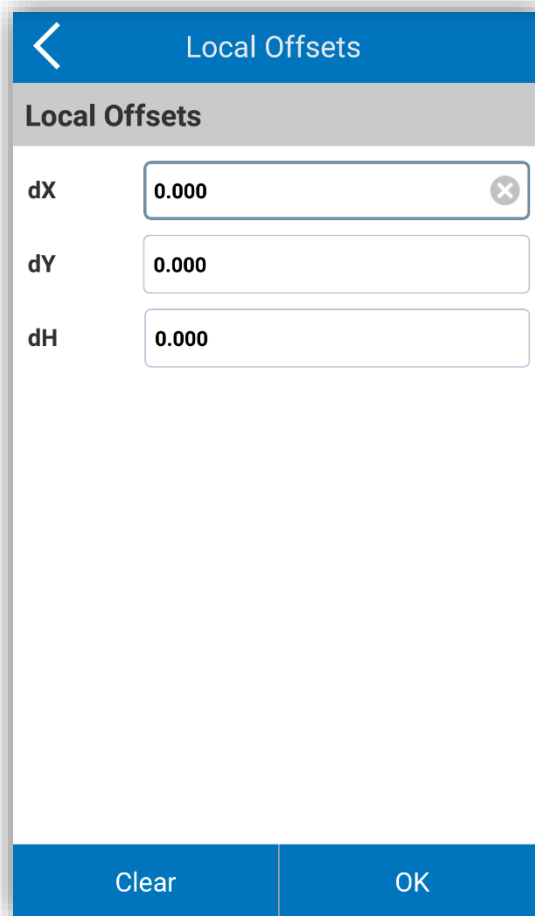

Local Offsets

dX 0.000

dY 0.000

dH 0.000

Clear OK

Figure 7.7

7.3 Calibrate Sensor

Click "Calibrate" and "Calibrate Sensor" to access the screen shown in Figure 7.8. There are four steps to improve sensor calibration and are described below.

1. Enable tilt correction

Click "Configure" from the main menu and "System Settings" and select pole tilt correction in sensor options, then click OK.

2. Bubble-electronic calibration

① Click the first button at the top right of the electronic bubble calibration screen shown in Figure 7.8.

② After centering the bubble on the telescopic pole click "Calibrate". At the same time the electronic bubble in RTK and the bubble on the pole are both centered, so the bubble in the program will turn green (the bubble is red if not centered).

3. Magnetic azimuth calibration

Click the second command at the top (Figure 7.8) to access the screen in Figure 7.9.

① Vertical receiver calibration: Install the holder on the pole (Figure 7.10), the block on the instrument should fit into the groove of the RTK. After installing the support on the pole click "Vertical" and make a circular movement centered in relation to the center of the pole. The rotation speed must not exceed 15°/s. After the telescope has made the circular rotation, the data is recorded, and the receiver will emit a BEEP. The recording of vertical data is shown in Figure 7.11.



Figure 7.8

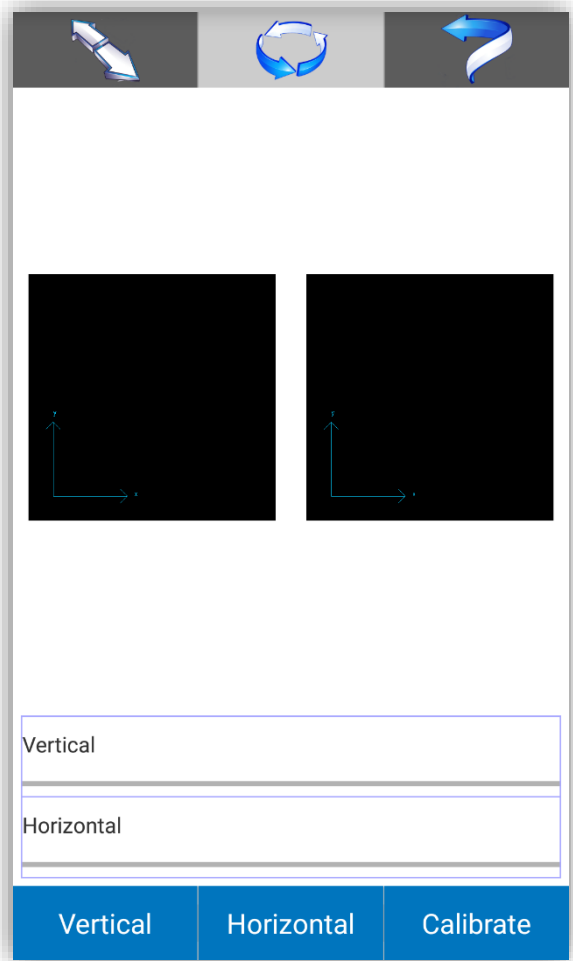


Figure 7.9



Figure 7.10

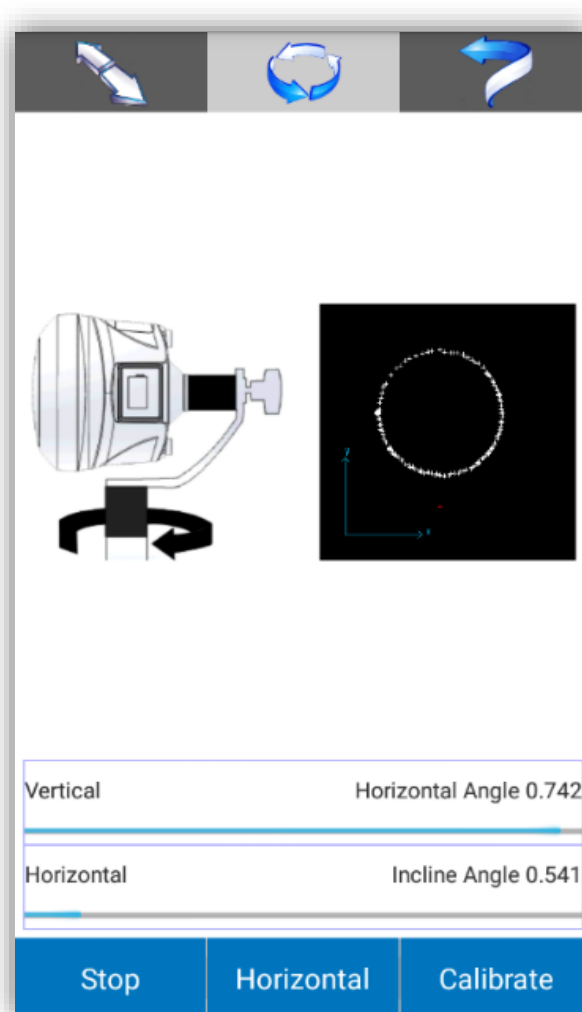


Figure 7.11

② Horizontal receiver calibration: Click "Horizontal" and make a circle with the pole with respect to the center of the same pole, also in this case the speed of the pole should not exceed $15^\circ/s$. After the telescope has made the circular rotation, the data is recorded, and the receiver will emit a BEEP. The recording of horizontal data is shown in Figure 7.12. At the end of the data recording a message will appear to complete the operation as shown in Figure 7.13.

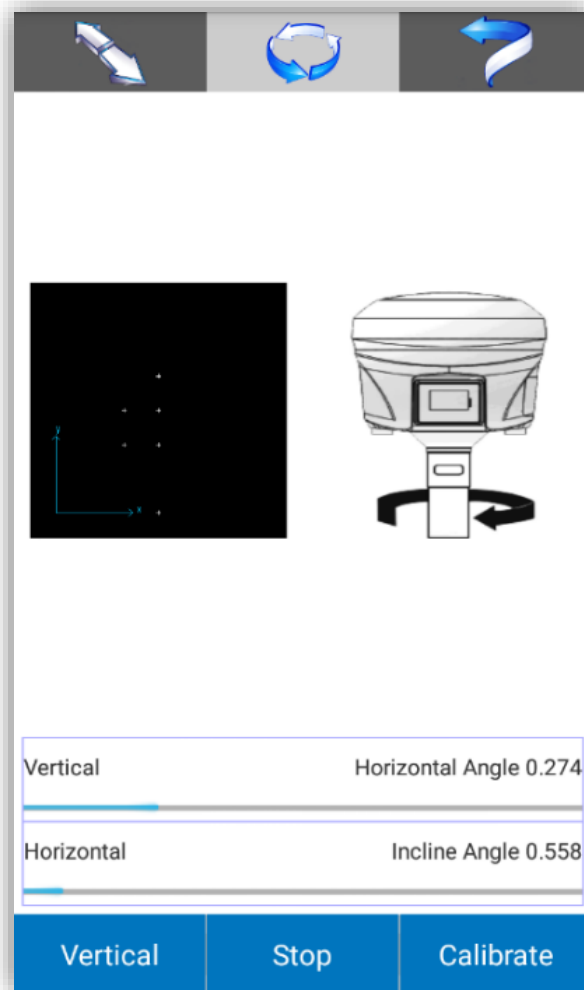


Figure 7.12

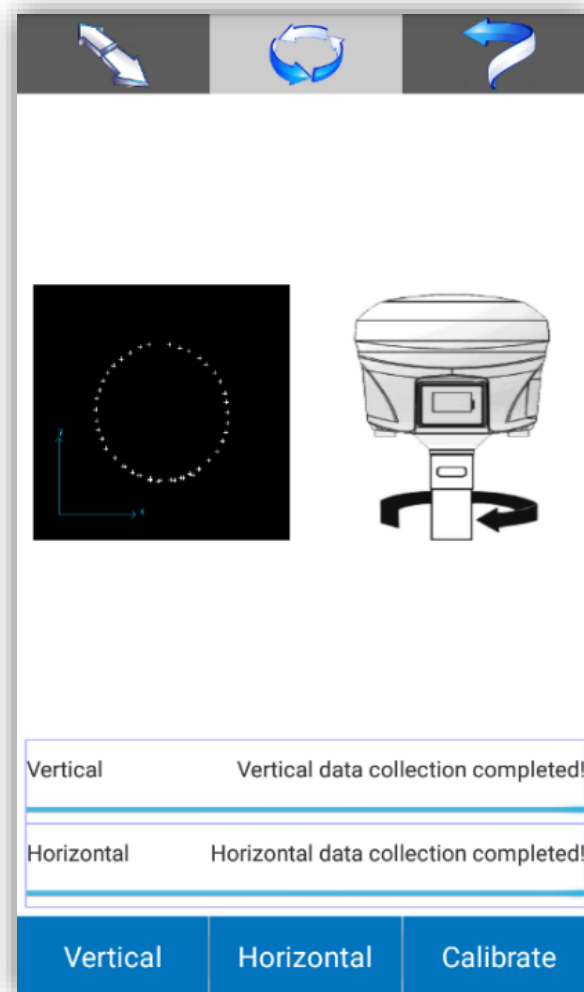


Figure 7.13

Notes:

- A. During the rotation the software will show the real-time status of data recording.
- B. If the data in some points are not recorded (for example due to a too fast rotation) the movement must be repeated.
- C. While acquiring horizontal data, the angle of inclination must be less than 3 degrees.

Calibration parameters: after acquiring the vertical and horizontal data, pressing "Calibrate" will display a message "Calibration done. Save to device?" As shown in Figure 7.14. Click OK to use the saved parameters, and then complete the sensor calibration.

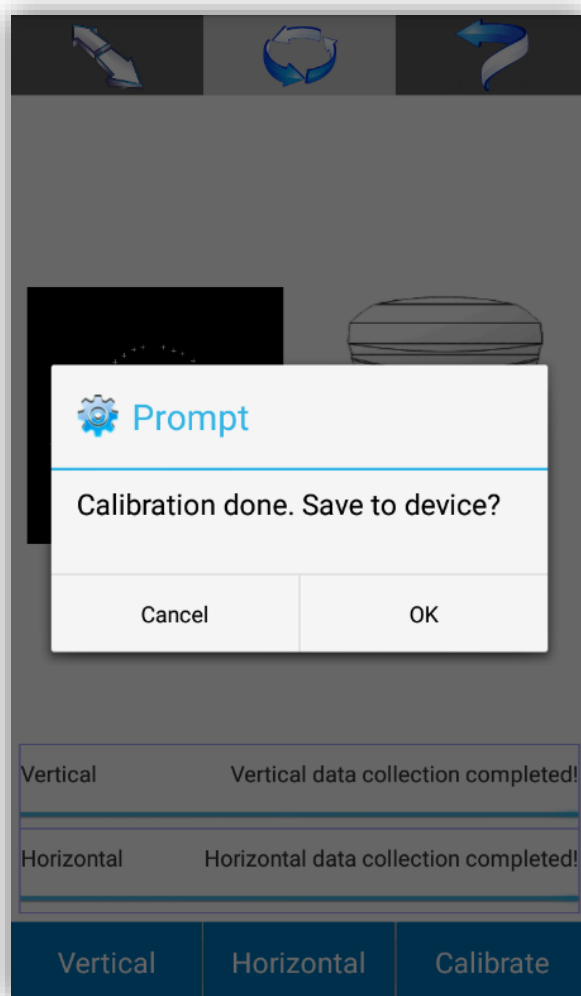


Figure 7.14

4. Calibration of the magnetic declination

Click the third command at the top (Figure 7.8) to access the screen in Figure 7.15.

① **Acquisition of the central point:** click on "Center Point" to acquire the central point, to do this, you must acquire the coordinates of 10 points in static mode.

Acquisition conditions: static status; angle of inclination < 0.3°; fixed solution; acquisition of 10 points.

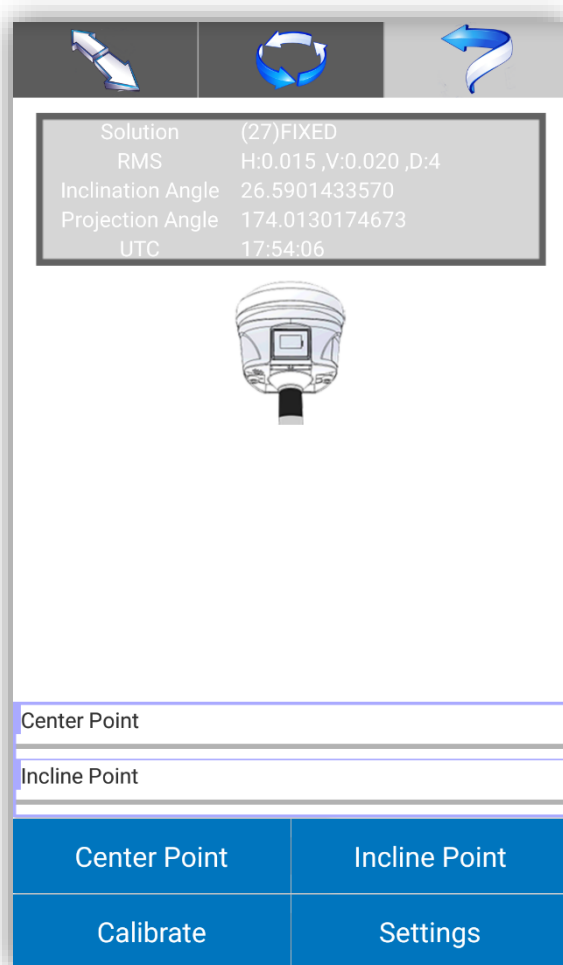


Figure 7.15

② **Acquisition of inclined points:** click on "Incline Point" to acquire inclined points, you must acquire data in the 4 directions (north, south, west, east), you must acquire the coordinates of 10 static points in each direction.

Acquisition conditions: static stauts; angle of inclination of 25° -35°; fixed solution; data acquisition in every direction (north, south, west, east); acquisition of 10 points in each direction.

Notes:

A. When the inclined magnetic calibration is performed, it is recommended to lengthen the pole at least 2 meters.

B. Keep the device as stable as possible during data acquisition.

Acquisition parameters: after acquiring the centered point and the inclined point (Figure 7.16) click "Calibrate" to calculate the calculation parameters of the magnetic declination, a message will appear to set the antenna parameters as in Figure 7.17. After entering and confirming the antenna parameters click OK to complete the sensor calibration.

After sensor calibration, click on "Settings" to view the magnetic inclination. If you already know the values of the magnetic declination in the area in which you are working you do not need to calibrate the sensor, but just enter the parameters of the magnetic declination in "Settings".

Notes: If an error message appears, check that the antenna height is correct. If it is not correct, you can extend the telescopic pole and re-calibrate the sensor.

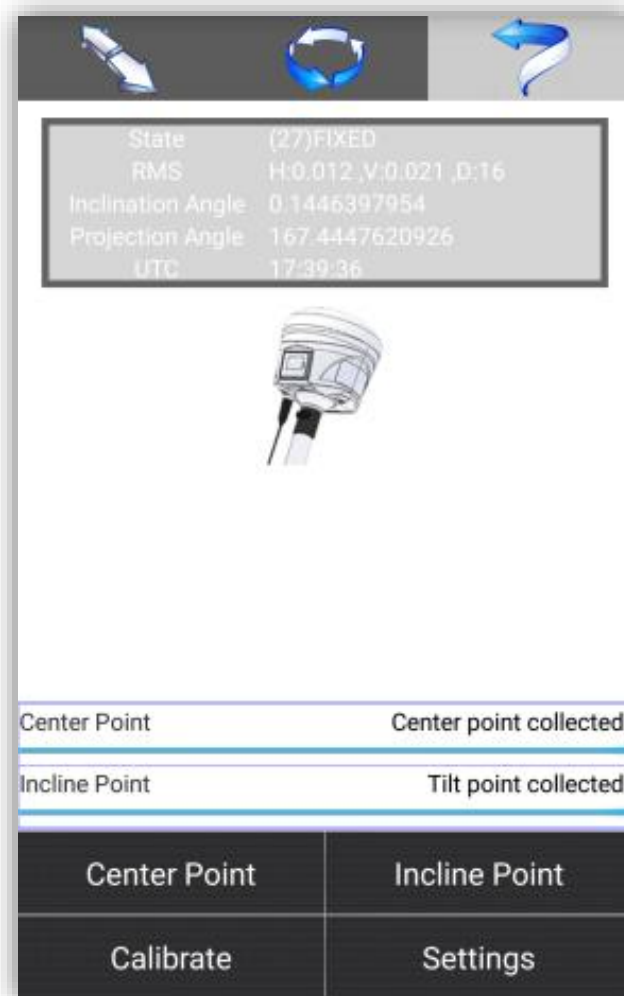


Figure 7.16

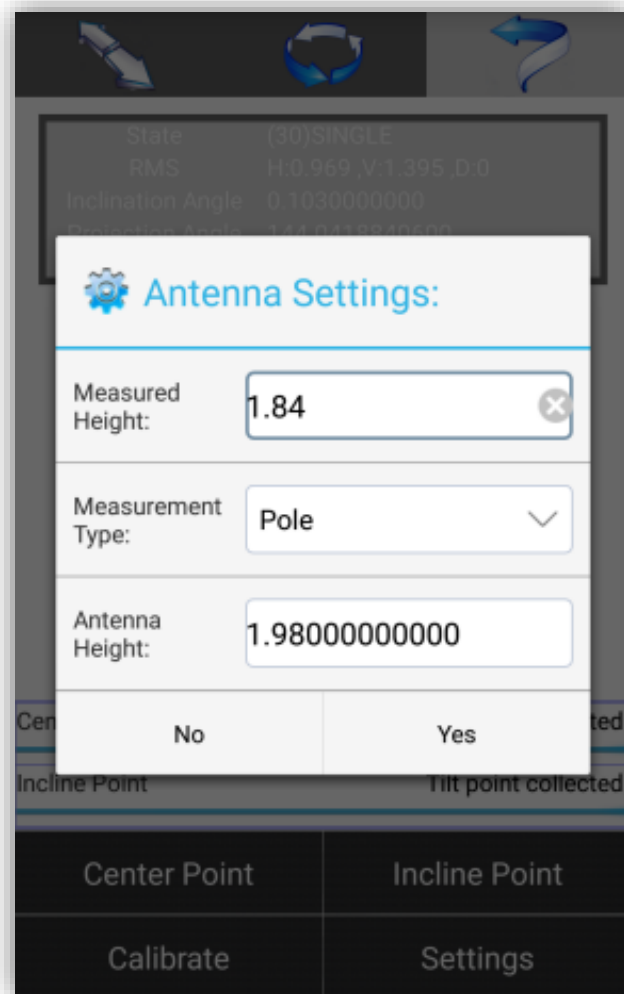


Figure 7.17

8 Software introduction – Tools

Click "Tools" to access the screen in Figure 8.1. The commands available on this screen are: Points Library, Entity List, Coordinates Converter, Angle Converter, Perimeter and area, COGO Calculations, Calculator, Version and Update.

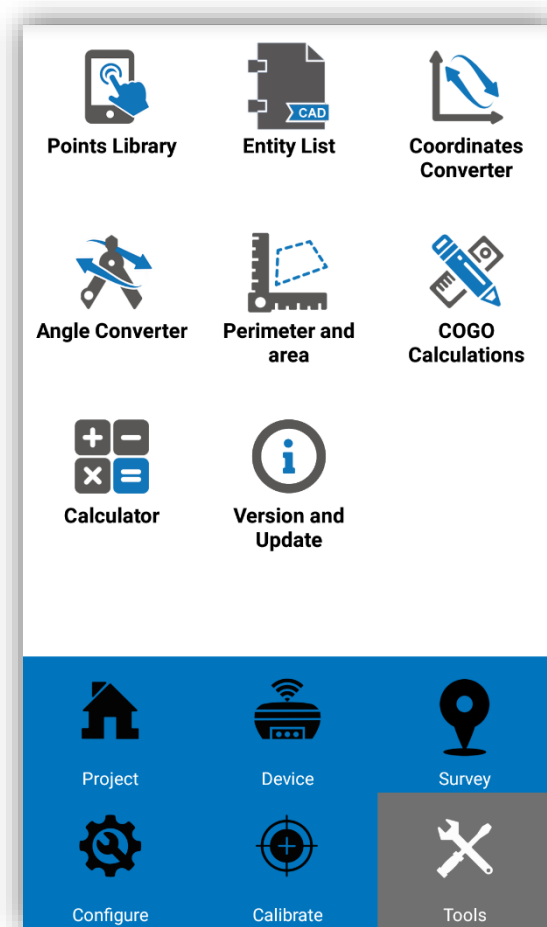


Figure 8.1

8.1 Points Library

The points library is used to manage all points with coordinates (Figure 8.2). A quick point search is supported by entering the point name or code in the search bar at the top. There are eight commands in the points library: Add, Edit, Details, Delete, Confirm (OK), Import, Options and Cancel the action (Close).


Click "Add" to add a new point (Figure 8.3). As a type of coordinates, you can enter local coordinates or geodetic coordinates. As a property of the new point you can select auxiliary point, control point, manual point or stakeout point. Enter the name of a point, the local coordinates (x, y, h) or the latitude/longitude coordinates and the code.

Choose any point in the points library and click "Edit" to change the point name, local coordinates (x, y, h), latitude/longitude or code. Click "Details" to check the name of the point, the code, the latitude/longitude, the local coordinates (x, y, h) and the type of point. Click "Delete" to delete the selected point from the points library.

Click "Import" and choose the coordinate format to be imported. The software supports customizable formats *.csv, *.dat and *.txt.

Click "Options" to filter the points displayed in the library (Figure 8.4). Check the type of points to display.

Points Library

Search: 

No.	PointName	Northing	Easting	Elevat
189	Pt189	099159.451	1543104.489	434.9
188	Pt188	099159.466	1543104.503	434.9
187	Pt187	099159.452	1543104.506	434.9
186	Pt186	099159.457	1543104.491	434.9
185	Pt185	099159.468	1543104.469	434.9
184	Pt184	099159.464	1543104.474	434.8
183	Pt183	099159.461	1543104.471	434.9
182	Pt182	099159.457	1543104.467	434.9
181	Pt181	099159.463	1543104.478	434.9
180	Pt180	099159.442	1543104.492	434.9
179	Pt179	099159.450	1543104.460	434.9









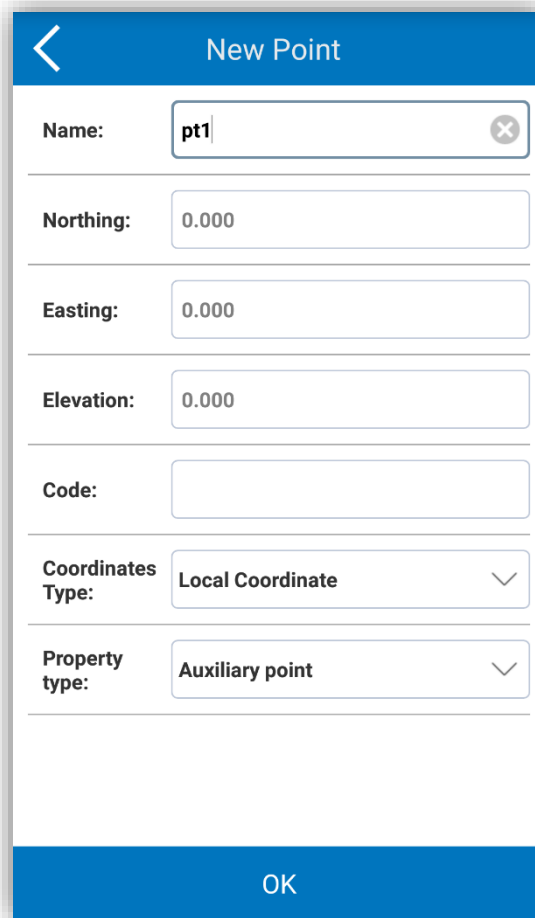
 Add
  Edit
  Details
  Delete
 OK
  Import
  Options
  Close

Figure 8.2



New Point

Name:

Northing:

Easting:

Elevation:

Code:

Coordinates Type:


Property type:

OK

Figure 8.3

8.3 Coordinates Converter

Click "Tools" and "Coordinates Converter" to access the screen as in Figure 8.5. Choose the conversion mode, from WGS84 coordinates to current local coordinates and vice versa, enter the coordinates (manually or by selection from the points library) and press "Calculate" to perform the operation and check the result (Figure 8.6). Click OK to save the coordinates and enter the name of the point to be saved in the points library.

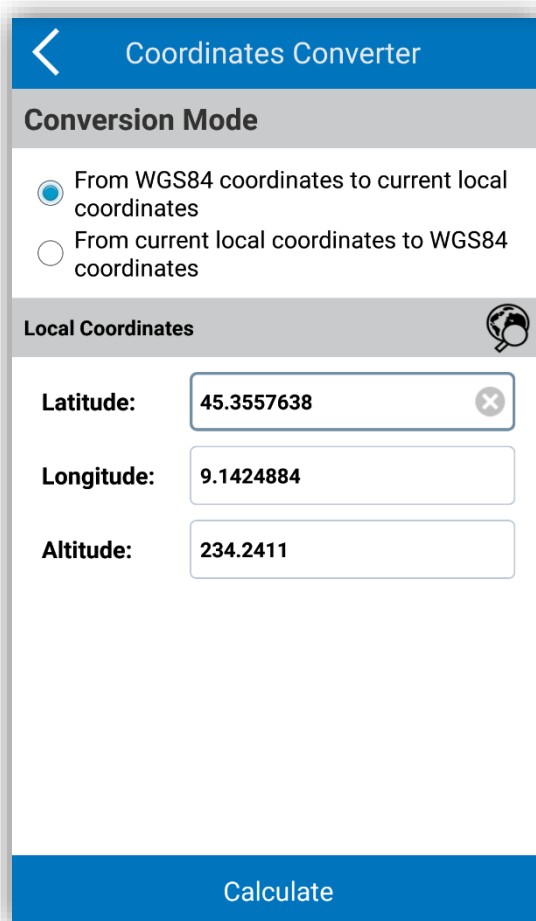

The screenshot shows a mobile application interface titled "Coordinates Converter". At the top, there is a blue header with a back arrow and the title. Below the header, the "Conversion Mode" section contains two radio button options: "From WGS84 coordinates to current local coordinates" (which is selected) and "From current local coordinates to WGS84 coordinates". The "Local Coordinates" section, indicated by a globe icon, contains three input fields: "Latitude" with the value 45.3557638, "Longitude" with the value 9.1424884, and "Altitude" with the value 234.2411. A blue "Calculate" button is located at the bottom of the screen.

Figure 8.5


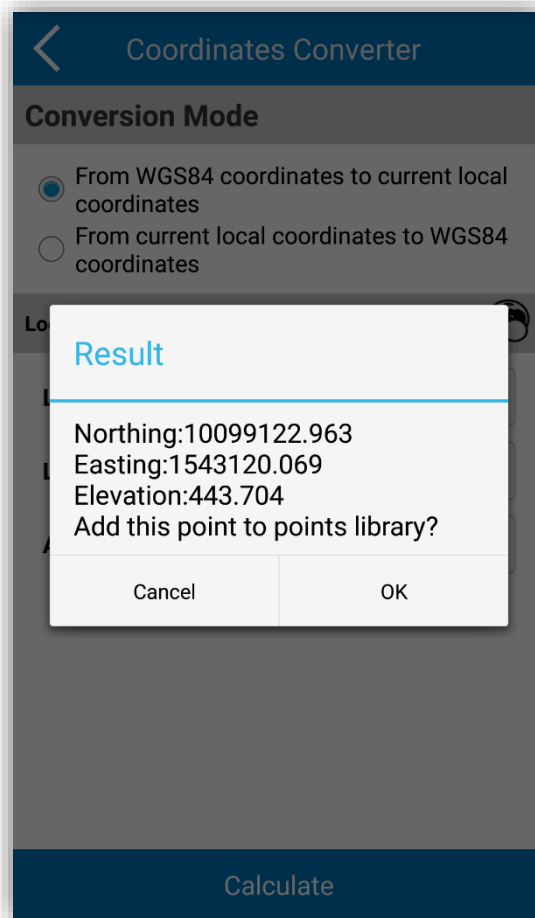


Figure 8.6

8.4 Angles Converter

Click "Tools" and "Angle Converter" to access the screen as in Figure 8.7. As you can see there are six angle formats: dd.mmssss, dd:mm:ss, dd°mm'ss", dd (Decimal), SS and Radin.

You can enter a value in the text box below the formats and then select the desired format.

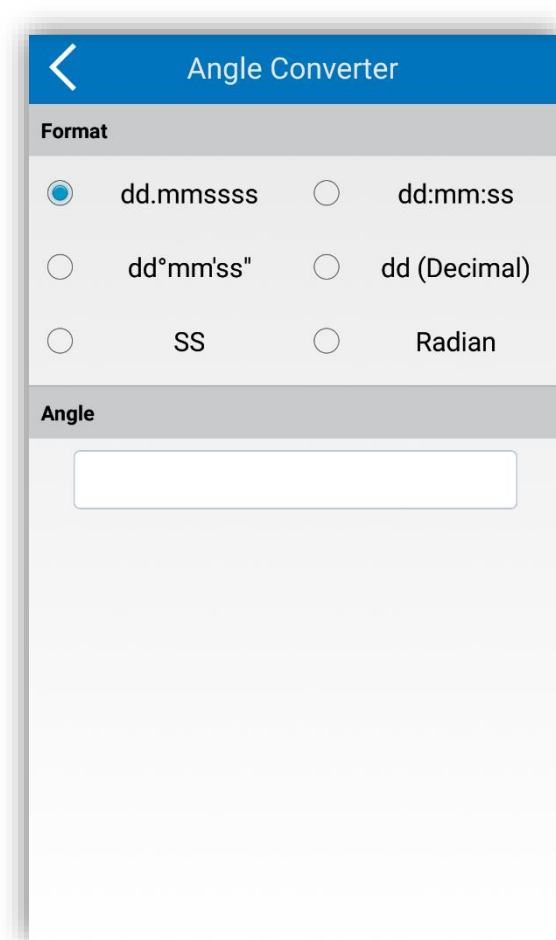

The screenshot shows a mobile application interface for an "Angle Converter". At the top, there is a blue header bar with a white back arrow on the left and the text "Angle Converter" in white. Below the header is a section titled "Format" in a grey bar. Underneath, there are six radio button options arranged in two columns: "dd.mmssss" (selected), "dd:mm:ss", "dd°mm'ss\"", "dd (Decimal)", "SS", and "Radin". Below the "Format" section is another grey bar titled "Angle". Underneath this bar is a white text input field with a thin grey border.

Figure 8.7

8.5 Perimeter and area

Click "Tools" and "Perimeter and area" to access the screen as in Figure 8.8. Click "Add" to set at least 3 coordinates of 3 points and click "Calculate" to execute the command. Points can be edited and deleted. Click "Import" to choose a file with the coordinates to be imported (*.dat or *.txt). Click "Coordinate List" to access a complete list of points, points can be filtered for the point name or code. Click "Calculate" to see the result of calculating the area and the perimeter of the figure created by the selected points.

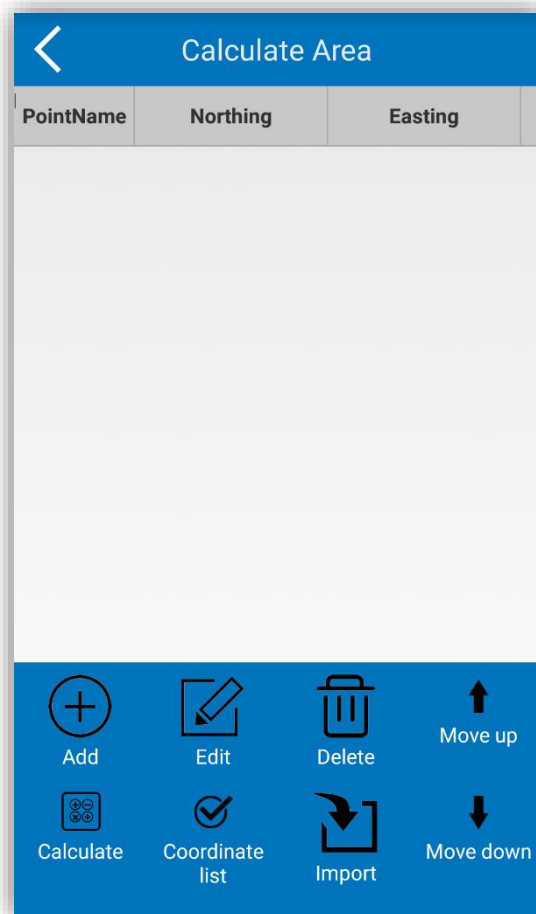


Figure 8.8

8.6 COGO Calculations

Click "Utilities" and "COGO Calculations" to access the screen as in Figure 8.9. There are nine COGO functions available, let's see them in detail below.

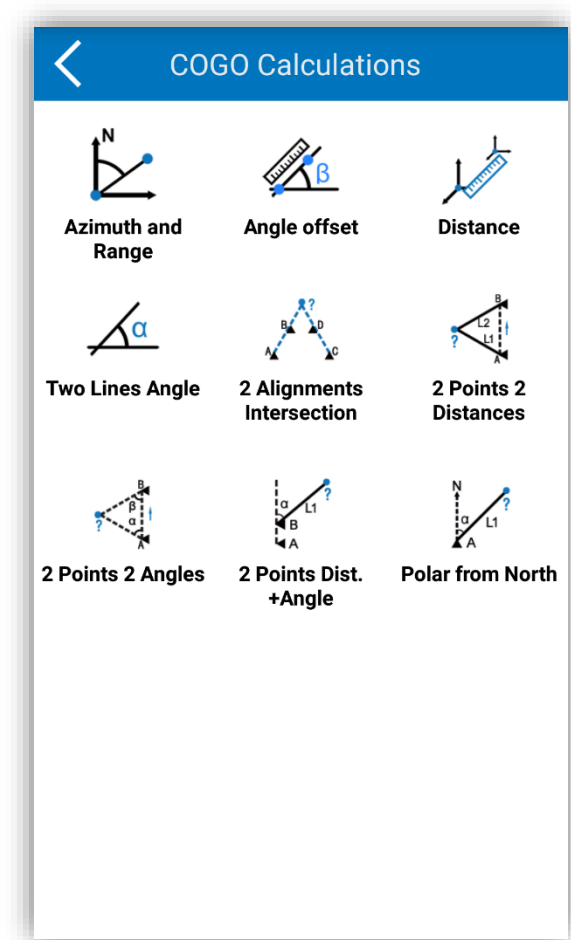


Figure 8.9

8.6.1 Azimuth and Range

By clicking "Azimuth and Range" the screen as in Figure 8.10 will show. Enter the coordinates of the start and end point (The points can be entered in 3 ways: to select points from the point library, to input from the current GPS coordinates or to enter manually) then press "Calculate" to obtain the planimetric distance, azimuth, elevation difference, the slope ratio and the 3D distance.


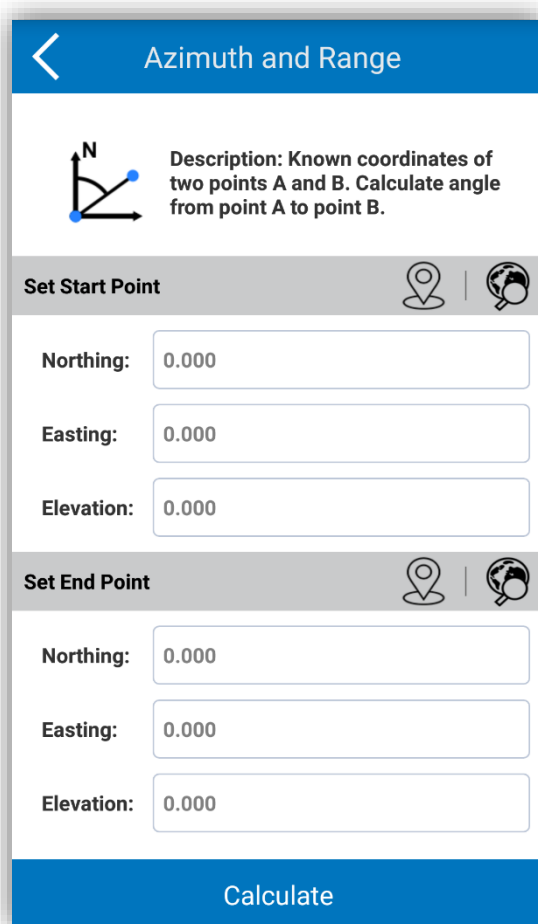



Figure 8.10

8.6.2 Angle offset

 Clicking "Angle offset" opens the screen as in Figure 8.11. Enter the coordinates of the start point, end point and reference end point (The points can be entered in 3 ways: to select points from the point library, to input from the current GPS coordinates or to enter manually) then click "Calculate" to obtain the start distance, end distance, start vertical distance, end vertical distance, offset distance and offset angle.



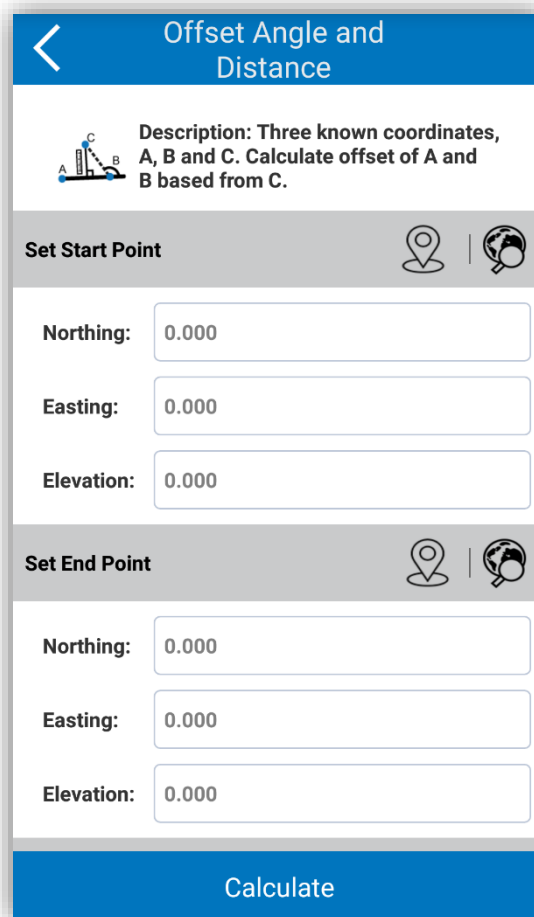

← Offset Angle and Distance



Description: Three known coordinates, A, B and C. Calculate offset of A and B based from C.

Set Start Point



 | 

Northing:

Easting:

Elevation:

Set End Point

 | 

Northing:

Easting:

Elevation:

Calculate

Figure 8.11

8.6.3 Distance

By clicking "Distance", the screen as in Figure 8.12 will show. Enter the coordinates latitude, longitude and elevation of the start and end point (The coordinates can be entered in 3 ways: to select points from the point library, to input from the current GPS coordinates or to enter manually) and press "Calculate" to perform the operation obtaining the distance in 3D.


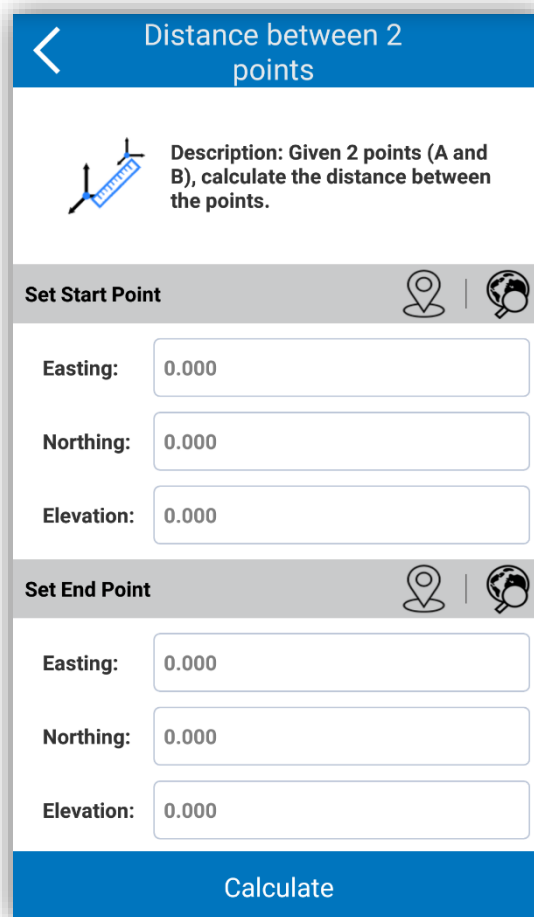


Figure 8.12

8.6.4 Two Lines Angle

Clicking "Two Lines Angle" the screen as in Figure 8.13 will show. Enter the coordinates of points A, B, C, D (North, East, Elevation - Points can be entered in 3 ways: to select points from the point library, to input from the current GPS coordinates or to enter manually) and click "Calculate" to execute the operation.

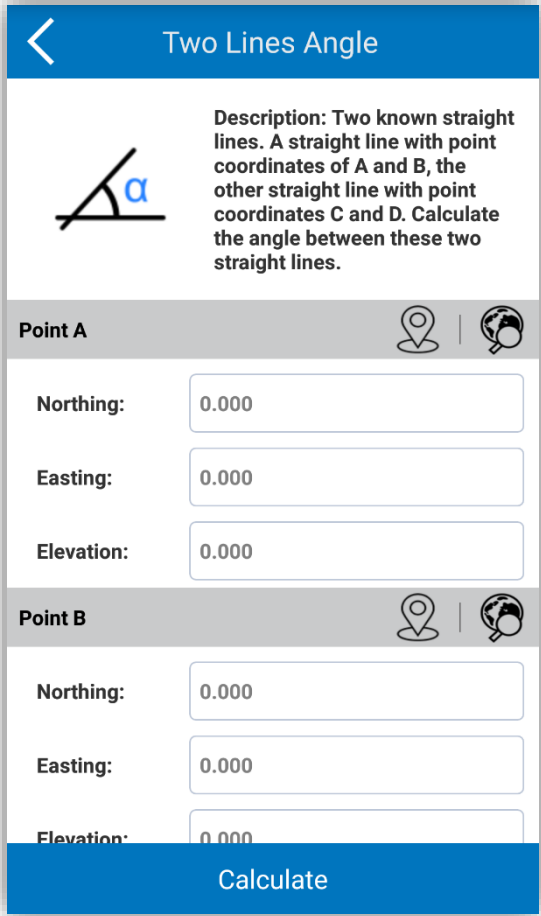

Two Lines Angle

Description: Two known straight lines. A straight line with point coordinates of A and B, the other straight line with point coordinates C and D. Calculate the angle between these two straight lines.

Point A

Northing: 0.000

Easting: 0.000

Elevation: 0.000

Point B

Northing: 0.000

Easting: 0.000


Elevation: 0.000

Calculate


Figure 8.13

8.6.5 2 Alignments Intersection

By clicking "2 Alignments Intersection", you access the screen as in Figure 8.14. Enter the coordinates North, East and elevation of the 4 points A, B, C and D (Points can be entered in 3 ways: to select points from the point library, to input from the current GPS coordinates or to enter manually). Then click "Calculate" to perform the operation. Once the coordinates of the unknown point have been calculated, it can be saved in the point library.

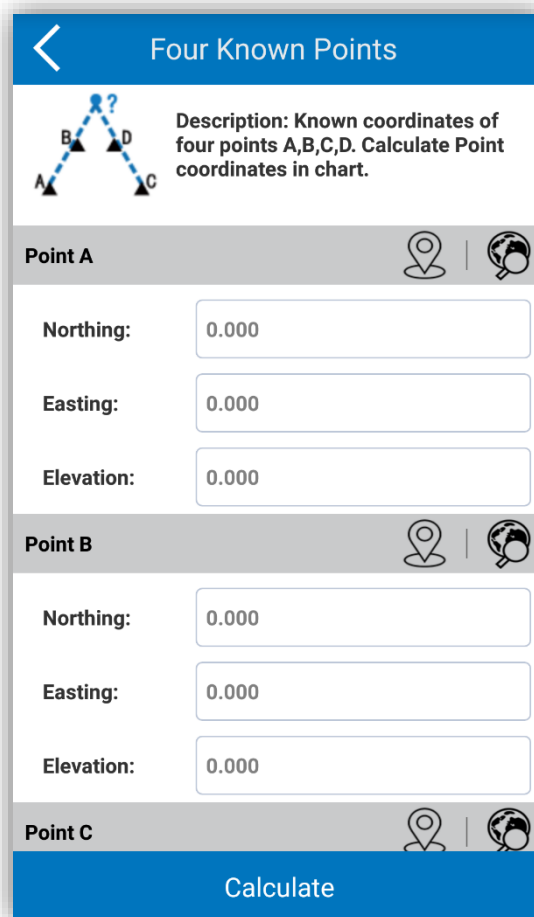

<
Four Known Points



Description: Known coordinates of four points A,B,C,D. Calculate Point coordinates in chart.

Point A 📍 | 🌐

Northing:

Easting:

Elevation:

Point B 📍 | 🌐

Northing:

Easting:

Elevation:

Point C 📍 | 🌐

Calculate

Figure 8.14

8.6.6 2 Points 2 Distances

By clicking "2 Points 2 Distances" you access the screen as in Figure 8.15. Set the name of the new point, enter the distances L1 and L2 (the distances can also be calculated using a disto connected to Bluetooth) and the coordinates of points A and B (Points can be entered in 3 ways: to select points from the point library, to input from the current GPS coordinates or to enter manually) then click "Calculate" to get the coordinates of the unknown point. Once the coordinates of the unknown point have been calculated, it can be saved in the point library.


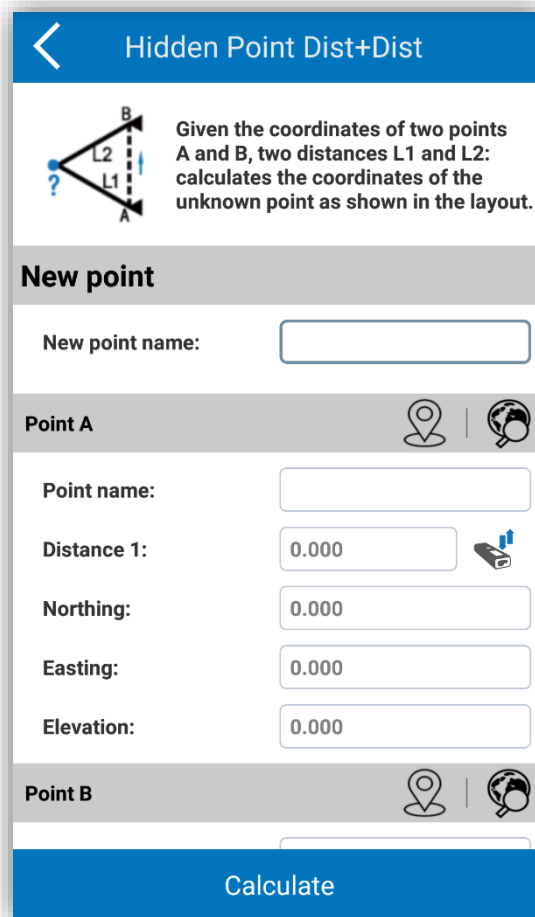



Figure 8.15

8.6.7 2 Points 2 Angles

By clicking "2 Points 2 Angles" you access the screen as in Figure 8.16. Enter the value of the angles α and β , and the coordinates of points A and B (Points can be entered in 3 ways: to select points from the point library, to input from the current GPS coordinates or to enter manually) then click "Calculate" to obtain the coordinates of the unknown point. Once the coordinates of the unknown point have been calculated, it can be saved in the point library.



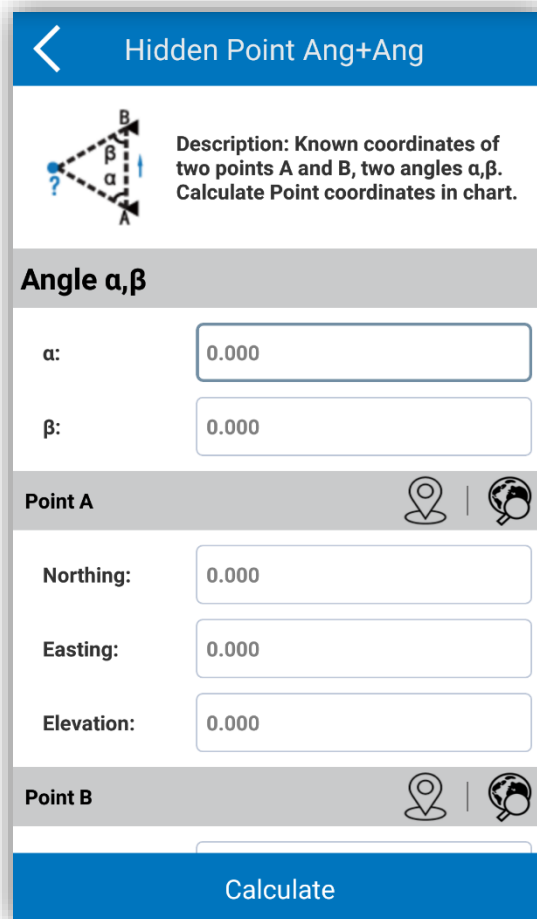

Hidden Point Ang+Ang

 Description: Known coordinates of two points A and B, two angles α, β . Calculate Point coordinates in chart.

Angle α, β

α :



β :

Point A  

Northing:

Easting:

Elevation:


Point B  

Calculate


Figure 8.16

8.6.8 2 points Distance and Angle

By clicking "2 Points Dist. + angle" you access the screen as in Figure 8.17. Enter the known values of the coordinates of the two points A and B (Points can be entered in 3 ways: to select points from the point library, to input from the current GPS coordinates or to enter manually), the length of L1 and the angle α . Then click "Calculate" to perform the operation and obtain the value of the coordinates of the unknown point. Once the coordinates of the unknown point have been calculated, it can be saved in the point library.

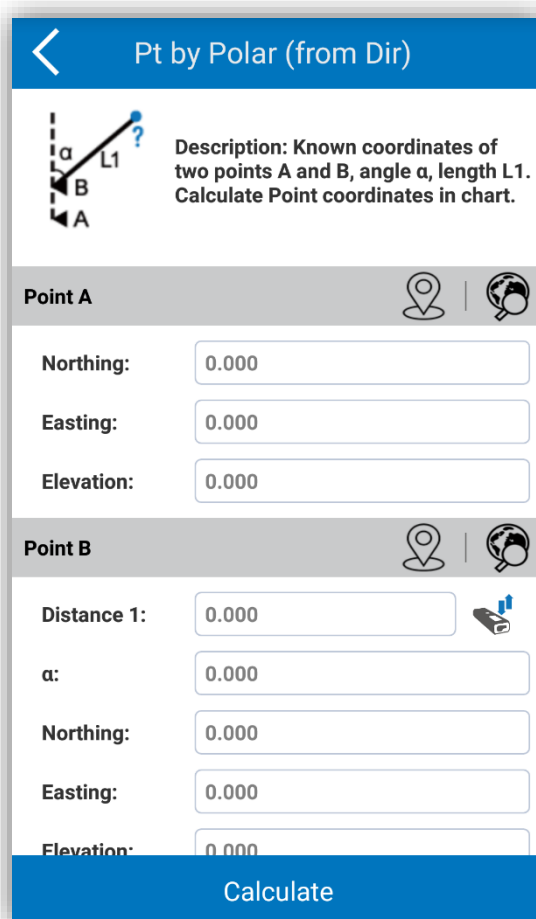


Pt by Polar (from Dir)


 Description: Known coordinates of two points A and B, angle α , length L1. Calculate Point coordinates in chart.

Point A

Northing:
 Easting:
 Elevation:

Point B

Distance 1: 
 α :
 Northing:
 Easting:
 Elevation:

Calculate

Figure 8.17

8.6.9 Polar from North

By clicking "Polar from North" you access the screen as in Figure 8.18. Set the coordinate values of point A (Points can be entered in 3 ways: to select points from the point library, to input from the current GPS coordinates or to enter manually), angle α and distance length value L1, then click " Calculate "to perform the requested operation. Once the coordinates of the unknown point have been calculated, it can be saved in the point library.

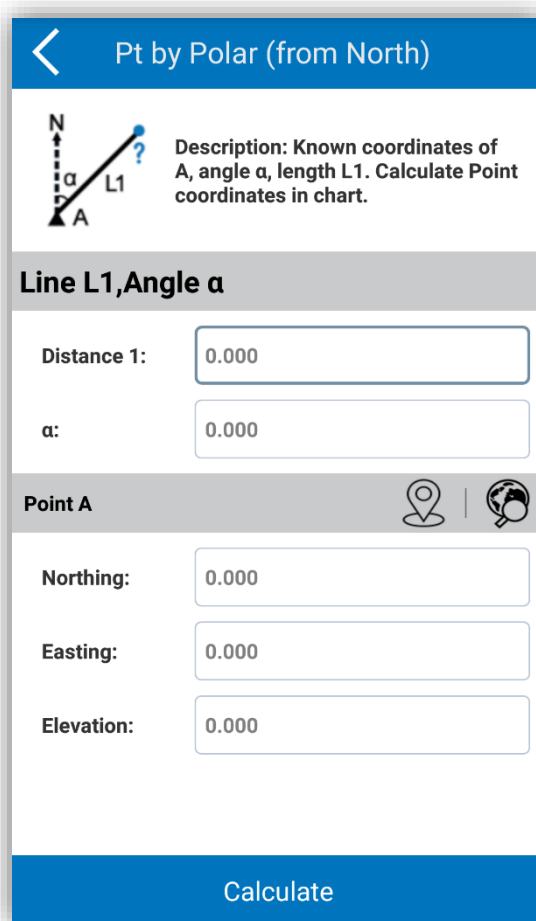


Figure 8.18

8.7 Calculator

This feature directly opens the calculator within the device system, which is useful for performing calculations.

8.8 Version and Update

Click on "Tools" and then on "Version and Update" to view the version of the installed software and check if an updated version of the software is available (Figure 8.19).

To check if an updated version of the software is available, click "Check for updates". If an update is available, you will be asked to download it (you can always choose to cancel the download and postpone the update).

If when starting the program your device is connected to the Internet, the program will inform you (using Text to Speech) of the availability of an update. This may prevent you from opening the Version and Update page only to see if any updates are available.

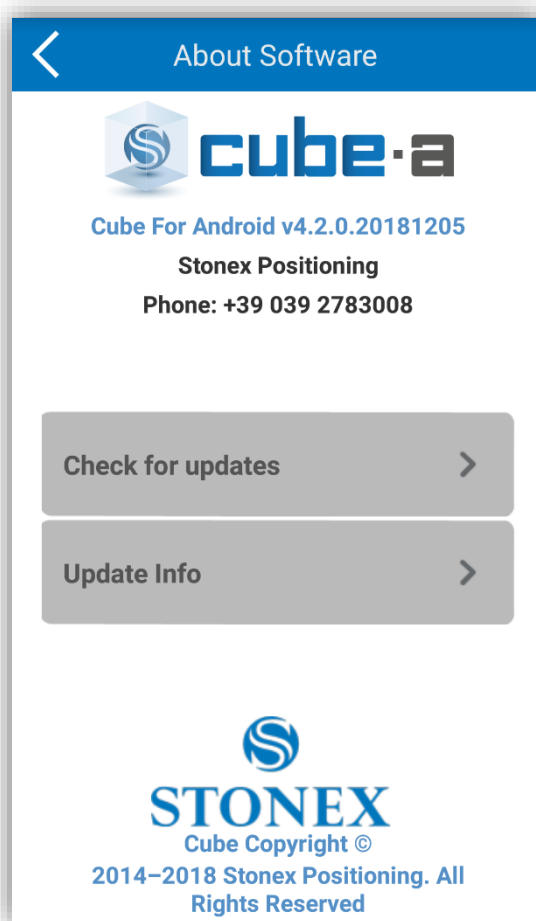


Figure 8.19



STONEX® SRL

Via Cimabue, 39 - 20851 Lissone (MB)

Tel: +390392783008 ; +390392785575 | Fax : +390392789576

www.stonex.it | info@stonex.it